


Important! Read these instructions before use!

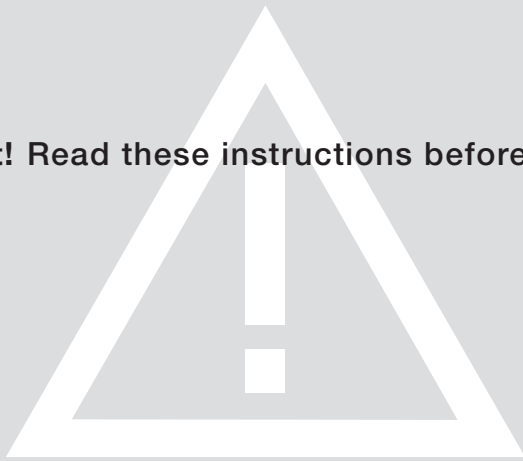

Safety regulations
oven/microwave oven

Pictograms used



Important information



Electricity



Gaz



Tips

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!***Safe use***



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never let children play with this device.
- Children are not to be allowed near the device unsupervised.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.



- **WARNING:** Accessible parts may become hot during use. Young children shall be kept away.
- This appliance is only designed for household use. Use it only for food preparation.
- This appliance is intended to be used in household and similar applications such as:
 - ▷ staff kitchen areas in shops, offices and other working environments;
 - ▷ by clients in hotels, motels and other residential type environments;
 - ▷ farm houses;
 - ▷ bedand breakfast type environments
- Keep the cable away from hot surfaces.
- Never open the casing of the appliance.
- Never cover the ventilation openings.
- The device is not to be positioned nor used outdoors.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not use steam cleaners or high pressure cleaners to clean the appliance as this may result in an electric shock.



- **WARNING:** never heat sealed tins. Pressure develops in the tin which can make it explode.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- In preparing meals containing alcohol, high temperatures may cause the alcohol to evaporate. The vapour can catch fire if it comes into contact with hot parts.
- Do not use the appliance for storing flammable materials or materials that warp easily.
- Ensure that food is always heated thoroughly. The time required for this depends on many factors including the quantity and type of food. Any bacteria present in the food are only destroyed if the food is heated at a temperature higher than 70 °C for more than 10 minutes. Allow the food to cook for longer if you are not sure if the food has been heated through.
- Do not use any abrasive cleaners or metal scrapers to clean the glass door. This will scratch the surface which may cause the glass to break.
- The gaps between the windows of the door are for ventilation and cooling of the windows during use. This prevents the windows from getting too hot on the outside. Moisture/condensation or dirt can get between the windows through these openings. Tips on cleaning can be found on our website.
- Use oven gloves or a pot-holder to remove dishes and accessories from the appliance.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Only use the temperature probe recommended for this oven (for appliances having a facility to use a temperature-sensing probe).
- Remove all excess spillage and utensils before cleaning with pyrolytic self cleaning function.
- If, for cleaning, the controls have to be set to a position higher than for normal cooking purposes (pyrolytic), the surfaces may get hotter than usual and children should be kept away.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.



- **WARNING:** If the (glass) control panel is cracked, switch off the appliance to avoid the possibility of electric shock.
- **WARNING:** Unattended cooking with fat or oil can be dangerous and may result in fire.
- **NEVER** try to extinguish a fire with water, but switch off the appliance and keep the door closed.
- **WARNING:** Danger of fire: do not store items in the oven.
- Steam cleaner is not to be used.
- The lamp in this household appliance is only suitable for illumination of this appliance. The lamp is not suitable for household room illumination.
- **WARNING:** Before replacing the light bulb, make sure the appliance has been disconnected from the power mains, in order to prevent the hazard of an electric shock.
- Do not use steam cleaners or high pressure cleaners to clean the appliance as this may result in an electric shock.
- Before activating the automatic cleaning process, remove the grid, the spit roasting kit, glass baking trays, meat probe, and any other cookware that is not a part of oven equipment.
- During the automatic cleaning process, the oven gets very hot from the outside. Risk of burns! Keep children away from the oven

Children



- Children should be supervised to ensure they do not play with the appliance. Do not allow children to clean or maintain the appliance unless supervised.
- Do not store anything of interest to children in cabinets above or behind the appliance.

Safe use of microwave/combi-microwave



- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- **WARNING:** if the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- **WARNING:** the contents of baby's bottles and jars of baby food should be shaken and stirred. Check the temperature prior to consumption to prevent scalding.
- **WARNING:** do not try to use the microwave with the door open. Microwave radiation can be dangerous.
- Only use the appliance inside the home.
- Do not use the appliance in damp areas or near taps.
- The microwave is insulated. Nevertheless, heat transfer always occurs, with the outer casing of the appliance heating up. This heating up falls well within the norm.
- Only use utensils that are suitable for use in microwave ovens (take care with gold or silver-coloured edging).
- Place a plastic spoon in a cup if you want to boil a liquid (for example water). It is possible for a liquid to boil without bubbling. As soon as you take the cup out of the microwave, the liquid can suddenly start to boil furiously and spit out of the cup, which may scald you.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
The control panel is only to be connected to the heating units specified in order to avoid a possible hazard.
The appliance must be operated with any cabinet door open

OVEN/MICROWAVE

- A microwave is only safe if the door closes properly! Never place an object between the door of the microwave and ensure that the door and the door seal are always clean.
- Only use the microwave for defrosting, preparing and heating food and not, for example, for drying clothes or paper. These can catch fire or lead to the risk of injury.
- Self-combustion is possible if you heat small quantities of dry or powdery products in the microwave (such as when drying herbs). Switch off and disconnect the appliance if something in the microwave catches fire or if smoke is observed (take the plug out of the plug socket/switch off the automatic fuse(s) or set the switch in the fuse box to zero). Keep the door closed to smother any flames.
- Never switch the microwave on if it is empty as this may damage the microwave.
- Remove metal strips from plastic bags and use bowls and dishes that are microwave safe.
- Always first check on the packaging how food should be placed in the microwave. In general, liquids or foodstuffs in air-tight packaging may only be heated after pricking a few holes in the packaging. This is because pressure builds up during heating.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Never heat longer than necessary, and remember that food continues to cook after it is removed from heat.
- Prick the skin of meat, chicken or fish with a fork or other pointed object. This prevents spitting.
- The microwave should be cleaned regularly and all food remains should be removed. Remnants of crumbs and moisture absorb microwaves and increase cooking time. Food remnants can also damage the interior which may result in hazardous situations.
- Metallic containers for food and beverages are not allowed during microwave cooking.



A microwave is not suitable for:

- preserving foods;
- cooking eggs in the shell or warming up hard-boiled eggs, as they shatter through pressure build-up even after microwave heating has ended.
- heating of frying oil.

Safe use of oven/steam oven

- Keep children at a safe distance from the oven during baking or roasting. The oven becomes hot during use. Do not touch the elements and the interior until the oven has cooled completely.
- The outside of the oven may become hot if it is used for a long period of time at high temperatures. If the oven is used at the maximum temperature for a long time (when grilling, for example), the glass panel in the oven door may become hot. Please be careful if children are around.

- The oven is fully insulated. Despite this, there is always some transfer of heat, as a result of which the outside of the oven heats up. This heating up falls well within the norm.
- The oven has a fan that cools the oven casing. The fan may run for some time after the oven is switched off.
- Make sure the appliance is turned off before replacing the bulb to avoid risk of electric shock.
- Do not place accessories on the open oven door.
- Close the oven door during cooking.
- Open the oven door carefully; hot steam will escape.
- Do not store flammable materials in the oven.
- Frozen products such as pizzas should be cooked on the grid shelf. If the baking tray is used, it may become deformed due to the large differences in temperature.
- Never cover the bottom of the oven with aluminium foil. The foil blocks heat flow, which may result in inferior cooking results. This can also damage the enamel of the bottom of the oven.
- Smaller quantities require a shorter cooking time. When the cooking times given in recipes are used, you might burn them.
- Never pour cold water on the hot oven floor. This can damage the enamel.
- Fruit juices can result in stains on the oven floor that are difficult to remove. When cooking moist pastries (such as apple pie), use a baking tin/griddle/roasting tin as a drip tray.
- Spilled food containing sugar or fruit juices, such as prune juice or rhubarb, can damage the colour of the enamel. It is advisable to clean the oven immediately after it has cooled down. Note: the water in the steam oven insert pan is still hot!
- Heat and steam resistant baking tins should be used in the steam oven. Silicone baking tins are not suitable when combining hot air circulation and steam.
- Do not use baking tins that have areas of rust. Even tiny patches can lead to rust in the oven interior.

Installation



- Check the appliance for transport damage. Do not connect a damaged appliance.
- This appliance should only be connected by a registered installer!
- Faulty parts may only be replaced by original parts. The manufacturer can only guarantee that original parts meet safety requirements.
- To avoid dangerous situations, a damaged connecting cable should only be replaced by the manufacturer, the manufacturer's service organisation or suitably qualified persons.
- The electrical connection must comply with national and local regulations.
- The wall plug socket and plug should always be accessible.
- When connecting to fixed wiring a means for an all pole disconnection with at least 3mm contact separation must be incorporated in the fixed wiring in accordance with the wiring rules. This appliance should only be installed by qualified persons.
- The equipment should not be connected to the network via a multi-plug socket or extension lead, as the safe use of the equipment can then not be guaranteed.



- **WARNING:** Never open the appliance casing. The casing may only be opened by a service technician.
- Disconnect the appliance from the mains supply before starting any repair work.
- Freestanding micro wave ovens shall not be placed in a cabinet.
- The oven shall not be installed behind a decorative door to avoid overheating.
- Do not connect the appliance to power supply if an ELCB (earth-leakage circuit breaker) is installed in the power supply circuit.



If the safety instructions and warnings are not followed, the manufacturer cannot be held responsible for any resulting damage.



If you decide to discontinue using the appliance because of a fault, we recommend you cut off the cable after removing the plug from the plug socket. Take the appliance to your municipality's waste disposal site.



558692

un (10-22)