

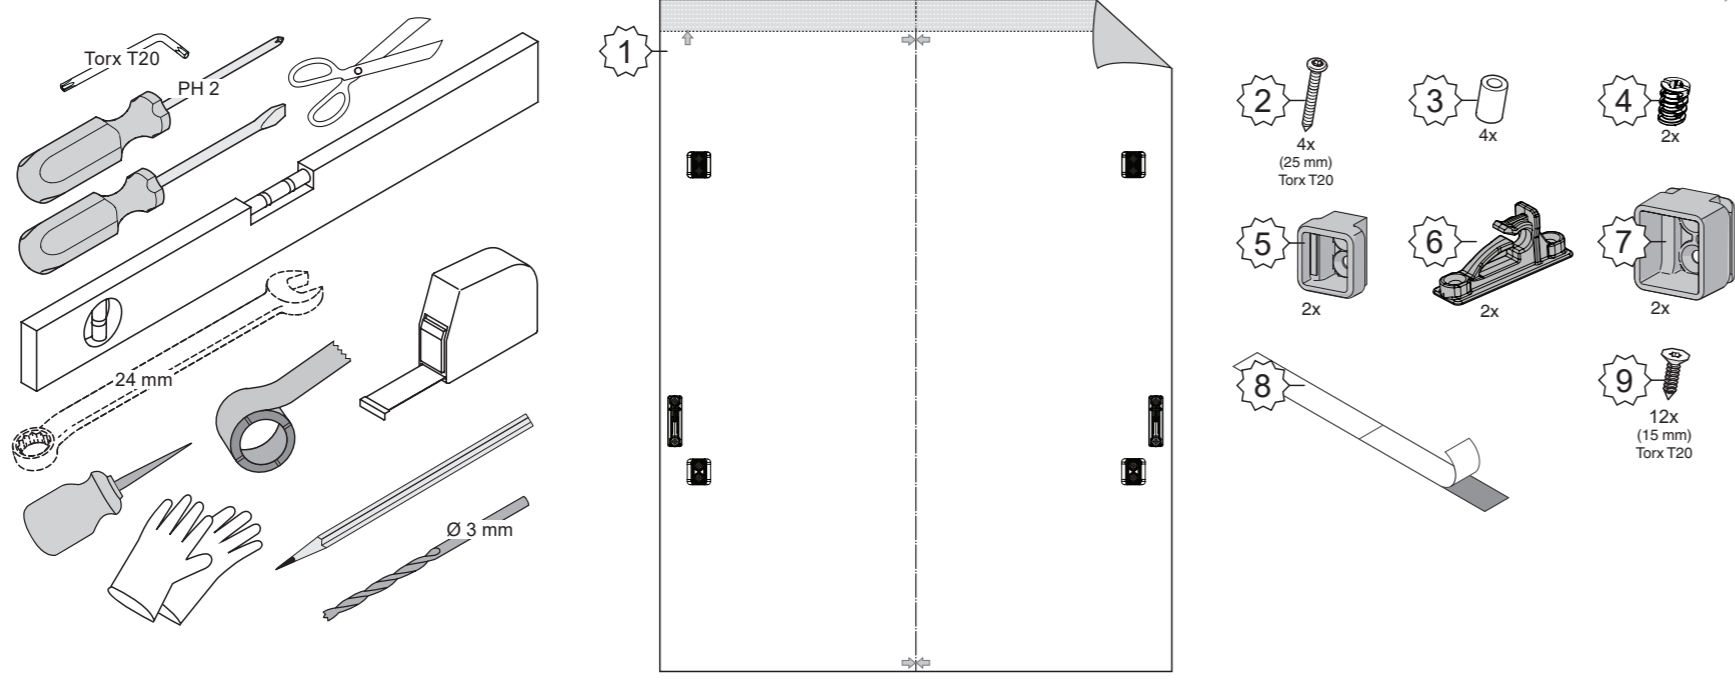
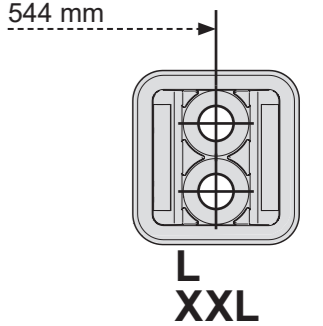


X mm

X mm














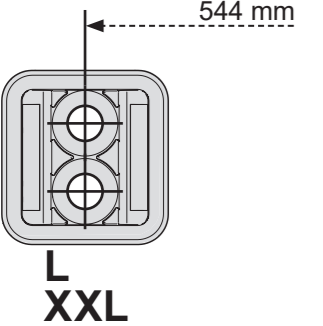


888206-03

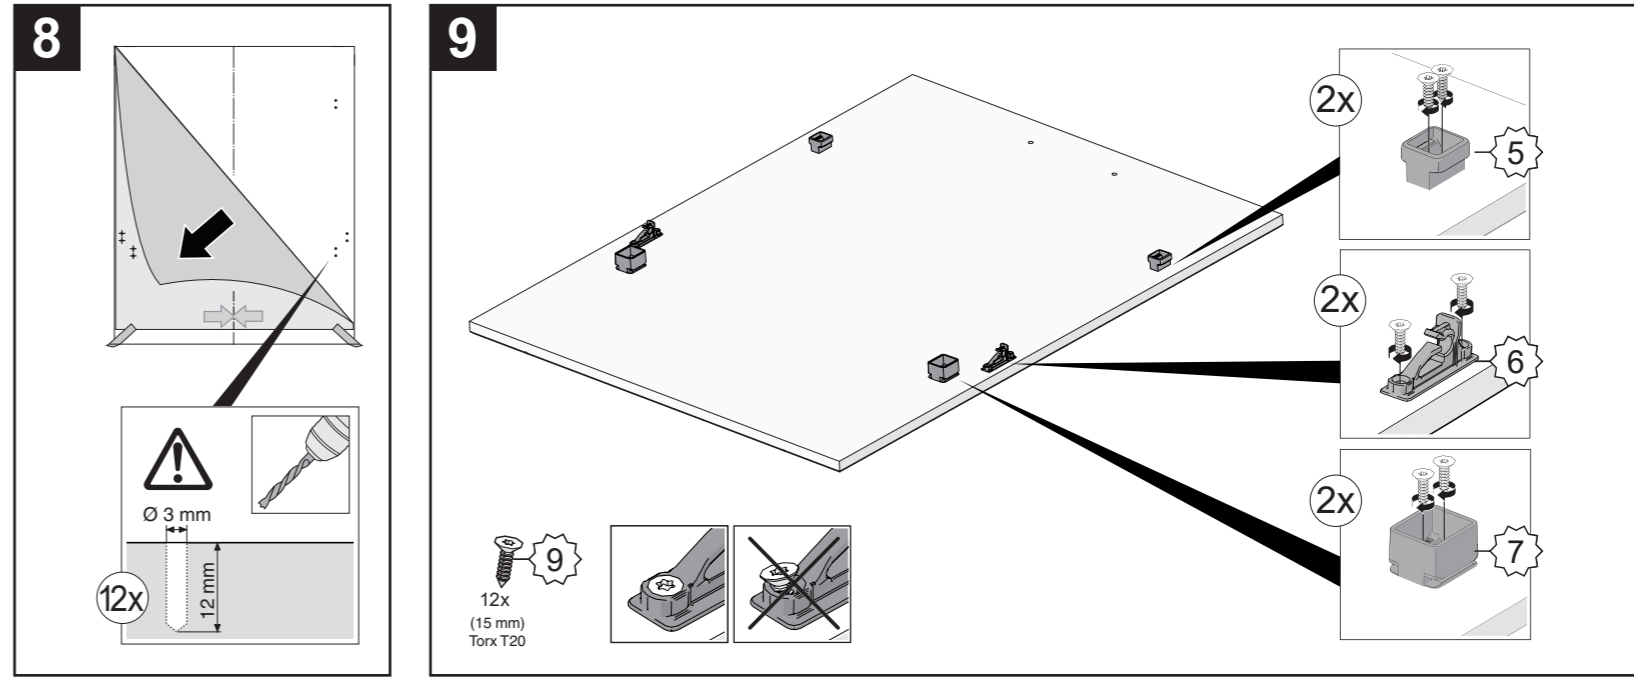

*** EN Only certain models. If the following parts is not received with your dishwasher, they are not intended for your specific model type.**

AR	في موديلات معينة.	LT	Tik tam tikri modeliai.
BG	Само определени модели.	LV	Vienīgi noteiktiem modeļiem.
CS	Pouze některé modely.	NL	Alleen bepaalde modellen.
DA	Kun visse modeller.	NO	Bare enkelte modeller.
DE	Nur bei bestimmten Modellen.	PL	Dotyczy tylko wybranych modeli.
ES	Sólo se aplica a determinados modelos.	RO	Numai la anumite modele.
ET	Ainult teatud mudelitel.	RU	Только в некоторых моделях.
FA	فقط بعضی از مدل ها.	SK	Iba niektoré modely.
FI	Vain tietyt mallit.	SL	Samo nekateri modeli.
FR	Uniquement pour certains modèles.	SQ	Vetëm disa modele të caktuara.
HR	Samo na nekim modelima.	SR	Samo neki modeli.
HU	Csak bizonyos modellek esetében.	SV	Endast vissa modeller.
IT	Solo per alcuni modelli.	UK	Тільки в деяких моделях.
KK	Тек биринчи бип модельдер.	CN	僅限部分型號。

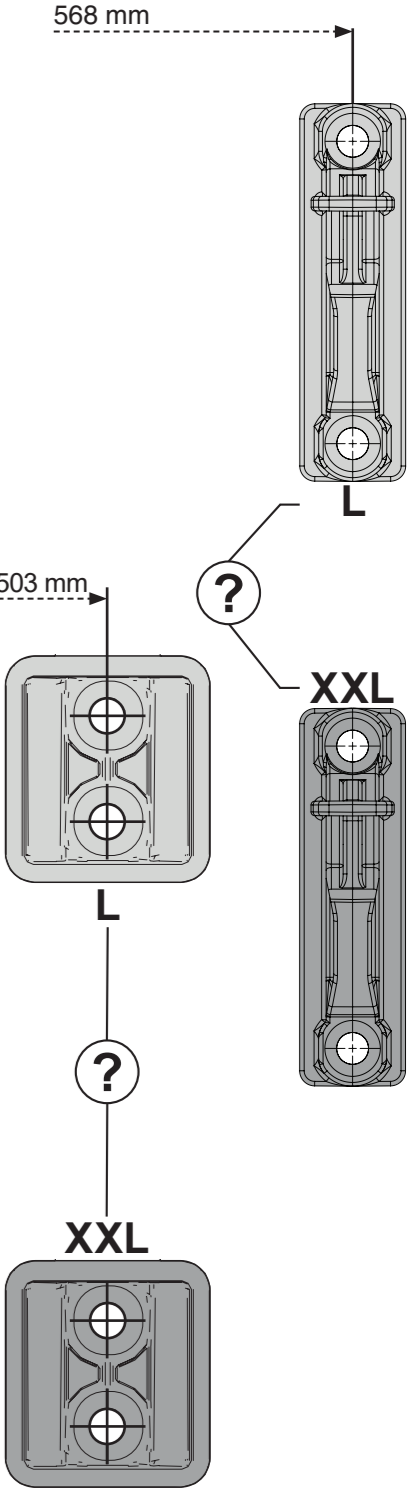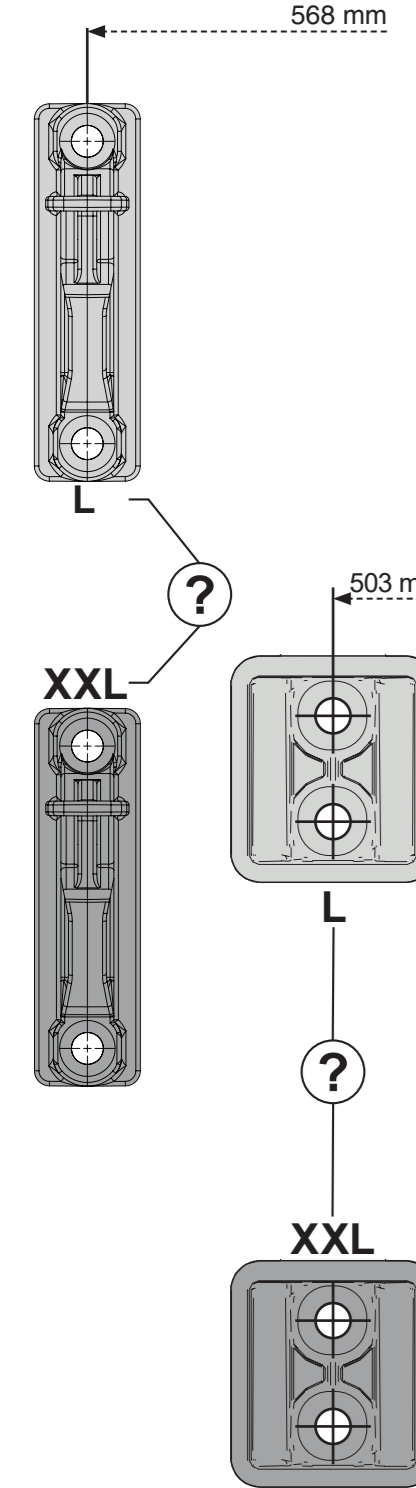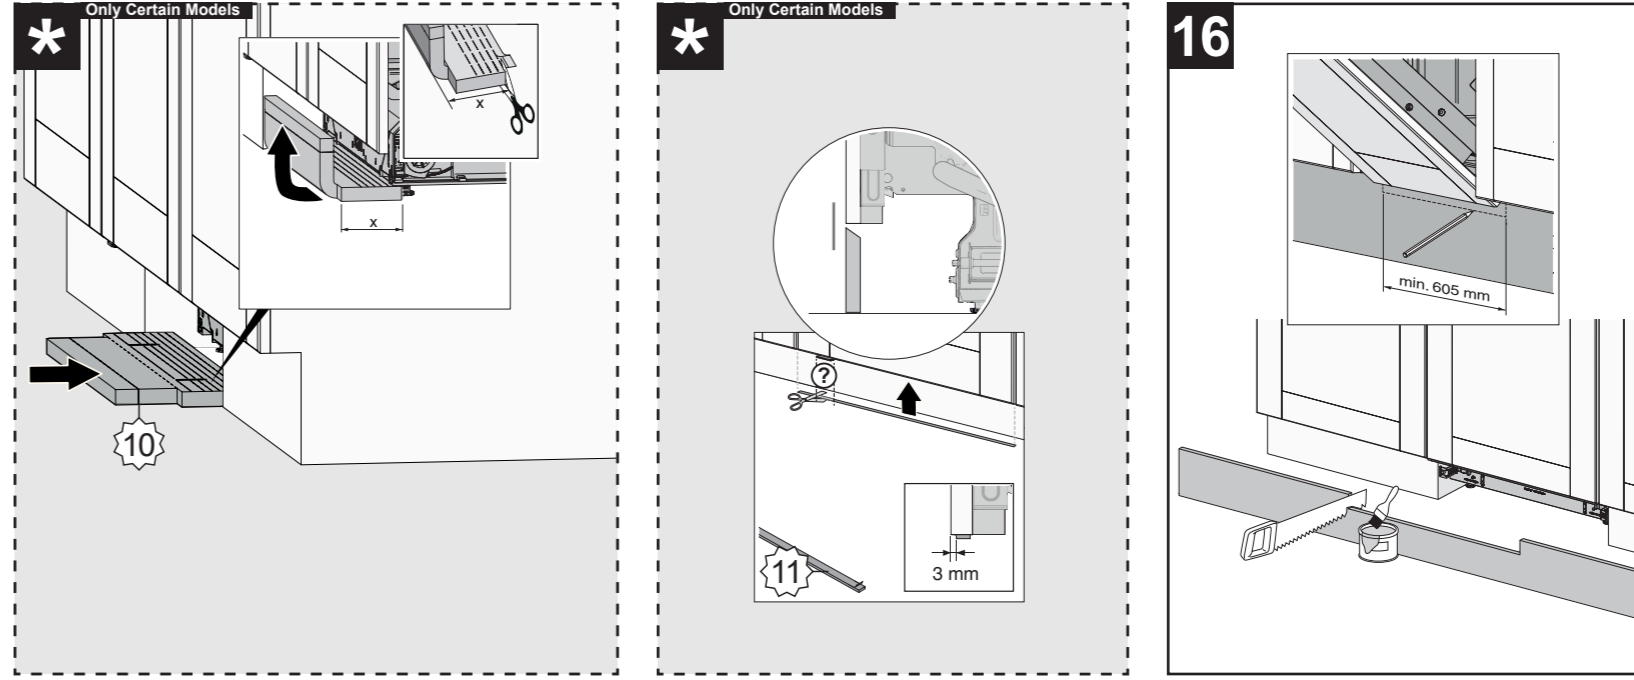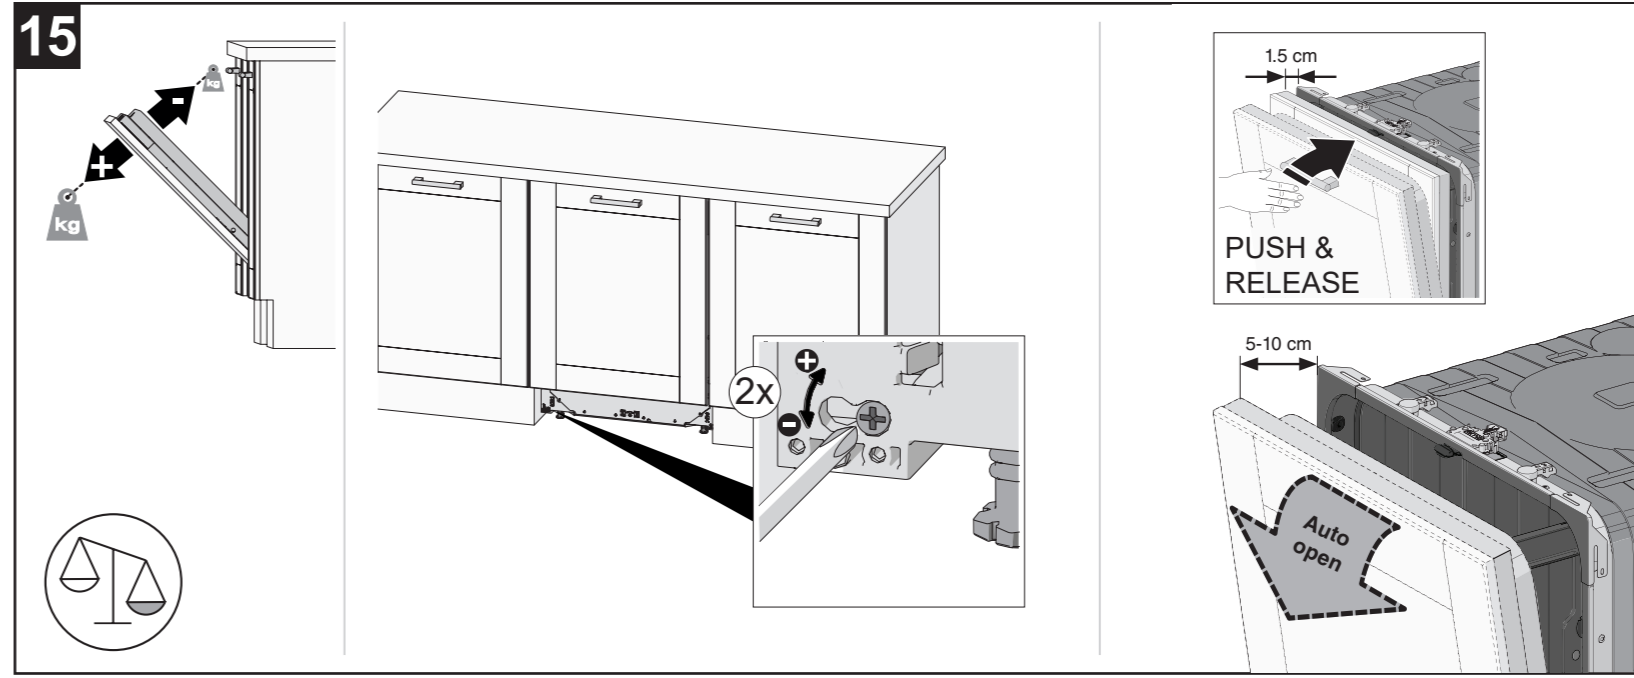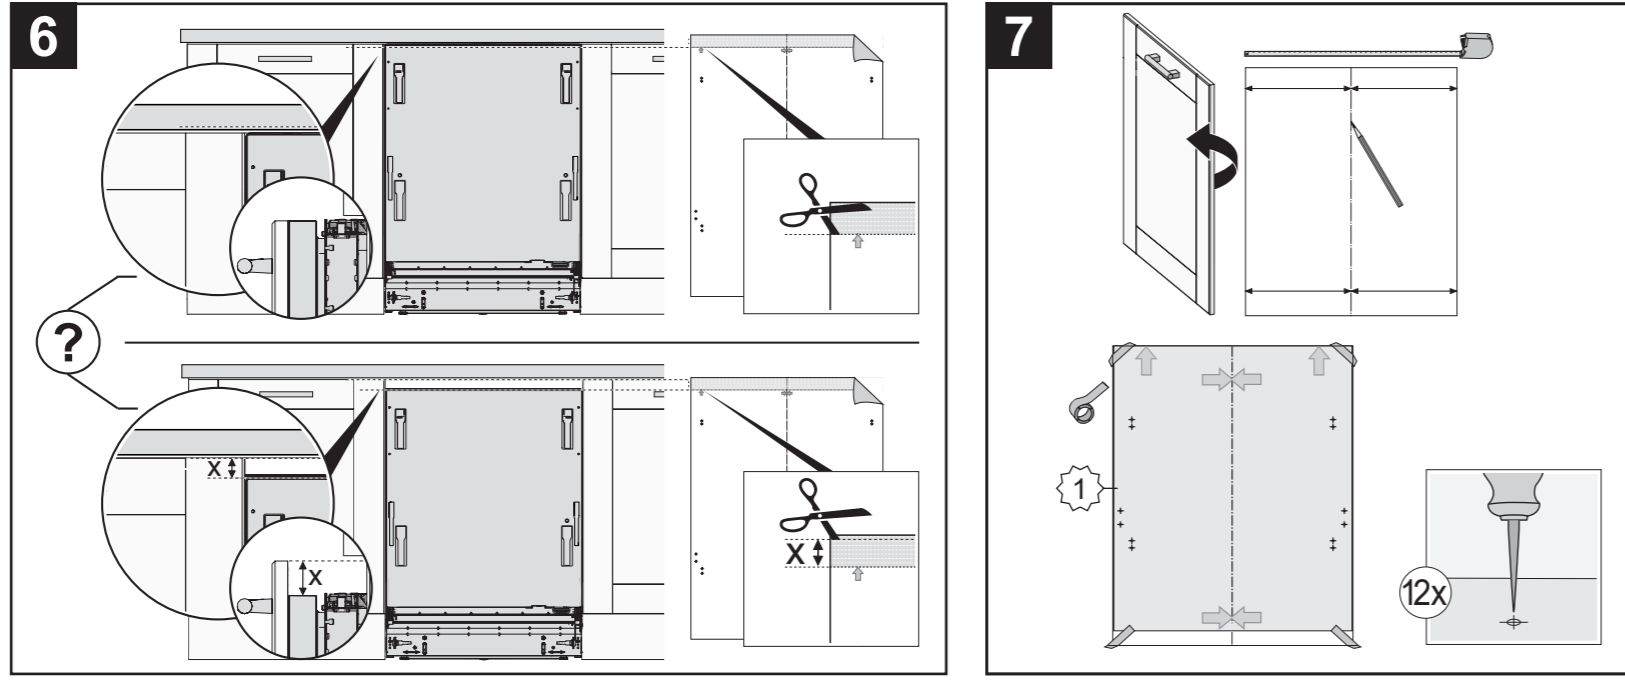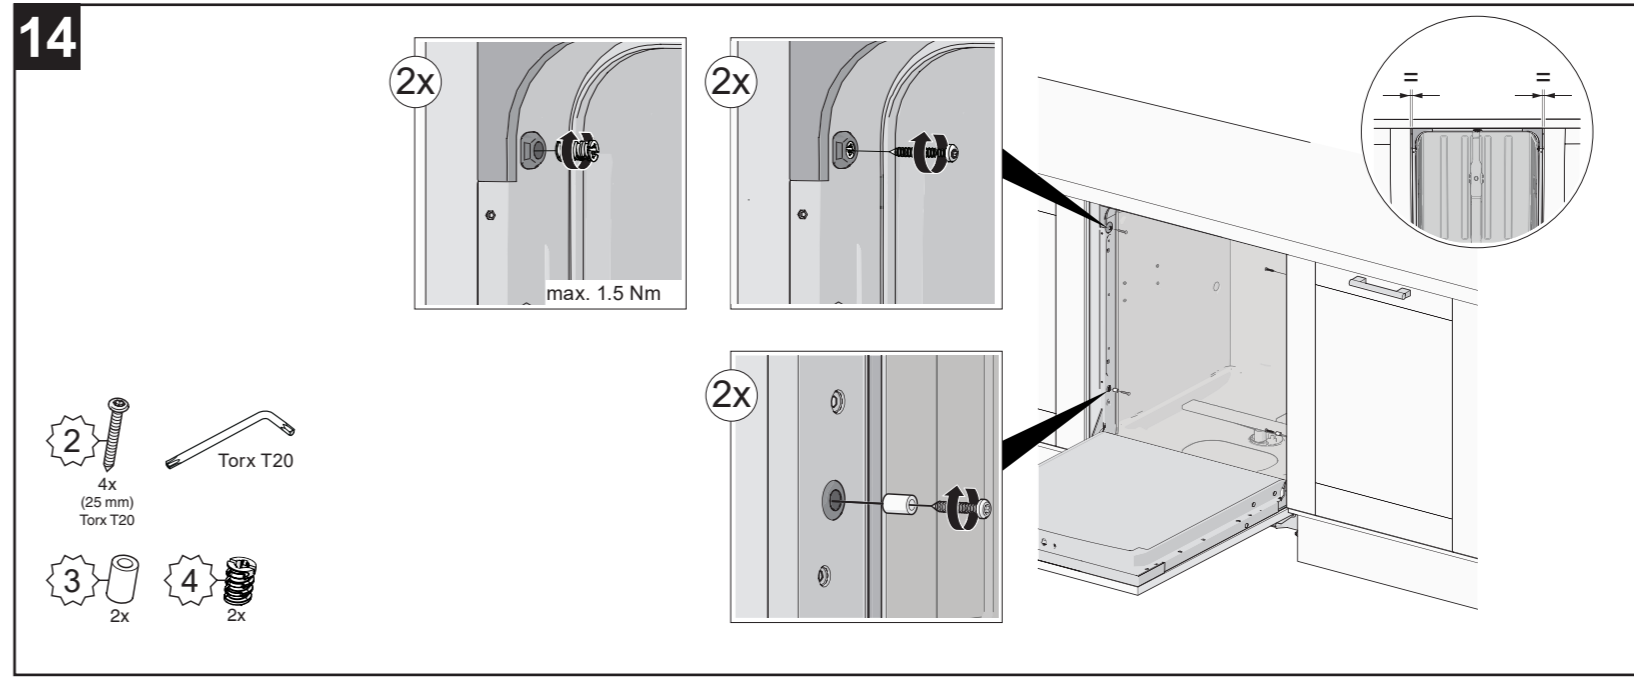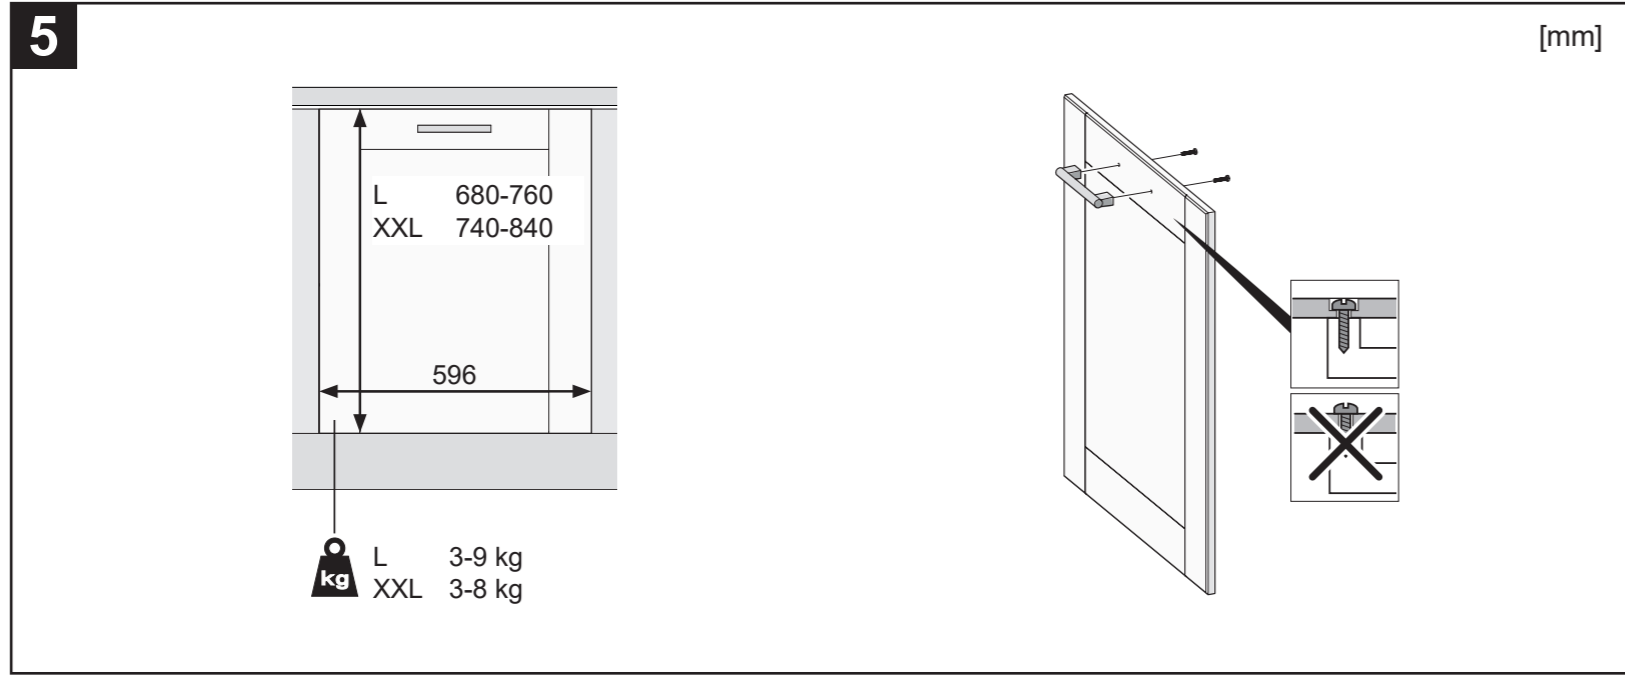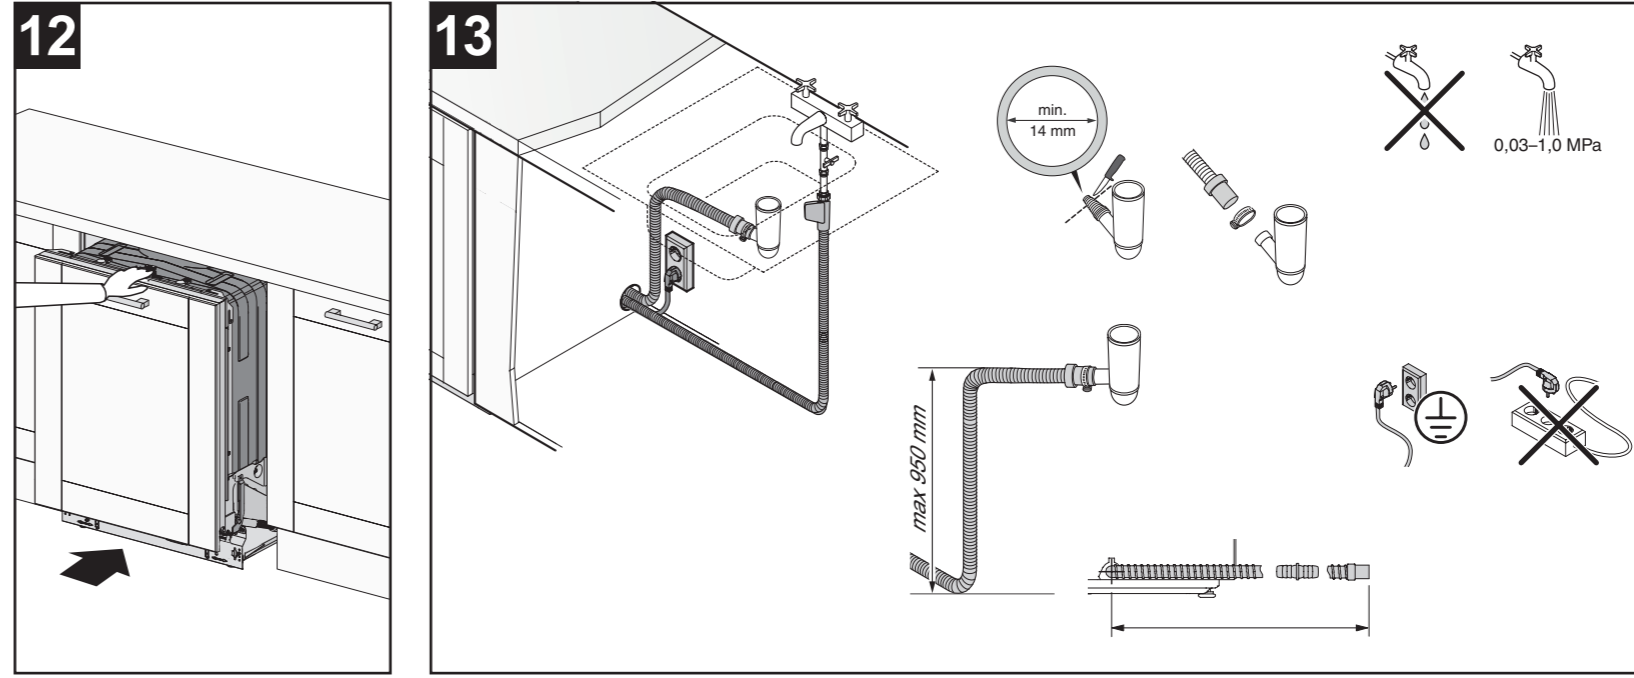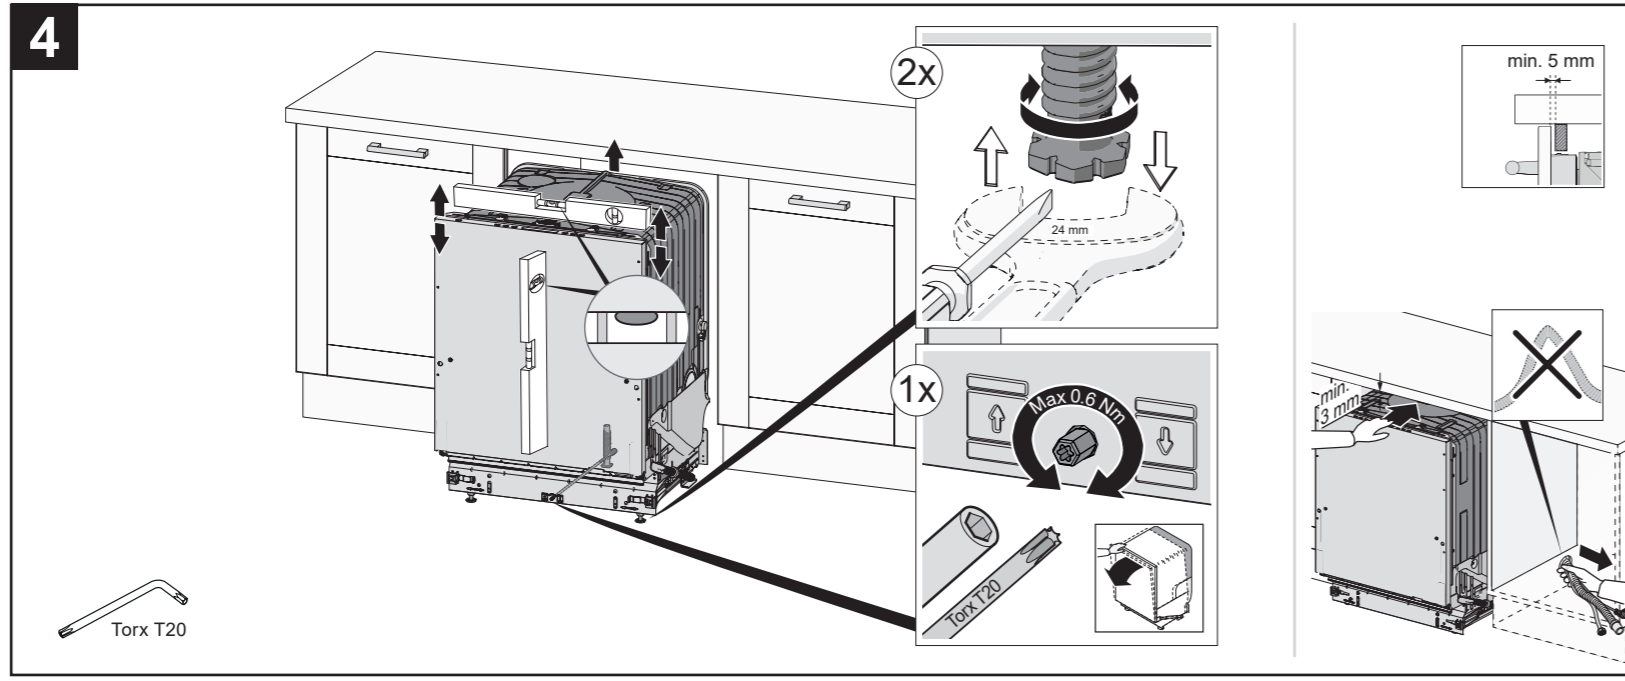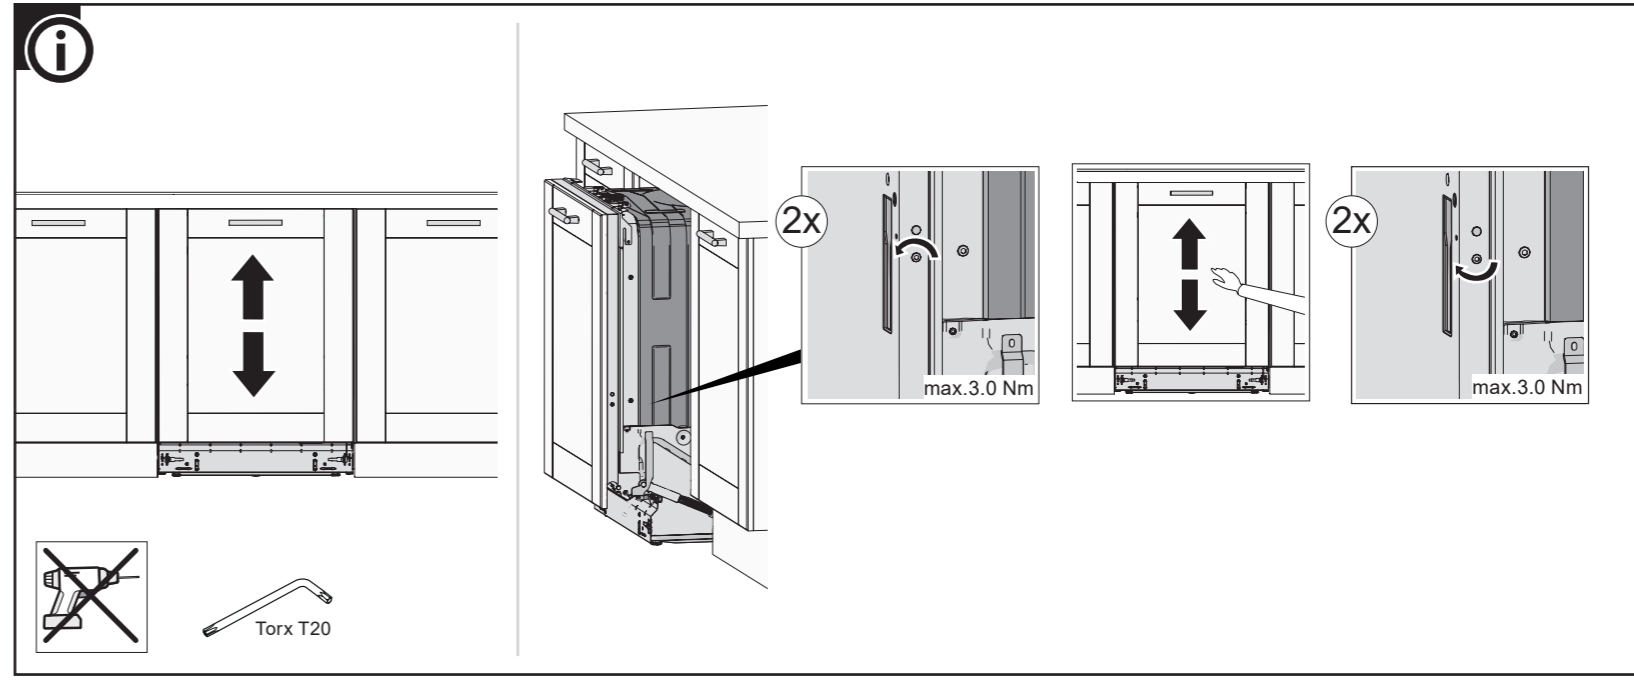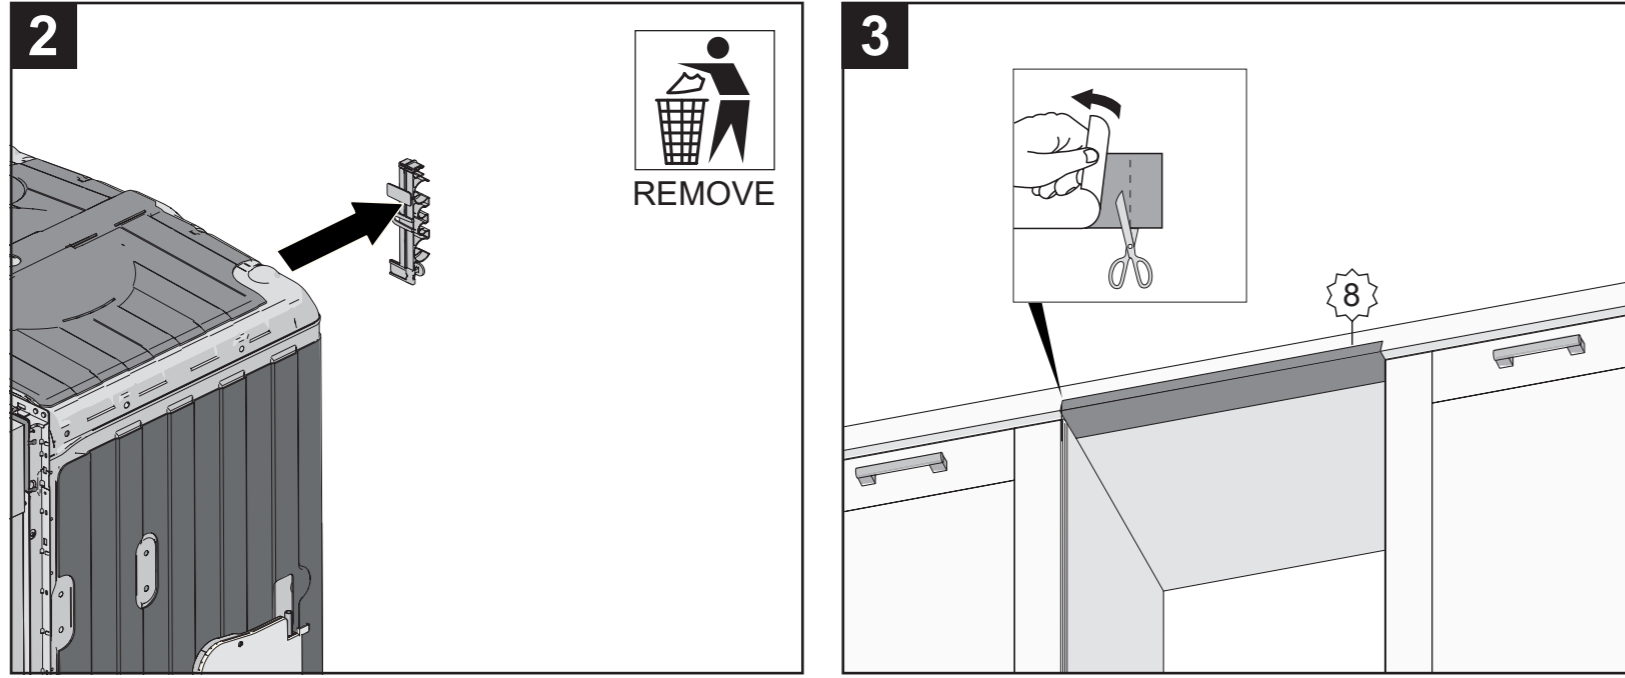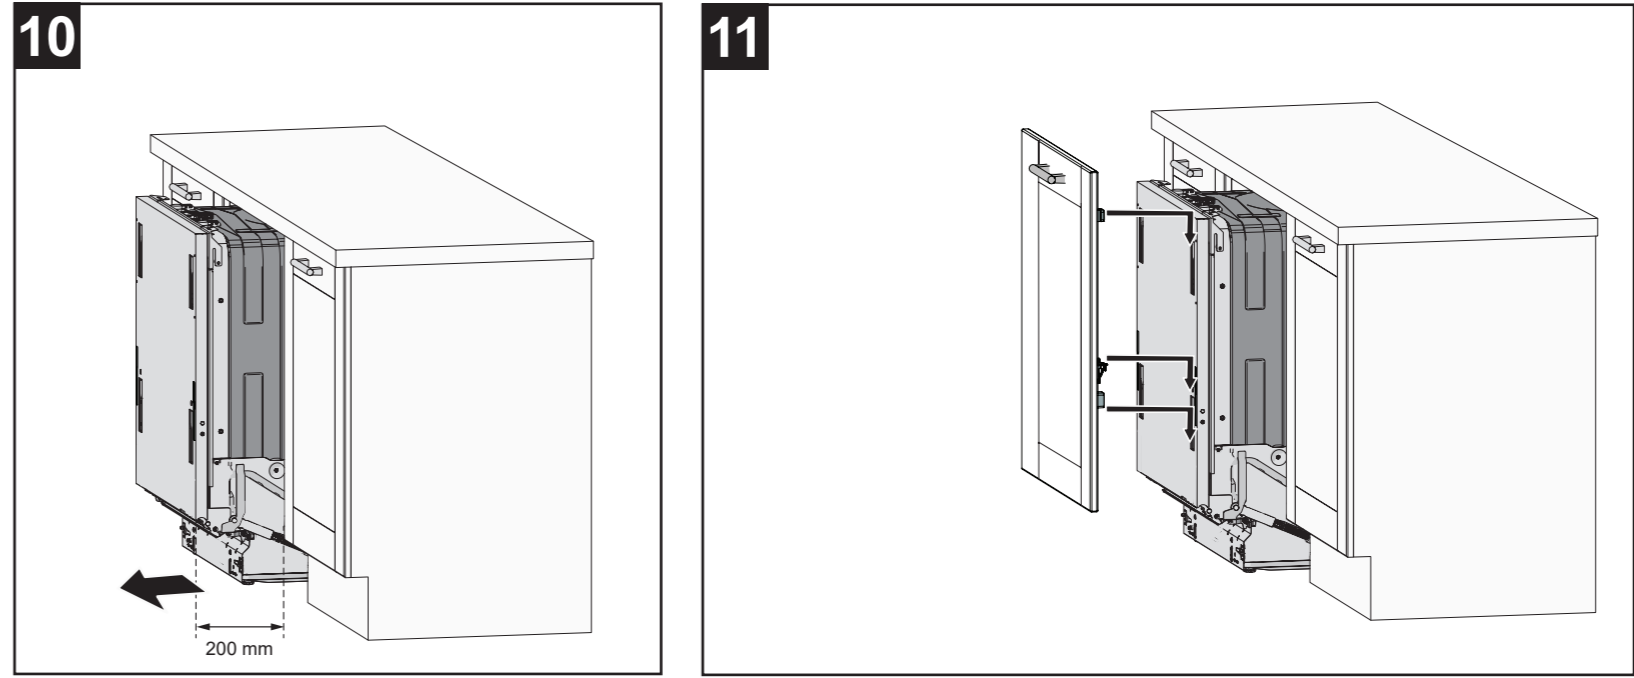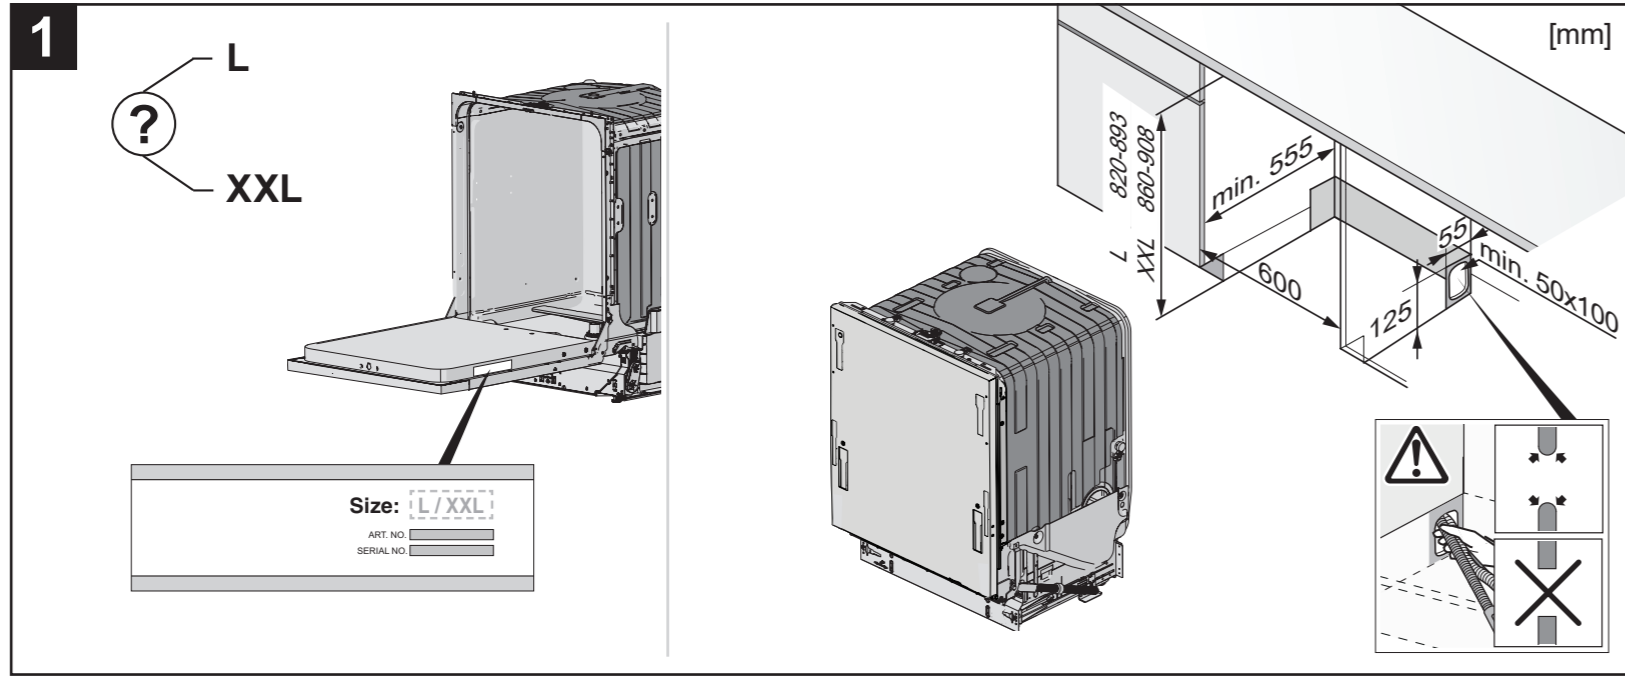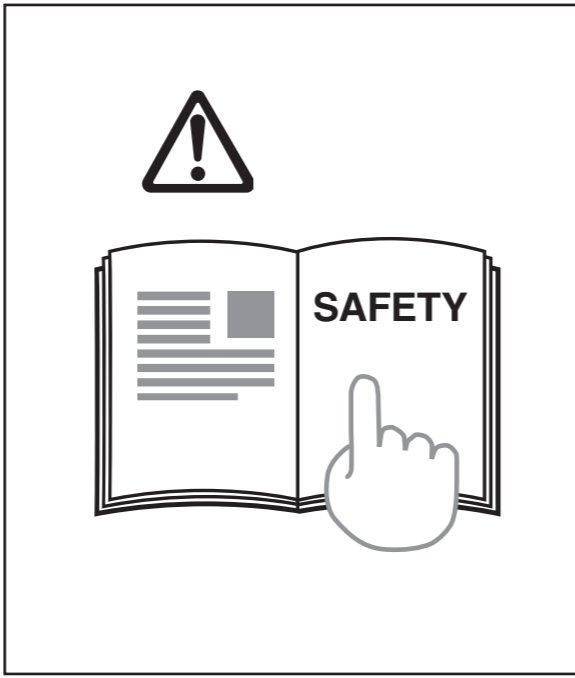

We reserve the right to make changes.