



Hisense

life reimagined

UPUTE ZA UPORABU

Prije uporabe ovog uređaja pažljivo pročitajte ove upute i zadržite ih za buduću uporabu

Hrvatski

Sadržaj

Informacije o sigurnosti i upozorenja..2	Uporaba uređaja 16
Postavljanje novog uređaja.....9	Korisni savjeti 17
Okretanje vrata10	Čišćenje i održavanje..... 18
Opis uređaja13	Utvrđivanje i rješavanje problema ... 19
Upravljačka ploča14	Zbrinjavanje uređaja 20



Informacije o sigurnosti i upozorenja

Zbog vaše sigurnosti i pravilne uporabe, prije postavljanja i prve uporabe uređaja pažljivo pročitajte ove upute uključujući savjete i upozorenja. Kako bi se izbjegle nepotrebne pogreške i nesreće, važno je da sve osobe koje koriste uređaj budu dobro upoznate s njegovim načinom rada i sigurnosnim značajkama. Spremite ove upute i pobrinite se da ostanu uz uređaj ako ga preselite ili prodate, kako bi ih svatko tko ga koristi tijekom cijelog njegovog uporabnog vijeka bio propisno upoznat s napomenama o njegovoj uporabi i sigurnosti.

Radi sigurnosti ljudi i imovine, pridržavajte se mjera opreza u ovim uputama, jer proizvođač ne odgovara za štete nastale uslijed njihova nepridržavanja.

Sigurnost djece i nemoćnih osoba


- Prema EN normi
Djeca od 8 godina nadalje i osobe smanjenih psihofizičkih, osjetilnih ili mentalnih sposobnosti ili s nedovoljnim iskustvom i znanjem smiju koristiti ovaj uređaj samo ako im je osiguran nadzor ili ako su im dane upute za uporabu uređaja na siguran način te ako razumiju uz to vezane opasnosti. Djeca se ne smiju igrati s ovim uređajem. Djeca ne smiju bez nadzora čistiti ili održavati ovaj uređaj.
Djeca od 3 do 8 godina smiju stavljati stvari u hladnjak i vaditi ih iz hladnjaka.
- Prema IEC normi
Ovaj uređaj nije namijenjen uporabi od strane osoba (uključujući djecu) smanjenih fizičkih, osjetilnih ili mentalnih sposobnosti ili s nedostatkom znanja i iskustva, osim ako su pod nadzorom osobe zadužene za njihovu sigurnost.
Djecu treba nadzirati kako bi se osiguralo da se ne igraju s ovim uređajem.
- Svu ambalažu držite dalje od djece jer postoji opasnost od gušenja.
- Prilikom zbrinjavanja dotrajalog uređaja, izvucite utikač iz utičnice, prerežite spojni kabel (što je moguće bliže uređaju) i skinite vrata kako djeca u igri ne bi doživjela strujni udar ili se zatvorila unutra.
- Ako ovim uređajem, koji ima magnetne brtve na vratima, zamjenjujete neki stariji uređaj s opružnom bravom (jezičcem) na vratima ili poklopcu, onesposobite tu bravu prije zbrinjavanja starog uređaja. Time ćete spriječiti da on postane smrtonosna klopka za dijete.

Opće sigurnosne upute i upozorenja



- UPOZORENJE — Ovaj je uređaj namijenjen uporabi u kućanstvima i za slične primjene kao što su;
 - u kuhinjama za osoblje u trgovinama, uredima i drugim radnim okruženjima;
 - u kućama na poljoprivrednim gospodarstvima, za goste u hotelima, motelima i sličnim smještajnim objektima;
 - u prenoćištima;
 - za catering i slične primjene koje ne spadaju u maloprodaju.
- UPOZORENJE — U uređaju nemojte držati eksplozivne tvari poput raspršivača u limenoj ambalaži sa zapaljivim plinovima.
- UPOZORENJE — Ako je napojni kabel oštećen, mora ga zamijeniti proizvođač ili ovlašteni servis kako bi se izbjegle opasnosti.
- UPOZORENJE — Ventilacijski otvori u kućištu ili nekom ugrađenom dijelu uređaja moraju biti slobodni, bez prepreka.
- UPOZORENJE — Ne upotrebljavajte mehanička ili druga sredstva za ubrzavanje odleđivanja osim onih koje je preporučio proizvođač.
- UPOZORENJE — Nemojte oštetiti rashladni sustav.
- UPOZORENJE — Ne upotrebljavajte električne uređaje u odjeljcima za spremanje hrane osim onu vrstu takvih uređaja koje je preporučio proizvođač.
- UPOZORENJE — Rashladno sredstvo i plin za napuhavanje izolacijske pjene su zapaljivi. Dotrajali uređaj zbrinite isključivo u ovlaštenom reciklažnom centru. Ne izlažite ga plamenu.
- UPOZORENJE — Prilikom postavljanja uređaja, pazite da ne prignječite ili oštetite napojni kabel.
- UPOZORENJE — Iza uređaja nemojte postavljati višestruke utičnice ili prijenosne izvore napajanja.
- UPOZORENJE – Prije stavljanja u hladnjak hranu treba upakirati u vrećice a tekućine trebaju biti u bocama ili spremnicima s poklopcem kako bi se izbjegao problem otežanog čišćenja uređaja zbog njegove konstrukcije.



Simbol  je znak upozorenja koji ukazuje da su rashladno sredstvo i plin za napuhavanje izolacijske pjene zapaljivi.

Upozorenje: Opasnost od požara/zapaljivih materijala

Zamjena žarulja

- UPOZORENJE — Korisnik ne smije sam mijenjati žarulje! Ako su žarulje oštećene obratite se za pomoć službi za korisnike.

Ovo upozorenje vrijedi samo za hladnjake koji imaju rasvjetne žarulje.

Rashladno sredstvo

Rashladni sklop uređaja sadrži rashladno sredstvo izobutan (R600a), prirodni plin visokog stupnja kompatibilnosti s okolišem, ali je zapaljiv. Pobrinite se da tijekom transporta i postavljanja uređaja ne dođe do oštećenja ni jedne od komponenti rashladnog sklopa.

Rashladni plin (R600a) je zapaljiv.

- UPOZORENJE — Hladnjaci sadrže rashladna sredstva i plinove u izolaciji. Rashladno sredstvo i plinovi moraju se zbrinjavati na profesionalan način, jer mogu izazvati ozljede očiju ili zapaljenje. Prije propisnog zbrinjavanja uvjerite se da cijevi rashladnog sredstva nisu oštećene.

Ako je rashladni sklop oštećen:

- Izbjegavajte otvoreni plamen i izvore paljenja.
- Dobro prozračite prostoriju u kojoj se uređaj nalazi.

Opasno je mijenjati specifikacije ovog proizvoda ili ga na bilo koji način preinačavati.

Bilo kakvo oštećenje napojnog kabela može izazvati kratki spoj, požar i/ili strujni udar.



Električna sigurnost

1. Napojni kabel ne smije se produživati.
2. Pazite da utikač kabela nije oštećen ili zdrobljen. Oštećen ili zdrobljen utikač može se pregrijati i izazvati požar.
3. Strujna utičnica uređaja uvijek mora biti lako dostupna.
4. Nemojte povlačiti napojni kabel.
5. Ako je strujna utičnica labava, nemojte u nju uključivati napojni kabel. Postoji opasnost od strujnog udara ili požara.
6. Uređaj se ne smije koristiti ako unutarnja rasvjetna žaruljica nema svoj poklopac.
7. Hladnjak se napaja isključivo jednofaznom izmjeničnom strujom od 220~240V/50Hz. Ako je fluktuacija napona tolika da on prelazi gore navedeni raspon, radi sigurnosti na hladnjak spojite automatski regulator izmjeničnog napona od više od 350 W. Hladnjak mora biti spojen na posebnu utičnicu, a ne na zajedničku utičnicu s drugim električnim uređajima. Njegov utikač mora odgovarati utičnici koja ima vod za uzemljenje.

Svakodnevna uporaba

- U uređaju nemojte pohranjivati zapaljive plinove ili tekućine. Postoji opasnost od eksplozije.
- U uređaju nemojte koristiti nikakve električne uređaje (npr. električne aparate za sladoled, miksera i sl.).
- Kod odspajanja uređaja, uvijek povlačite utikač, a ne kabel.
- Nemojte stavljati vruće predmete blizu plastičnih dijelova ovog uređaja.
- Nemojte stavljati namirnice izravno uz odvod zraka na stražnjoj stjenci.
- Gotovu upakiranu zamrznutu hranu čuvajte u skladu s uputama proizvođača te hrane.
- Treba se strogo pridržavati uputa proizvođača o čuvanju namirnica. Pročitajte odgovarajuće upute za pohranjivanje.

- U dio za zamrzavanje ne stavljajte gazirana pića, jer ona stvaraju pritisak u bocama/limenkama te mogu eksplodirati i oštetiti uređaj.
- Zamrznuta hrana može izazvati ozeblina ako se konzumira izravno iz zamrzivača.
- Ne postavljajte uređaj na mjesto izloženo izravnom sunčevom svjetlu.
- Upaljene svijeće, svjetiljke i druge predmete s otvorenim plamenom držite podalje od uređaja kako se ne bi zapalio.
- Uređaj je namijenjen za čuvanje hrane i/ili pića u kućanstvima, kao što je opisano u ovim uputama. Uređaj je težak. Budite pažljivi prilikom njegova pomicanja.
- Nemojte namirnice u dijelu za zamrzavanje vaditi ili dirati vlažnim/mokrim rukama jer to može izazvati abrazije kože ili ozeblina.
- Postolje, ladice, vrata itd. nemojte koristiti za stajanje ili kao oslonac.
- Jednom odmrznute namirnice ne smiju se ponovno zamrzavati.
- Nemojte konzumirati sladolede ili kocke leda izravno iz zamrzivača jer to može izazvati ozeblina u ustima i na usnama.
- Kako biste izbjegli padanje predmeta i ozljede ili oštećenja uređaja, nemojte pretrpavati police na vratima ili ladice.

Oprez!

Održavanje i čišćenje

- Prije održavanja isključite uređaj i izvucite napojni kabel iz utičnice.
- Nemojte čistiti uređaj metalnim predmetima, parnim strojevima, eteričnim uljima, organskim otapalima ili abrazivnim sredstvima.
- Nemojte uklanjati led oštrim predmetima. Upotrijebite plastičnu strugalicu.

Instalacija – važno!

- Pridržavajte se ovdje navedenih uputa za spajanje na mrežu.
- Raspakirajte uređaj i provjerite je li oštećen.

Ako je uređaj oštećen, nemojte ga spajati na struju. Eventualna oštećenja odmah prijavite prodavatelju. U tom slučaju sačuvajte ambalažu.

- Prije spajanja uređaja na mrežu preporuča se pričekati najmanje četiri sata kako bi se ulje vratilo u kompresor.
- Oko uređaja ostavite dovoljno prostora za cirkuliranje zraka jer se on u protivnom može pregrijati. Da biste postigli dostatnu ventilaciju, slijedite upute o instalaciji.
- Kad god je to moguće, stražnja stjenka uređaja ne smije biti preblizu zidu kako ne bi došlo do kontakta s toplim dijelovima (kompresor, kondenzator), jer postoji opasnost od požara. Slijedite upute o instalaciji.
- Uređaj ne smije biti smješten blizu radijatora ili štednjaka.
- Pobrinite se da nakon postavljanja uređaja utikač priključnog kabela bude lako dostupan.

Servis

- Sve električne radove potrebne za servisiranje uređaja prepustite stručnom električaru ili kvalificiranoj osobi.
 - Ovaj uređaj treba servisirati ovlaštenu servis i moraju se koristiti samo originalni rezervni dijelovi.
 - 1) Ako je uređaj "Frost Free"
 - 2) Ako uređaj ima odjeljak za zamrzavanje.
-

Postavljanje novog uređaja

 
Prije prve uporabe ovog uređaja, morate se upoznati sa sljedećim korisnim savjetima.

Ventilacija uređaja



Kako biste poboljšali učinkovitost rashladnog sustava i uštedjeli energiju, potrebno je održavati dobru ventilaciju oko uređaja za rasipanje topline. Zbog toga treba oko uređaja ostaviti dovoljno slobodnog prostora.

Preporuka: Preporuča se da bude 50-70 mm prostora od stražnje strane uređaja do zida, najmanje 100mm od njegove gornje plohe, najmanje 100mm od njegove bočne stranice do zida i slobodan prostor ispred uređaja kako bi se vrata mogla otvarati za 135° kako je prikazano na sljedećim dijagramima.

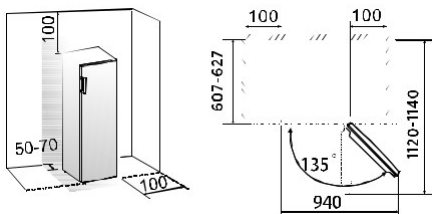

Napomena:

- Ovaj uređaj dobro radi u klimatskim razredima koji su prikazani u sljedećoj tablici.


Ako se duže vrijeme ostavi na nekoj temperaturi iznad ili ispod navedenog raspona možda neće raditi kako treba.

Klimatski razred	Temperatura okoline
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

- Uređaj postavite na suhom mjestu kako biste izbjegli visoku vlagu.
- Ne izlažite uređaj izravnom sunčevom svjetlu, kiši ili mrazu. Uređaj postavite podalje od izvora topline kao što su peći, vatra ili grijalice.


Niveliranje uređaja

 - Za dobro niveliranje i cirkulaciju zraka u donjem stražnjem dijelu uređaja, treba podesiti nožice na dnu uređaja. Podesiti ih možete rukom ili koristeći neki prikladni ključ.
- Kako biste omogućili da se vrata sama zatvaraju, gornji dio nagnite prema natrag za oko 10mm.

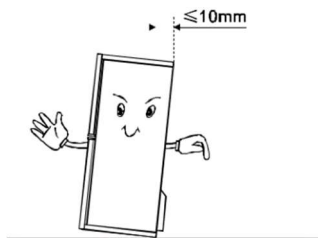

Ugradnja ručke na vratima

 Izvadite ručku i vijke iz vrećice, uklonite omot s ručke, postavite ručku na desnu stranu vrata, pričvrstite je vijcima i stavite navlaku na ručke.

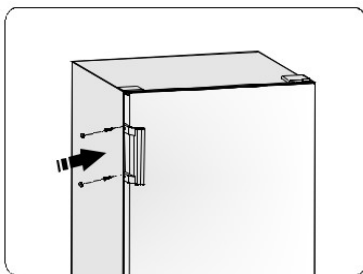

Okretanje vrata

Strana prema kojoj se vrata otvaraju može se po potrebi promijeniti, s desne strane (kako se uređaj isporučuje) na lijevu stranu.

Upozorenje! Kad okrećete vrata, uređaj ne smije biti priključen na mrežu. Uvjerite se da je utikač izvađen iz utičnice.


Alati koji će vam trebati

Ne isporučuju se uz uređaj		
		
8mm nasadni ključ	Odvijač	Lopatica
		
Križni odvijač	Francuski ključ	8mm ključ
Dodatni dijelovi (u plastičnoj vrećici)		
		
Lijevi poklopac šarke		


Napomena: Po potrebi možete hladnjak položiti na leđa kako biste mogli pristupiti postolju. Trebate ga položiti na mekanu pjenastu ambalažu ili sličan materijal kako biste spriječili oštećenje stražnje ploče hladnjaka.

Kod okretanja vrata općenito se preporučaju sljedeći koraci.

 
1. Upotrijebite lopaticu ili odvijač s tankom oštricom kako biste podignuli poklopac otvora vijka koji se nalazi u lijevom uglu gornje plohe hladnjaka.

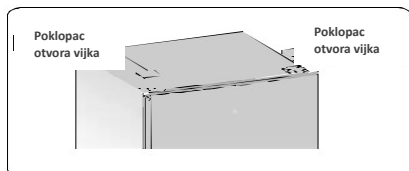

 2. Odvijte specijalne prirubne vijke koji se koriste za fiksiranje desne gornje šarke pomoću nasadnog ključa 8mm ili francuskog ključa (za vrijeme postavljanja pridržavajte rukom gornja vrata).

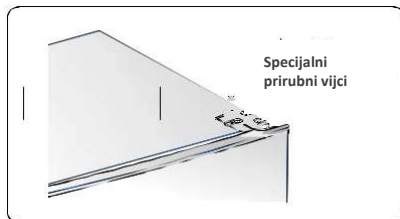


 3. Uklonite gornju os šarke, prenesite je na obrnutu stranu i čvrsto je zategnite, a zatim je postavite na sigurno mjesto.


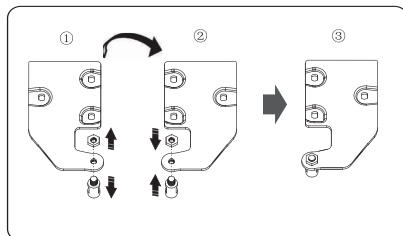


4. Uklonite vrata s donje šarke.

 NAPOMENA : Prilikom skidanja vrata, pazite na brtve između središnje i gornje šarke donjih vrata koje mogu prijanjati uz vrata. Nemojte ih izgubiti.

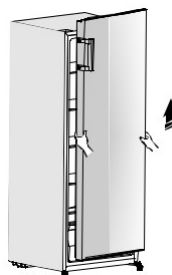

  
5. Položite ih na glatku površinu s gornjom pločom okrenutom prema gore. Odvijte vijak ② i skinite dio ①, zatim ih ugradite na lijevu stranu i dobro ih pritegnite.

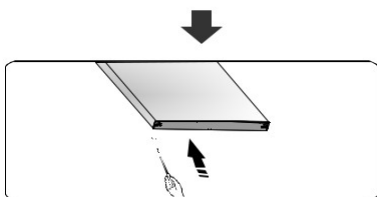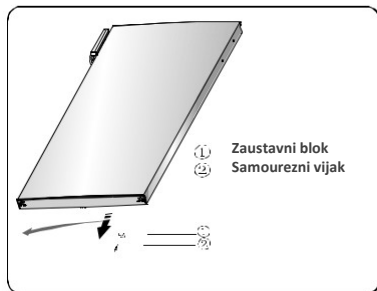


6. Položite hladnjak na mekanu pjenastu ambalažu ili sličan materijal. Izvadite obje podesive nožice, zatim izvadite donje šarke tako da odvijete specijalne prirubne samourezne vijake.



 
7. Premjestite donju šarku na lijevu stranu i učvrstite je pomoću specijalnih prirubnih vijaka. Premjestite nožice na drugu stranu i učvrstite ih.

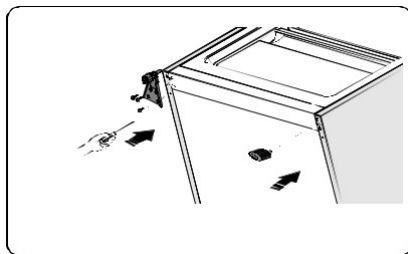

 
8. Premjestite donja vrata na odgovarajući položaj, podesite donju šarku, uvucite os šarke u donju rupicu donjih vrata, zatim pritegnite vijke.

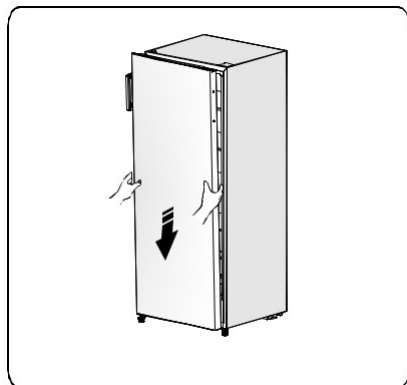

 
9. Prebacite gornju šarku i osovinu šarke utaknite u gornju rupicu na vratima te podesite položaj vrata (za vrijeme postavljanja pridržavajte rukom vrata). Gornju šarku učvrstite pomoću samoureznog vijka.

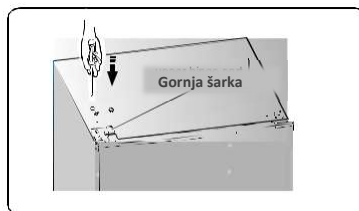

 10. Postavite poklopac rupice vijka u gornji desni kut hladnjaka. Poklopac gornje šarke (nalazi se u plastičnoj vrećici) postavite u lijevi kut. Drugi poklopac gornje šarke Spremite u plastičnu vrećicu.

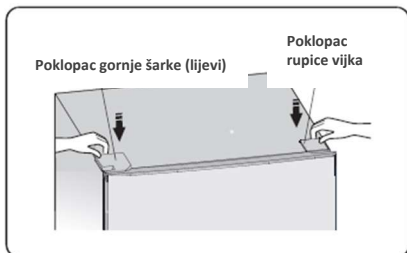

 
11. Ručku hladnjaka premjestite s lijeve na desnu stranu.

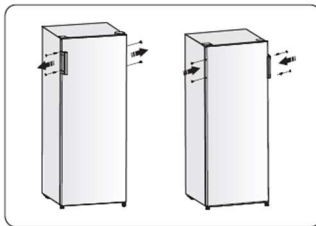

12. Otvorite gornja vrata, ugradite police na vrata i zatim ih zatvorite.

Upozorenje! Kad mijenjate stranu na koju se vrata otvaraju, uređaj ne smije biti spojen na mrežu. Prije toga izvucite utikač iz dovoda struje.

 Prikaz uređaja

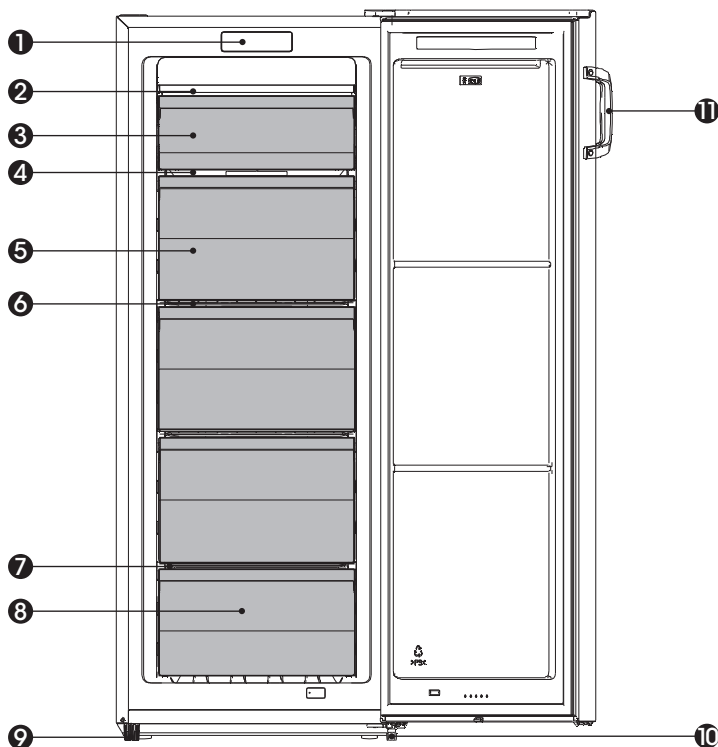

- | | |
|-------------------------|--------------------------|
| ① Upravljačka ploča | ⑦ Donja žičana polica |
| ② Zračni kanal | ⑧ Donja ladica |
| ③ Pretinac | ⑨ Lijeva podesiva nožica |
| ④ Staklena polica | ⑩ Desna podesiva nožica |
| ⑤ Srednje ladice | ⑪ Ručka vrata |
| ⑥ Srednja žičana polica | |

Napomena: Zbog stalnih preinaka naših proizvoda, vaš se hladnjak može ponešto razlikovati od ovog priručnika ali njegove funkcije i način uporabe ostaju isti.

- Da biste postigli najbolju energetska učinkovitost ovog proizvoda, postavite sve police i ladice na njihov izvorni položaj kao na gornjoj ilustraciji.
- Ako uklonite ladicu, okrenite žičanu policu ispod ladice gore-dolje za 180 stupnjeva kako biste postigli najbolju energetska učinkovitost.

Upravljačka ploča

Upravljačka ploča koja kontrolira temperaturu unutar odjeljka zamrzivača nalazi se unutar zamrzivača. Koristite svoj uređaj prema sljedećim regulacijama, vaš uređaj ima odgovarajuće funkcije i načine rada kao što je prikazano na upravljačkoj ploči. Kad se uređaj uključi prvi put, pozadinsko osvjetljenje simbola na upravljačkoj ploči će se upaliti. Svjetlo unutar uređaja gasi se zatvaranjem vrata.

Kontrola temperature

Važno! - Za optimalno čuvanje hrane, preporučujemo da kad prvi put pokrenete hladnjak, temperatura zamrzivača bude postavljena na -18°C . Ako želite promijeniti temperaturu, slijedite upute u nastavku.

NAPOMENA: Podešavanje visoke temperature ubrzat će propadanje hrane.

Oprez!

Kad postavljate temperaturu, postavite prosječnu temperaturu za cijeli odjeljak hladnjaka. Temperatura u odjeljku može se razlikovati od temperature prikazane na upravljačkoj ploči, ovisno o tome koliko hrane skladištite i gdje je smještate.

 
Visoka ili niska sobna temperatura također mogu utjecati na stvarnu temperaturu unutar uređaja.

Način rada

Super Freeze

Funkcija Super Freeze brzo će smanjiti temperaturu u zamrzivaču pa će se hrana brže smrzavati. To će zadržati vitamine i hranjive sastojke hrane i držati hranu dulje svježom.

- Pritisnite "TEMP°C/Super freeze 3^{sec}" gumb nakon 3 sekunde za odabir funkcije Super Freeze. Zaslon "-24" i indikator će biti uključeni.
 - Ako želite zamrznuti veću količinu hrane, nekoliko sati prije stavljanja svježe hrane u odjeljak za zamrzavanje, uključite Super freeze kako biste spriječili neželjeni porast temperature.
 - Ako se koristi kapacitet smrzavanja prema natpisnoj pločici, uključite super freeze 24 sata prije nego što se svježi proizvodi stave u pretinac za zamrzavanje. Super freeze automatski prestaje nakon 52 sata.
 - Da biste isključili Super freeze pritisnite tipku "TEMP°C/Super freeze 3^{sec}". Ako je funkcija Super freeze isključena, super indikator će se simultano isključiti, a uređaj će automatski postaviti temperaturu prije uključjenja Super freeze funkcije.
- #### TEMPERATURA °C
- Možete pritisnuti "TEMP°C/Super freeze 3^{sec}" da biste aktivirali način za kontrolu temperature zamrzivača. Ako nekoliko puta pritisnete tipku temperatura će se postaviti sljedećim redoslijedom.



Alarm

- Ako su vrata zamrzivača otvorena više od 1 minute, oglasit će se alarm na vratima i indikator će početi treperiti.

Zujanje će prestati pritiskom na tipku „ALARM“ i indikator će svijetliti, ali će prestati treperiti.

- Da biste uštedjeli energiju, izbjegavajte dugo držati vrata otvorena prilikom korištenja uređaja. Da biste isključili alarm potrebno je u potpunosti zatvoriti vrata.

Uporaba uređaja

Ovaj odjeljak govori vam kako koristiti većinu korisnih značajki.

Preporučujemo da ih pažljivo pročitate prije upotrebe uređaja.

Korištenje odjeljka zamrzivača

Odjeljak zamrzivača pogodan je za skladištenje hrane koja treba biti smrznuta, uključujući meso, ribu, sladoled itd.

Oprez! Pripazite da staklene boce nisu pohranjene u zamrzivaču jer smrzavanje može uzrokovati pucanje boce.

Police

- Police su prikladne za skladištenje hrane.
- Da biste uklonili žičanu policu: podignite sprijeda i izvucite.

Važno!

Kako bi se maksimalno iskoristila zapremina odjeljka zamrzivača, korisnik može izvaditi jednu ili više ladica iz uređaja, u skladu sa svakodnevnom uporabom.

Ako uklonite ladicu, okrenite žičanu policu ispod ladice gore i dolje za 180 stupnjeva kako biste postigli najbolju energetsku učinkovitost.

Kako biste uštedjeli energiju, nemojte vaditi donju ladicu zamrzivača.

Ladice

Ladice se mogu koristiti za skladištenje smrznute hrane.

Prvo izvucite ladicu u ravninu, a zatim je možete izvaditi. Suprotnim redosljedom možete vratiti ladicu.

Oprez! Nikada ne zatvarajte vrata zamrzivača kada su police, pretinac i ladice izvučeni. To može oštetiti i njih i vrata zamrzivača.

Oprez! Ovaj rashladni uređaj nije namijenjen za upotrebu kao ugradbeni uređaj.

Savjeti za uštedu energije

Da biste uštedjeli energiju, preporučamo vam da se pridržavate sljedećih savjeta.

- Izbjegavajte ostavljati vrata duže vremena otvorena kako biste sačuvali energiju.
- Uređaj nemojte postavljati u blizini bilo kakvih izvora topline (izravno sunčevo svjetlo, električna pećnica ili štednjak i slično).
- Nemojte temperaturu podesiti na nižu od potrebne.
- Nemojte u uređaj stavljati toplu hranu ili isparavajuće tekućine.
- Uređaj postavite u dobro ozračenu prostoriju u kojoj nema vlage. Pridržavajte se uputa iz poglavlja o postavljanju novog uređaja.
- Ako je na dijagramu prikazano ispravno slaganje ladica, posuda i polica, nemojte njihov položaj mijenjati, jer je njihov raspored predviđen za najučinkovitiju štednju energije.

Korisni savjeti za zamrzavanje

- Prilikom prvog puštanja u rad ili nakon duljeg vremena izvan uporabe, pustite uređaj da radi barem 2 sata na višim postavkama prije stavljanja hrane u njega.
- Hranu pripremite u malim porcijama kako bi se brzo i potpuno zamrzнула i kako biste kasnije mogli odlediti samo količinu koja vam je potrebna.
- Umotajte hranu u aluminijsku ili polietilensku foliju koja ne propušta zrak.
- Nemojte dopustiti da svježa, nezamrzuta hrana dotiče hranu koja je već zamrzuta kako biste spriječili povećanje temperature zamrznute hrane.

- Zaleđeni proizvodi: ako se konzumiraju odmah nakon vađenja iz zamrzivača, vjerojatno će izazvati ozeblina na koži.
- Preporuča se na svaki zamrznuti paket staviti naljepnicu s opisom i datumom kako biste mogli pratiti vrijeme držanja u zamrzivaču.

Korisni savjeti za pohranjivanje zamrznute hrane

- Uvjerite se da je zamrzuta hrana ispravno pohranjena u maloprodaji.
- Nakon odmrzavanja, hrana će se brzo kvariti i ne smije se ponovno zamrzavati. Nemojte prekoračiti rok čuvanja koji je naveo proizvođač hrane.

Isključivanje uređaja

Ako uređaj treba isključiti na dulje vrijeme, treba poduzeti sljedeće korake kako bi se spriječilo stvaranje plijesni u uređaju.

1. Izvadite svu hranu.
2. Izvucite utikač iz utičnice.
3. Temeljito operite i osušite unutrašnjost.
4. Pazite da sva vrata budu pritrvorena kako bi zrak mogao cirkulirati.

Čišćenje i održavanje

Iz higijenskih razloga, ovaj uređaj (uključujući vanjski i unutarnji pribor) treba redovito očistiti barem svaka dva mjeseca.

Oprez! Prilikom čišćenja uređaj ne smije biti spojen na mrežu.

Opasnost od strujnog udara! Prije čišćenja uređaj isključite i izvadite utikač iz utičnice.

Čišćenje izvana

Svoj uređaj trebate redovito čistiti kako bi on zadržao dobar izgled.

- Kontrolnu ploču obrišite čistom, mekanom krpom.
- Vodom poprskajte krpu za čišćenje umjesto da izravno prskate površinu uređaja. To pomaže da se osigura ravnomjerna raspodjela vlage na površini.
- Vrata, ručke i površine ormara operite blagim deterdžentom i zatim obrišite mekanom krpom.

Oprez!

- Nemojte koristiti oštre predmete jer oni lako mogu izgresti površinu.
- Nemojte za čišćenje koristiti razrjeđivač, deterdžent za pranje automobila, Clorox, eterična ulja, abrazivna sredstva za čišćenje ili organsko otapalo kao što je benzen. Oni mogu oštetiti površinu uređaja i prouzročiti požar.

Čišćenje unutrašnjosti

Unutrašnjost uređaja treba redovito čistiti. Lakše će se očistiti kad u njemu ima malo zaliha hrane. Unutrašnjost hladnjaka prebrišite blagom otopinom sode bikarbone, zatim isperite toplom vodom pomoću ocijeđene spužve ili krpe. Do kraja obrišite prije ponovnog stavljanja polica i ladica.

Temeljito obrišite sve površine i izvađene dijelove.

Premda se ovaj uređaj automatski odleđuje, na unutarnjim stjenkama zamrzivača može se stvoriti slojinja ako se vrata zamrzivača često otvaraju ili predugo drže otvorena. Ako je slojinja predebeo, odaberite vrijeme kad u uređaju ima malo zaliha hrane i postupite na sljedeći način:

1. Izvadite svu hranu i ladice, isključite uređaj iz mreže i ostavite vrata otvorena. Dobro prozračite sobu kako biste ubrzali ovaj postupak.

2. Kad je odleđivanje gotovo, očistite uređaj kako je gore opisano.

Oprez! Nemojte za odstranjivanjeinja iz zamrzivača koristiti oštre predmete. Uređaj se može ponovno uključiti i utaknuti utikač u utičnicu tek nakon što je unutrašnjost potpuno suha

Čišćenje brtvi

Vodite računa o redovnom čišćenju brtvi na vratima. Ljepljiva hrana i pića mogu dovesti do toga da se brtve prilijepe uz ormar i oštećuju prilikom otvaranja vrata. Brtve perite blagim deterdžentom i toplom vodom. Isperite i dobro obrišite nakon čišćenja.

Oprez! Uređaj se može uključiti u struju tek nakon što su se brtve do kraja osušile

Utvrđivanje i rješavanje problema

Ako se suočite s nekim problemom kod vašeg uređaja ili vam se čini da uređaj ne radi ispravno, možete lako obaviti neke jednostavne provjere prije zvanja servisa.

Upozorenje! Nemojte sami pokušavati popraviti uređaj. Ako je problem nakon obavljenih niže navedenih provjera i dalje prisutan, obratite se kvalificiranom električaru, tehničaru ovlaštenog servisa ili trgovini u kojoj ste kupili proizvod.

Problem	Mogući uzrok i rješenje
Uređaj ne radi ispravno	Provjerite je li napojni kabel ispravno uključen u utičnicu.
	Provjerite osigurač ili sklop napajanja strujom, po potrebi ih zamijenite.
	Okolna temperatura je preniska. Pokušajte temperaturu komore podesiti na niže kako biste riješili ovaj problem.
	Normalno je da zamrzivač ne radi tijekom ciklusa odležavanja ili jedno kraće vrijeme nakon što se uređaj uključi kako bi se zaštitio kompresor.
Mirisi iz odjeljaka	Možda treba očistiti unutrašnjost uređaja.
	Neka hrana, ambalaža ili omoti ispuštaju mirise.
Zvukovi iz uređaja	Niže navedeni zvukovi sasvim su normalni: <ul style="list-style-type: none">• Buka koju stvara rad kompresora.• Zvuk sličan onome kad vrije voda.• Zvuk kapanja za vrijeme automatskog odmrzavanja,• Škljocanje prije početka rada kompresora.
	Ostali neuobičajeni zvukovi mogu se javljati iz niže navedenih razloga pa treba obaviti provjeru i poduzeti određene mjere: Hladnjak nije u ravni. Stražnji dio uređaja dotiče zid. Padanje ili kotrljanje boca ili ambalaže.
Motor stalno radi	Normalno je da se povremeno čuje zvuk motora; on će trebati jače raditi pod sljedećim okolnostima: <ul style="list-style-type: none">• Temperatura je podešena na nižu od potrebne• U hladnjak je nedavno stavljena veća količina tople hrane.• Temperatura izvan uređaja je previsoka.• Vrata se predugo drže otvorena.• Nakon postavljanja uređaja ili ako je dulje vrijeme bio isključen.
U odjeljku se stvara slojinja	Provjerite jesu li otvori za zrak blokirani hranom i uvjerite se da je hrana unutar uređaja složena tako da omogućava

	dovoljnu ventilaciju. Uvjerite se da su vrata dobro zatvorena. Za odstranjivanje inja, pročitajte poglavlje „Čišćenje i održavanje.“
Temperatura unutar uređaja je previsoka	Možda ste vrata predugo držali otvorena ili ste ih prečesto otvarali; ili nešto sprječava dobro zatvaranje vrata; ili je uređaj postavljen tako da nema dovoljno prostora sa strane, straga ili na vrhu.
Temperatura unutar uređaja je preniska	Povećajte temperaturu prema uputama iz poglavlja „Kontrolni zaslon“
Vrata se ne mogu lako zatvoriti	Provjerite je li vrh hladnjaka nagnut za 10-15 mm kako bi se vrata mogla sama zatvarati, ili nešto unutar hladnjaka sprječava zatvaranje vrata.
Voda kapa na pod	Plitica za skupljanje vode (koja se nalazi na stražnjem donjem dijelu ormara) možda nije dobro poravnata ili ispusni otvor (koji se nalazi ispod gornjeg dijela odjeljka kompresora) nije dobro postavljen kako bi usmjeravao vodu u tu pliticu, ili je otvor za ispuštanje vode blokiran. Možda trebate povući hladnjak od zida i provjeriti pliticu i otvor.
Svjetlo ne radi	Lampica je možda oštećena. Pročitajte upute o zamjeni LED lampica u poglavlju o čišćenju i održavanju.

Zbrinjavanje uređaja

Zabranjeno je dotrajali uređaj baciti s otpadom iz kućanstva.

Ambalaža


Ambalaža sa simbolom recikliranja može se reciklirati. Odložite je u odgovarajući reciklažni spremnik.

Prije zbrinjavanja uređaja

1. Izvucite napojni kabel iz utičnice.

1. 2. Odrežite napojni kabel i bacite ga zajedno s utikačem.

Upozorenje! Hladnjaci sadrže rashladno sredstvo i plinove u izolaciji. Zbrinjavanje rashladnog sredstva i plinova kada je uređaj odslužio svoj životni vijek mora biti napravljeno profesionalno, inače bi moglo doći do ozljeda očiju ili do zapaljenja. Prije nego što uređaj zbrinete na propisani način, uvjerite se da cijevi instalacije rashladnog sredstva nisu oštećene.

Correct Disposal of this product	
	<p>Ovaj simbol na proizvodu ili njegovoj ambalaži znači da se dotrajali proizvod ne smije tretirati kao otpad iz kućanstva. Umjesto toga, vaša je odgovornost zbrinuti svoju otpadnu opremu tako što ćete je predati na određeno sabirno mjesto za recikliranje otpadne električne i elektroničke opreme. Ispravnim zbrinjavanjem ovog proizvoda pomoći ćete u sprječavanju negativnih posljedica po zdravlje okoliša i ljudi do kojih bi inače došlo uslijed nepravilnog rukovanja ovim proizvodom. Za više informacija o tome gdje možete odložiti otpadnu opremu za recikliranje, obratite se lokalnom gradskom uredu, službi za odlaganje kućnog otpada ili trgovini u kojoj ste kupili proizvod.</p>

Pridržavajte se sljedećih uputa kako biste izbjegli onečišćenje hrane

- Duže otvaranje vrata može prouzročiti značajno povećanje temperature u odjeljcima uređaja.
- Redovito čistite površine koje mogu doći u kontakt s hranom i dostupne ispusne sustave.
- Sirovo meso i ribu spremite u odgovarajuće posude u hladnjaku tako da ne dolaze u kontakt s drugom hranom i da ne kaplju na nju.
- Odjeljci zamrzivača s dvije zvjezdice prikladni su za čuvanje zamrznute gotove hrane, čuvanje ili pripremu sladoleda i kockica leda.
- Odjeljci s jednom, dvije i tri zvjezdice nisu prikladni za zamrzavanje svježe hrane.

Redni broj	Tip odjeljka	Ciljna temp. čuvanja [°C]	Prikladna hrana
1	(***)*-Zamrzivač	≤-18	Plodovi mora (riba, škampi, školjke), slatkovodna riba i mesni proizvodi (preporučeno vrijeme čuvanja je 3 mjeseca – hranjive vrijednosti i okus s vremenom se smanjuju), prikladan za čuvanje zamrznute svježe hrane.
1	***-Zamrzivač	≤-18	Plodovi mora (riba, škampi, školjke), slatkovodna riba i mesni proizvodi (preporučeno vrijeme čuvanja je 3 mjeseca – hranjive vrijednosti i okus s vremenom se smanjuju). Nije prikladan za čuvanje svježe zamrznute hrane.
3	** -Zamrzivač	≤-12	Plodovi mora (riba, škampi, školjke), slatkovodna riba i mesni proizvodi (preporučeno vrijeme čuvanja je 3 mjeseca – hranjive vrijednosti i okus s vremenom se smanjuju). Nije prikladan za čuvanje svježe zamrznute hrane.
4	*-Zamrzivač	≤-6	Plodovi mora (riba, škampi, školjke), slatkovodna riba i mesni proizvodi (preporučeno vrijeme čuvanja je 3 mjeseca – hranjive vrijednosti i okus s vremenom se smanjuju). Nije prikladan za čuvanje svježe zamrznute hrane.
5	0-zvjezdica	-6~0	Svježa svinjetina, govedina, riba, piletina, neke pakirane prerađevine itd. (preporuča se konzumacija isti dan, po mogućnosti ne čuvati duže od 3 dana). Djelomično zapakirane/zamotane prerađevine u kutiji (hrana koja nije prikladna za zamrzavanje)

Napomena: Različitu hranu čuvajte u odgovarajućim odjeljcima i na prikladnim temperaturama za proizvode koje ste kupili.

Ako se hladnjak duže vrijeme ostavlja prazan, isključite ga, odledite, očistite, osušite i ostavite vrata otvorena kako biste spriječili stvaranje plijesni u unutrašnjosti uređaja.

Hisense

life reimagined

USER'S OPERATION MANUAL

Before operating this unit, please read this manual thoroughly, and retain for future reference

English

Contents

Safety and warning information.....	2	Using your appliance.....	14
Installing your new appliance.....	8	Helpful hints and tips.....	15
Reversing the door.....	9	Cleaning and care.....	16
Description of the appliance.....	12	Troubleshooting.....	17
Display controls.....	13	Disposal of the appliance.....	18



Safety and warning information

For your safety and correct usage, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to make sure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and be sure that they remain with the appliance if it is moved or sold, so that anyone using it throughout its life, will be properly informed on its usage and safety notices.

For the safety of life and property, keep the precautions of these user's instructions as the manufacturer is not responsible for damages caused by omission.

Safety for children and others who are vulnerable people

● According to EN standard

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

● According to IEC standard

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person being responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children as there is a risk of suffocation.
- If you are discarding the appliance, pull the plug out of the socket, cut the connection cable (as close to the appliance as you can) and remove the door to prevent children playing from suffering an electric shock or from closing themselves inside it.
- If this appliance, featuring a magnetic door seals, is to replace an older appliance having a spring lock (latch) on the door or lid, be sure to make the spring lock unusable before you discard the old appliance. This will prevent it from becoming a death trap for a child.

General safety



- **WARNING** — This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses and hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- **WARNING** — Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- **WARNING** — If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING** — Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING** — Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING** — Do not damage the refrigerant circuit.
- **WARNING** — Do not use electrical appliances inside the

food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- **WARNING** — The refrigerant and insulation blowing gas are flammable. When disposing of the appliance, do so only at an authorized waste disposal centre. Do not expose to flame.

- **WARNING** — When positioning the appliance, ensure the supply cord is not trapped or damaged.

- **WARNING** — Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

- **WARNING**—**WARNING!** Food needs to be packed in bags before putting into the refrigerator to avoid the problem that the product design structure is not easy to clean.



The symbol is a warning and indicates the refrigerant and insulation blowing gas are flammable.

WARNING : Risk of fire / flammable materials

Replacing the illuminating lamps

- **WARNING**—The illuminating lamps must not be replaced by the user! If the illuminating lamp is damaged, contact the customer helpline for assistance.

This warning is only for refrigerators that contain illuminating lamps.

Refrigerant

The refrigerant isobutene (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.

- **WARNING** — Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not

damage prior to proper disposal.

If the refrigerant circuit should be damaged:

- Avoid opening flames and sources of ignition.
- Thoroughly ventilate the room in which the appliance is situated.

It is dangerous to alter the specifications or modify this product in any way.

Any damage to the cord may cause a short circuit, fire, and/or electric shock.



Electrical safety

1. The power cord must not be lengthened.
2. Make sure that the power plug is not crushed or damaged.
A crushed or damaged power plug may overheat and cause a fire.
3. Make sure that you can access the main plug of the appliance.
4. Do not pull the main cable.
5. If the power plug socket is loose, do not insert the power plug. There is a risk of electric shock or fire.
6. You must not operate the appliance without the interior lighting lamp cover.
7. The fridge is only applied with power supply of single phase alternating current of 220~240V/50Hz. If fluctuation of voltage in the district of user is so large that the voltage exceeds the above scope, for safety sake, be sure to apply A.C. Automatic voltage regulator of more than 350W to the fridge. The fridge must employ a special power socket instead of common one with other electric appliances. Its plug must match the socket with ground wire.

Daily use

- Do not store flammable gas or liquids in the appliance, there is a risk of an explosion.
- Do not operate any electrical appliances in the appliance (e.g. electric ice cream makers, mixers etc.).
- When unplugging always pull the plug from the mains

socket, do not pull on the cable.

- Do not place hot items near the plastic components of this appliance.
- Do not place food products directly against the air outlet on the rear wall.
- Store pre-packed frozen food in accordance with the frozen food manufacturer's instructions.
- The appliance manufacturer's storage recommendations should be strictly adhered to. Refer to relevant instructions for storage.
- Do not place carbonated or fizzy drinks in the freezer compartment as it creates pressure on the container, which may cause it to explode, resulting in damage to the appliance.
- Frozen food can cause frost burns if consumed straight from the freezer compartment.
- Do not place the appliance in direct sunlight.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that do not set the appliance on fire.
- The appliance is intended for keeping food stuff and/or beverages in normal household as explained in this instruction booklet. You should take care when move it as the appliance is heavy.
- Do not remove or touch items from the freezer compartment if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.
- Never use the base, drawers, doors etc. to stand on or as supports.
- Frozen food must not be refrozen once it has been thawed out.
- Do not consume ice popsicles or ice cubes straight from the freezer as this can cause freezer burn to the mouth and lips.
- To avoid items falling and causing injury or damage to the appliance, do not overload the door racks or put too much food in the crisper drawers.

Caution!**Care and cleaning**

- Before maintenance, switch off the appliance and disconnect the mains plug from the mains socket.
- Do not clean the appliance with metal objects, steam cleaner, ethereal oils, organic solvents or abrasive cleansers.
- Do not use a sharp objects instead of a plastic scraper to remove frost from the appliance.

Installation Important!

- For electrical connection carefully, follow the instructions given in this manual. Unpack the appliance and check if there are damages on it.
- Do not connect the appliance if it is damaged. Report possible damages immediately to the place you bought it. In this case retain packing.
- It is advisable to wait at least four hours before connecting the appliance to allow the oil to flow back in the compressor.
- Adequate air circulation should be around the appliance, lacking this leads to overheating. To achieve sufficient ventilation, follow the instructions relevant to installation.
- Wherever possible the back of the product should not be too close to a wall to avoid touching or catching warm parts (compressor, condenser) to prevent the risk of a fire, follow the instructions relevant to installation.
- The appliance must not be locate close to radiators or cookers.
- Make sure that the mains plug is accessible after the installation of the appliance.


Service

 
- Any electrical work required to do the servicing of the appliance should be carried out by qualified electrician or competent person.
- This product must be serviced by an authorized Service Center, and only genuine spare parts must be used.
 - 1) If the appliance is Frost Free.
 - 2) If the appliance contains freezer compartment.

Installing your new appliance

Before using the appliance for the first time, you should review the following tips.

Ventilation of appliance

 In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator. It is advisable for there to be 50-70mm of space from the back to the wall, at least 100mm from its top, at least 100mm from its side to the wall and a clear space in front to allow the doors to open 135°. Please see the following diagrams.

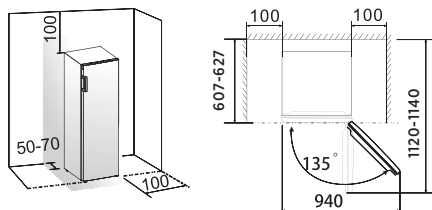

● Note:

This appliance performs well within the climate class from N to T showed in the table below. It may not work properly if being left at a temperature above or below the indicated range for a long period.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C

 
- Stand your appliance in a dry place to

avoid high moisture.

- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.


Leveling of appliance

- For sufficient leveling and air circulating in the lower rear section of the appliance, the bottom feet may need to be adjusted.
- You can adjust them manually by hand or by using a suitable spanner.
- To allow the doors to self-close, tilt the top backwards by about 10mm.

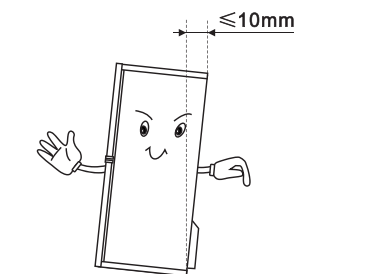

Door handle installation

 Take the handle and screws out of the bag, remove the handle covers from the handle, position the handle on the right side of door, fix it by screws and cover the handle covers.



 

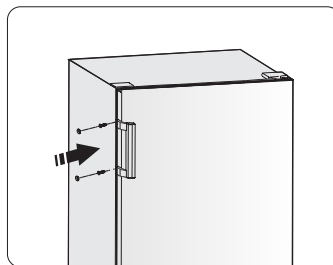

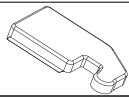


Reversing the door

The side at which the door opens can be changed, from the right side (as supplied) to the left side, if the installation site requires.


Warning! When reversing the door, the appliance must not be connected to the mains. Ensure that the plug is removed from the mains socket.

Tools you will need

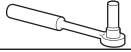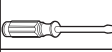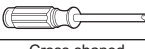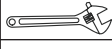Not provided		
		
8mm socket wrench	Thin-blade screwdriver	Putty knife
		
Cross-shaped screwdriver	Monkey wrench	8mm wrench
Additional parts(in the plastic bag)		
		
Left Hinge Cover		


Note: If required you may lay the refrigerator on its back in order to gain access to the base, you should rest it on soft foam packaging or similar material to avoid damaging the backboard of the refrigerator. To reverse the door, the following steps are generally recommended.

 1. Use a putty knife or thin-blade screwdriver to prize the screw hole cover which is at the top left corner of the refrigerator, and the upper hinge cover which is at the top right corner of the refrigerator.

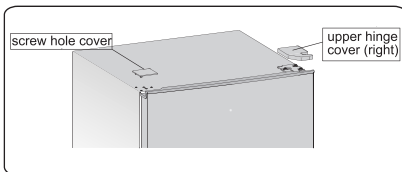


2. Unscrew the special flange self-

 tapping screws which are used for fixing the right upper hinge part by a 8mm socket driver or a spanner (please support the upper door with your hand when doing it).

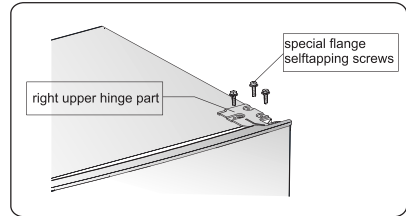


 3. Remove the upper hinge axis, transfer it to reversed side and tighten securely, then put it in a safe place.


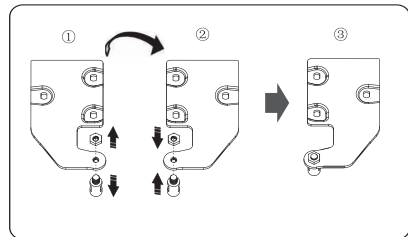


4. Remove the door from the lower hinge.

 
NOTE : When removing the door, watch for washer(s) between the lower hinge and the bottom of the lower door that may stick to the door. Do not lose.

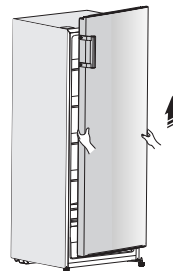

  5. Place it on a smooth surface with its panel upwards. Loose screw ② and part ①, then install them to the left side and tighten securely.

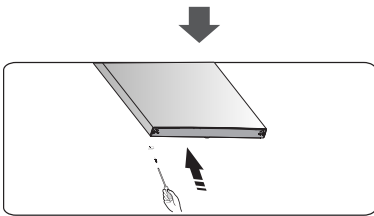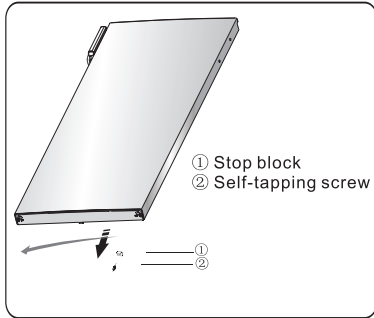


 6. Lay the refrigerator on soft foam packaging or similar material. Remove both adjustable bottom feet parts, and the lower hinge part by unscrewing the special flange self-tapping screws.

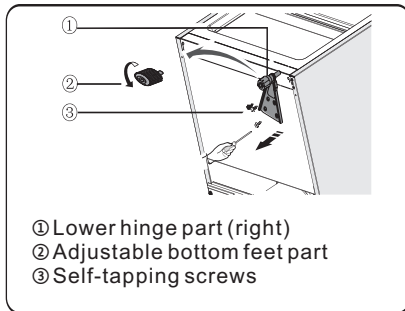


7. Replace the lower hinge part to the left side and fixing it with the special flange self-tapping screws. Replace

 
the adjustable bottom feet parts to another side and fixing it.

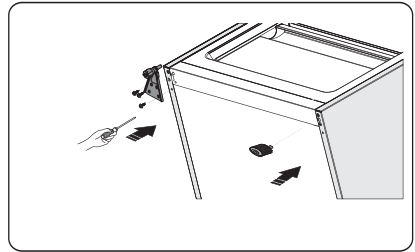

 
8. Transfer the door to the property position, adjust the lower hinge part, make the hinge axis into the lower hole of the door.

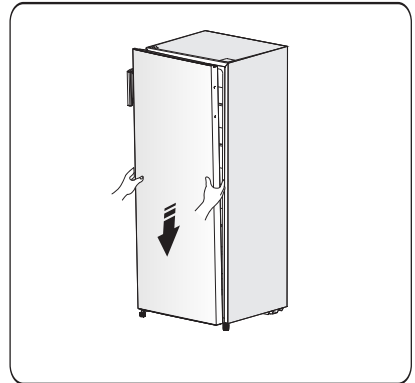

 
9. Transfer the upper hinge part and make the upper hinge axis into the upper hole of the door, and adjust the position of the door (please support the door with your hand when doing it), fixing the upper hinge part with the special flange self-tapping screws.

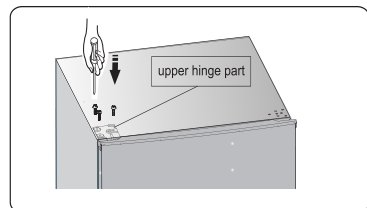

 10. Install the screw hole cover on the top right corner of the refrigerator. Install the upper hinge cover (which is in the plastic bag) on the left corner. Put the other upper hinge cover into the plastic bag.

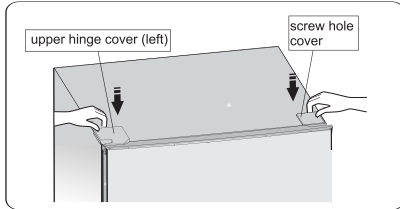

 11. Move the handle from the left side of door to the right side .

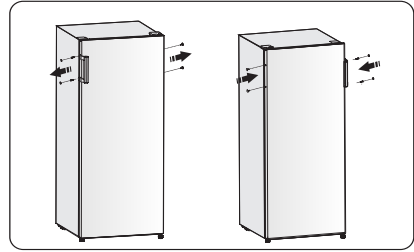


Warning!

When changing the side at which the door opens, the appliance must not be connected to the mains. Remove plug from the mains beforehand.

Description of the appliance

 View of the appliance

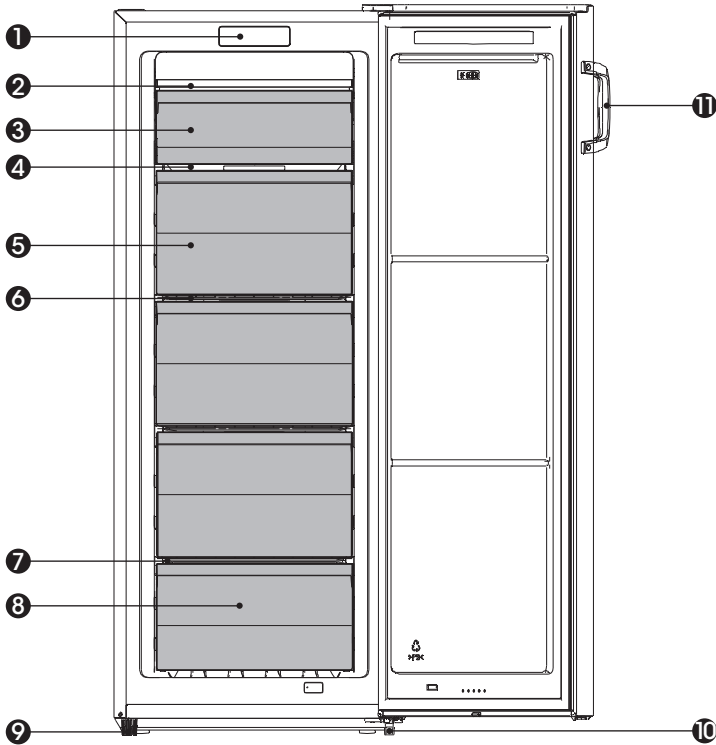

- | | |
|-----------------------|--------------------------------|
| ① Control panel | ⑦ Lower wire shelf |
| ② Wind channel | ⑧ Lower drawer |
| ③ Flap | ⑨ Left adjustable bottom foot |
| ④ Glass shelf | ⑩ Right adjustable bottom foot |
| ⑤ Middle drawers | ⑪ Door handle |
| ⑥ Middle wire shelves | |

Note!

- Due to unceasing modification of our products, your appliance may be slightly different from this instruction manual, but its functions and using methods remain the same.
- To get the best energy efficiency of this product, please place all shelves, drawers on their original position as the illustration above.
- If remove a drawer, please turn the wire shelf under the drawer up and down 180 degrees to get the best energy efficiency.

Display controls

The control panel that controls the temperature inside the freezer compartment is located inside the freezer. Use your appliance according to the following control regulations, your appliance has the corresponding functions and modes as the control panel showed in the picture below. When the appliance is powered on for the first time, the backlighting of the icons on display panel starts working. The doors are closed, the back lighting will turn off.



Controlling the temperature

Important!-Normally we recommend you set the temperature for the freezer to -18°C . If you want to change the temperature, follow the instructions below.

Caution!

When you set a temperature, you set an average temperature for the whole refrigerator cabinet.

Temperatures inside compartment may vary from the temperatures displayed on the panel, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.

Mode

Super Freeze

 
Super Freeze will quickly lower the temperature within the freezer so

food will freeze faster. This can lock in the vitamins and nutrients of fresh food and keep food fresh longer.


- Press “TEMP $^{\circ}\text{C}$ /Super freeze 3^{sec}” button after 3 seconds to select the Super Freeze function. The screen display “-24 ” and the indicator ❄️ will be on.
- For the maximum amount of food to be frozen, several hours before placing fresh food in the freezer compartment, switch on super freezing to prevent an unwanted temperature rise.
- If the freezing capacity according to the rating plate is to be used, switch on super freezing 24 hours before the fresh products are placed in the freezer compartment, Super freeze automatically quit after 52h.
- To switch off the “super freezing”, press the “TEMP $^{\circ}\text{C}$ /Super freeze 3^{sec}” button. If super freezing is switched off, the super indicator ❄️ will shut off simultaneously, and the appliance automatically switches to the temperature set prior to super freezing mode.

TEMP $^{\circ}\text{C}$

- You can press the “TEMP $^{\circ}\text{C}$ /Super freeze 3^{sec}” button to activate the mode to control the freezer temperature. When you press the button continuously, the temperature will be set as the following sequence.



Door Alarm

- If the door of freezer is open for over 1 minutes, the door alarm will sound and the indicator  begin to flash. The buzzer will stop alarming by press "ALARM" button and the indicator will be on but will stop flashing.

- To save energy, please avoid keeping the door open for a long time when using the appliance. The door alarm can be cleared by closing the door.

Using your appliance

This section tells you how to use most of the useful features. We recommend that you read through them carefully before using the appliance.

Using your freezer compartment

The freezer compartment is suitable for storage of food which need to be frozen, including meat, fish, ice cream, etc..

Caution! Ensure that bottles are not left in the freezer for longer than needed as freezing may cause the bottles to break.

Shelves

- The shelves are suitable for storing food.
- To remove the wire shelf: lift up at the front and pull out.

Important!

In order to make the most of the volume of the frozen-food storage compartment, the user can remove one or more drawers out of the appliance, according to your daily use.

If remove a drawer, please turn the wire shelf under the drawer up and down 180 degrees to get the best energy efficiency.

In order to save energy, do not take the bottom freezer drawer out.

Drawers

The drawers can be used to store frozen food.

Firstly Pull the drawer out in level, Secondly tip up it then you can take out the drawer.

According to the opposite sequence you can position the drawer rightly.

Caution! Never close the freezer door when the shelves, flap, drawers are extended. It may damage both them and freezer door.

Helpful hints and tips

Energy saving tips

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

Hints for freezing

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting food in the compartment.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminum foil or polyethylene food wraps which are air tight.
- Do not allow fresh, unfrozen food to touch the food which is already frozen to avoid temperature rise of the latter.
- Iced products, if consumed

immediately after removal from the freezer compartment, will probably cause frost burns to the skin.

- It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer.
- Once defrosted, food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly (at least every two months).

Warning!

The appliance must not be connected to the mains during cleaning as there is a danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

Wipe the control panel with a clean, soft cloth.

- Spray water on to the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.
- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

Caution!

Don't use sharp objects as they are likely to scratch the surface.
Don't use Thinner, Cardetergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

Interior cleaning

You should clean the appliance interior regularly. It will be easier to clean when food stocks are low. Wipe the inside of the freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a

wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and drawers. Thoroughly dry all surfaces and removable parts before putting them back into place. Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept too long. If the frost is too thick, choose a time when the freezer is nearly empty and proceed as follows:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the process.
2. When defrosting is completed, clean your freezer as described above.

Caution!

Do not use sharp objects to remove frost from the freezer compartment. Only after the interiors completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

Caution!

Only after the door seals are completely dry should the appliance be powered on.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible causes & Solutions
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	It is normal that the freezer is not operating during the defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned
	Some food, containers or wrapping cause odours.
Noise from the appliance	<p>The sounds below are quite normal:</p> <ul style="list-style-type: none"> • Compressor running noises. • Air movement noise from the small fan motor in the freezer compartment or other compartments. • Gurgling sound similar to water boiling. • Popping noise during automatic defrosting. • Clicking noise before the compressor starts.
	<p>Other unusual noises are due to the reasons below and may need you to check and take action:</p> <ul style="list-style-type: none"> • The cabinet is not level. • The back of appliance touches the wall. • Bottles or containers fallen or rolling.
The motor runs continuously	<p>It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances:</p> <ul style="list-style-type: none"> • Temperature setting is set colder than necessary • Large quantity of warm food has recently been stored within the appliance. • The temperature outside the appliance is too high. • Doors are kept open too long or too often. • After your installing the appliance or it has been switched off for a long time.

A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to the "Cleaning and care" chapter.
Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top.
Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors can't be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the waterspout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.

Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.


Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug.

Warning! Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damaged prior to proper disposal.

Correct Disposal of this product	
	<p>This symbol on the product or in its packing indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council your household waste disposal service, or the shop where you purchased the product.</p>

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- Two-star frozen-food compartments are suitable for storing pre-frozen food, storing or making icecream and making ice cubes.
- One-, two- and three-star compartments are not suitable for the freezing of fresh food.

Order	Compartments TYPE	Target storage temp.[°C]	Appropriate food
1	≤-18	(***)*-Freezer	Seafood(fish, shrimp, shell fish) freshwater aquatic products and meat products (recommended for 3 month, the longer the storage time, the worse the taste and nutrition), suitable for frozen fresh food.
2	≤-18	***-Freezer	Seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products (recommended for 3 months, the longer the storage time, the worse the taste and nutrition),are not suitable for frozen fresh food.
3	≤-12	** -Freezer	Seafood(fish, shrimp, shellfish) freshwater aquatic products and meat products (recommended for 2 month, the longer the storage time, the worse the taste and nutrition),are not suitable for frozen fresh food.
4	≤-6	*-Freezer	Seafood(fish, shrimp, shell fish) freshwater aquatic products and meat products (recommended for 1 month, the longer the storage time, the worse the taste and nutrition),are not suitable for frozen fresh food.
5	-6~0	0-star	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (Recommended to eat within the same day, preferably no later than 3 days). Partially encapsulated processed foods (non-freezable foods)

Note: please store different foods according to the compartments or target storage temperature of your purchased products.

-If the refrigerating appliance is left empty for long periods, switch off, clean, dry, and leave the door open to prevent mould developing within the appliance.

Hisense

life reimagined