

80L08080X

A

A

B

B

后附图纸两页

技术要求

- 1.材料：128g铜版纸，正反面印刷；
- 2.印刷为黑白单色印刷；
- 3.所有印刷内容正确、清晰，不得有漏印、误印，无印刷缺陷；
- 4.幅面：(290±1) X (210±1)，(单位：mm)；
- 5.未注公差按照GB/T 1804-m；
- 6.颜色及整体效果必须经过研发部确认后方能生产，产品检验以封样件为准；
- 7.符合RoHS现行标准要求和REACH指令。

C

C

D

D

英文  
2006359  
WFBL8014V

借(通)用件登记

旧底图总号

底图总号

128g铜版纸

洗衣机研发部

版本号	C	更改单编号	XECN004226
-----	---	-------	------------

重量	比例
----	----

快速指南

出图审查	设计	赵悦 2019.08.14	会签	刘松 2019.08.14
------	----	---------------	----	---------------

第 1 张 共 3 张

审核	崔维明 2019.08.14	会签	
----	----------------	----	--

日期	工艺	刘泽旺 2019.08.14	
----	----	----------------	--

图形识别符号

标准化	程木聪 2019.08.14	批准	石伟泽 2019.08.14
-----	----------------	----	----------------

X08080708




F

# WFBL8014V/WFBL8014VS/WFBL8014VT

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately.

- F. "Options" button
- G. "Favourite" button
- H. "Spin" button
- I. "Rinse" button
- J. "Temp." button

## Quick User Manual

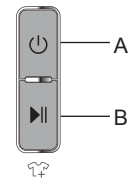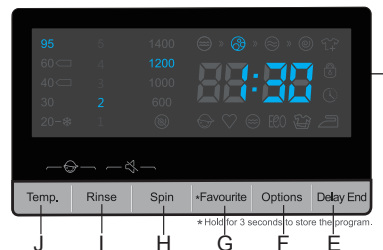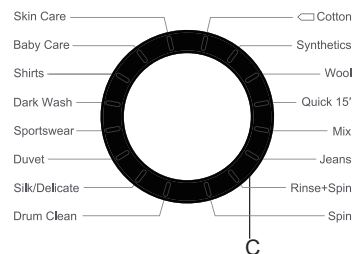

- A. "On/Off" button
- B. "Start/Pause" button
- C. Program selector
- D. Program and function status display window
- E. "Delay End" button



Program	Care Label	Material / Level of Soiling Washing temperature selected as per the Care Label instruction.	Maximum Wash Load kg	Detergent Compartment				Wash Program Functions							Maximum spin speed rpm	
				Prewash	Main wash	Softener	Delay end	Prewash	ECO	Intensive	Ironing Spin	Default rinse times	Temp.	spin speed		
Cotton --,20°C, 30°C, 40°C, 60°C, 95°C		Heavily and moderately soiled cotton, or linen. For very heavily soiled items select the "Prewash" function.	8.0	*	Yes	*	*	*	*	*	*	*	2	*	*	1400
Synthetics --,20°C,30°C, 40°C,60°C		Moderately soiled synthetics, cotton blended fabrics.	4.0	*	Yes	*	*	*	*	*	*	*	2	*	*	1200
Wool --,20°C,30°C,40°C		Machine washable wool. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	*	—	—	2	*	*	600	
Quick 15' --,20°C,30°C,40°C		Cotton, mixed fabrics. Items worn for a short time or newly bought.	1.0	—	Yes	*	*	—	—	—	—	1	*	*	1000	
Mix --,20°C,30°C,40°C		Mixed loads of moderately soiled cotton and synthetic fabrics.	4.0	*	Yes	*	*	*	*	*	*	*	2	*	*	1400
Jeans --,20°C,30°C,40°C,60°C		The program is suitable for jeans.	4.0	*	Yes	*	*	*	*	*	—	2	*	*	1000	
Rinse +Spin	—	This program is defaulted to two rinses and spin.	8.0	—	—	*	*	—	—	—	*	2	—	*	1400	
Spin	—	Select the length, and speed, of the spin manually.	8.0	—	—	—	*	—	—	—	*	0	—	*	1400	
Skin Care --,20°C, 30°C, 40°C	—	Extra rinse time. Making sure no residual detergent on textiles to protect skin form irritability.	4.0	*	Yes	*	*	*	*	*	*	*	3	*	*	1000
Baby Care --,20°C, 30°C, 40°C, 60°C, 95°C		Program to effectively extinguish bacteria in textiles. It is appropriate for clothes of babies who are sensitive to clothes.	4.0	*	Yes	*	*	*	*	*	*	*	3	*	*	1400
Shirts --,20°C, 30°C, 40°C, 60°C		Non-iron shirts or blouses made of cotton, linen, synthetic fibres or blended fabrics.	4.0	—	Yes	*	*	—	*	*	—	2	*	*	1000	
Dark Wash --,20°C, 30°C, 40°C, 60°C	—	Dark textiles made of cotton and dark easy-care textiles.	4.0	*	Yes	*	*	*	*	*	—	3	*	*	1000	
Sportswear --,20°C, 30°C, 40°C		Sportswear and leisure wear made from microfibre fabrics.	2.0	*	Yes	*	*	*	*	*	—	2	*	*	1000	
Duvet --,20°C, 30°C, 40°C		Machine-washable items stuffed with synthetic fibres, such as pillows, quilts and bedspreads; also suitable for items stuffed with down.	2.0	—	Yes	*	*	—	*	—	—	2	*	*	600	
Silk/Delicate --,20°C,30°C,40°C		Soft delicate fabrics and machine washable silk. (Refer to the washing label attached to the clothing).	2.0	—	Yes	*	*	—	*	—	—	3	*	*	600	
Drum Clean 95°C	—	Program to remove dirt and bacterial residue that can breed in the machine after it has been used for a period, especially when low temperature washes are used regularly.	—	—	Yes	—	*	—	—	—	—	1	—	—	600	

\* : Optional Functions      Yes : Detergent Required      — : Cannot be selected      -- : Temperature of unheated water

(1) Wash performance test programs are: cotton 60°C, maximum speed; cotton 40°C, maximum speed.      (2) Please select appropriate washing temperature according to instruction of care label attached to clothes, if not, clothes can be damaged  
 (3)Energy consumption 157 kWh per year, based on 220 standard washing cycles for cotton programmes at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used. Water consumption 10560 litres per year, based on 220 standard washing cycles for cotton programmes at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.

PARAMETER	
Model	WFBL8014V/WFBL8014VS/WFBL8014VT
Washing Capacity	8.0kg
Max.spin speed	1400rpm
Net Weight	70kg
Dimension(WXDXH)	595X610X845mm
Rated Voltage	220 -240V~
Heating Power	1900W
Washing Power	100W

## Add Detergent, Close the Door and Set the Program

Load the clothes to be washed in the drum and close the door. Add the detergent into the relevant compartments for the type of program you are going to select, Add detergent as described in **Detergent and Additives** section of **User's Operation Manual**.

- 1.Press the **“On/Off”** button.
- 2.Spin program selection button to required program, start up and default the program as “Cotton”.
- 3.Select washing temperature, spin speed and times of extra rinse by pressing “Temp”, “Spin” and “ Rinse” buttons.
- 4.Press “Options” button to select additional functions.
- 5.After starting the program, display window displays program length (hours: minutes), rinse times, washing temperature and additional function options in sequence.

## Addition function selection

At standby state, press “Options” button to select additional function for current program. Select only one function for each press, and then corresponding icon flashes. After starting up, program cannot be changed.

### Pre-wash

- Select the function to conduct pre-wash so as to enhance washing effects and better remove stains. This function is suitable for heavy dirt clothes.
- Before inflowing, laundry detergent/ washing powder can be added to pre-wash box, and washing powder must be added to main wash box.

### ECO

- The ECO indication lamp is on after the function is selected, the indication lamp and “.” will flicker synchronously from the start to end of the program, and the indication lamp will be off after the program ends.
- The ECO function is only added under the standby state of its applicable program, that is, before the program is started. After the program is started, the function cannot be selected.
- The weighing function will be cancelled, the temperature be reduced by 5 C and the main wash time be reduced after the function is selected.

### Intensive

- The function can be selected to prolong washing time, strengthen washing effects and better remove stain.

### Ironing Spin

After setting the ironing and dehydration function, the maximum dehydration speed shall not exceed 1000 rpm. The function cannot be selected if the speed over 1000 rpm has been selected before this function being set.

### Rinse

After setting the Rinse function, add a rinse process for one time before operating the softening program, so the total operating time correspondingly increases.

This function is selected in standby state and cannot be changed after starting.

After selecting the program, the default rinse times (including softening) will light up. Each time the Rinse key is pressed, one time rinse will be added to the default rinse times, increasing to 5 times at most.

### Inlet water warning

If tap is not opened, or water pressure is over low, inlet water fault icon will display, and display screen will prompt “F01” to give alarm.

### Drainage warning

If the pipe is squeezed, drainage will not be smooth. In case of failing to completely drain for long time, drainage fault icon will display, and display screen will prompt “F03” to give alarm.

### Door Lock Icon

After the program starts the Door Lock icon will light up and the door will be locked.

- After completing program, door lock unlocks automatically.
- During pause, if door opening condition can be met halfway, the door lock will unlock and its indicator light will go out.
- When door lock indicator light flashes, door shall not be opened forcibly so as to avoid personal injury.

### Delay End Function

Delay end function allows to run the machine at the consumers' convenience, for example, at night when electricity is cheaper.

- Only under the standby mode, this button is valid for selecting the reservation time.
- After the reservation function is selected, the time will increase 1h when each time the reservation button is pressed. Before reservation, if the program time does not satisfy the integral multiple of 1h, it shall be completed by pressing the reservation key for the first time, and then the time increases 1h when each time the reservation button is pressed. If the reservation is selected, before the program runs, the current reservation can be canceled by turning the button to select other programs.
- The delay time must be longer than the wash program length as the delay time is the time program will finish. For example: if the selected program time is 02:28, the delay time selected must be between 03:00 and 24:00.
- When the reservation process is operated, the icon of ‘reservation time’ will be on. When the reservation process is finished, the icon of ‘reservation time’ will be off, while the icon of the ‘remaining time’ will be on.

### Favourite

After selecting the program and setting each parameter and starting, long press the Favorite key for 3s to memorize the selected program, temperature, rotational speed and other related settings, and then the Favorite symbol lamp will be on.

Under the circumstance that the Favorite lamp is not on, short press the Favorite key, then the program will be switched to the program memorized last time; and meantime, the temperature, rotational speed and other parameters will automatically change into the parameters memorized last time. At this moment, if switching the program or pressing other keys, the panel will display a new program and parameters, and the Favorite symbol lamp will be off.

When the user uses it for the first time, if he/she has never long pressed the Favorite key to collect programs, he/she can short press the Favorite key and then the cotton linen program and its default settings will be collected by default.

### Mute Function

When the machine is in the state of holding, pause or operation, press **“Rinse+ Spin”** buttons for 2 seconds, The display will show “bEEP oFF” . All the buzzing will be turned off except the alarms.

When the machine is in the mute state, press **“Rinse + Spin”** buttons for 2 seconds until “bEEP on” appears. All the buzzing will be activated.

### Automatic weighting

Washing machine displays “----” after startup, indicating that it is weighing automatically. It will adjust program length (hours: minutes) automatically according to weight of clothes.

### Child Lock

To strengthen the safety of children, this machine is equipped with Child Lock function.

When the programme starts, press **“Temp. +Rinse”** button for 2 seconds. Child Lock icon will light up, and then Child Lock is set up. Repeat the same operation, the Child Lock will be released.

- When the Child Lock is set, all function buttons will be shielded.
- When you turn the machine off by pressing the **“On/Off”** button, child lock is released.
- After completing program, child lock will automatically unlock.

### To Start the Program

After you have selected your options and placed detergent within the detergent dispenser, turn on the water tap and press the **“Start / Pause”** button. The screen will display the current program progression with icons from left to right. It also displays the remaining program time.

### To Cancel the Program or Reselect the Options

- 1.Press the **“On/Off”** button for 2 seconds to turn off the machine.
- 2.Press **“On/Off”** button to turn on the machine. Select the new program and options.
- 3.Press **“Start / Pause”** to start the new program without adding any extra detergent.

 
 
### End of the Program

When programme finished its running, it will display **“End”**. If no operation is taken in 2 minutes, the machine will turn off automatically.

- 1.Press **“On/Off”** button for 2 seconds to turn off the machine;
- 2.Close the tap;
- 3.Open the door and take the washed clothes out;
- 4.Slightly open the door to remove moisture in the pump.

### Reload in Process

If you want to reload clothes in the process of washing, please press **“Start/Pause”** button.

- If reload icon  light up, the door can be opened in the process, remaining time and the Door Lock icon in display will flash. Then the Door Lock icon will go out, and the door can be opened.
- If reload icon  doesn't light up, the Door Lock icon doesn't flash, it indicates that current temperature is over 50 C or you have passed the time for reloading in the process, namely no clothes allowed to load into the machine.

### Programme Instructions

1. The standard 60 C and 40 C cotton programmes, referred to as ‘standard 60 C cotton programme’ and ‘standard 40 C cotton programme’, and that they are suitable to clean normally soiled cotton laundry and that they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry, in addition, the actual water temperature may differ from the declared cycle temperature.
2. The power consumption of the off-mode is 0.49W, and of the left-on mode is 0.49W.
3. The type of detergents suitable for the various washing temperatures.
4. The information of standard programmes:

	CO40 <sub>1/2</sub>	CO60 <sub>1/2</sub>	CO60
Main Wash Duration (Min)	168	198	198
Programme (Min)	215	245	244
Energy Consumption (kWh)	0.63	0.77	0.72
Water Consumption – Main Wash (L)	14.5	14.5	21.5
Total Water Consumption (L)	46	46	52
Remain moisture content (%)	52	53	51