
Installation instructions Gas hobs




The fitting of the appliance should only be carried out by a authorised person/licensed gasfitter. Please read the safety regulations. See the data plate for information regarding the total gas consumption, gas type and gas pressure.


Preparations for installation

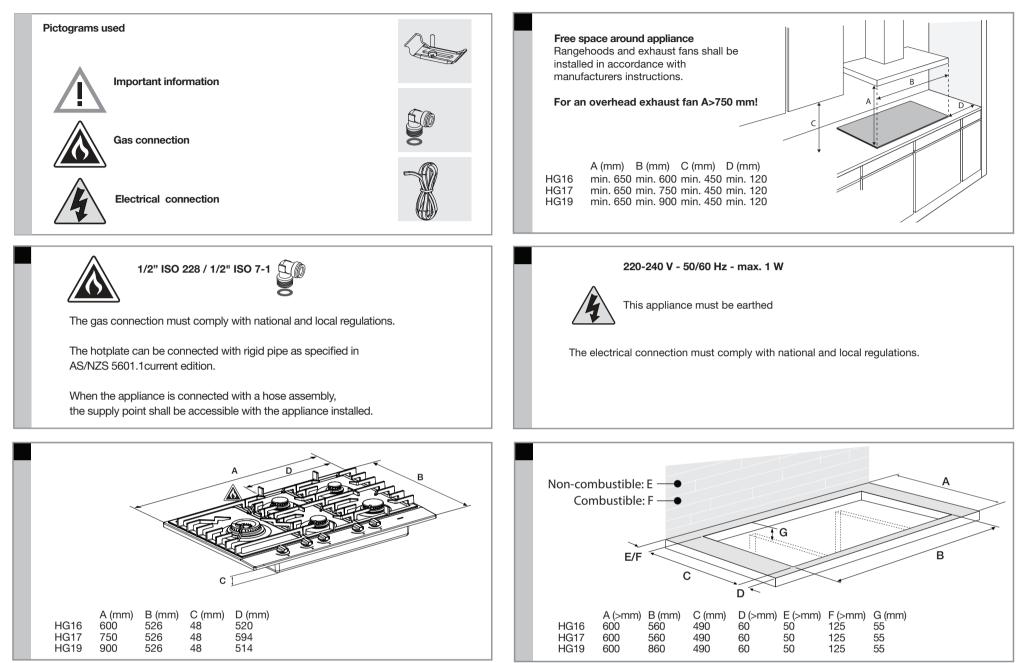


Prevent ventilation interference if an oven is installed underneath the gas hob!

Make sure there is sufficient air supply (option 1) **or** separate air ventilation between the oven and hob by applying an air shield 'P' (option 2). Also consult the installation instruction of the oven.

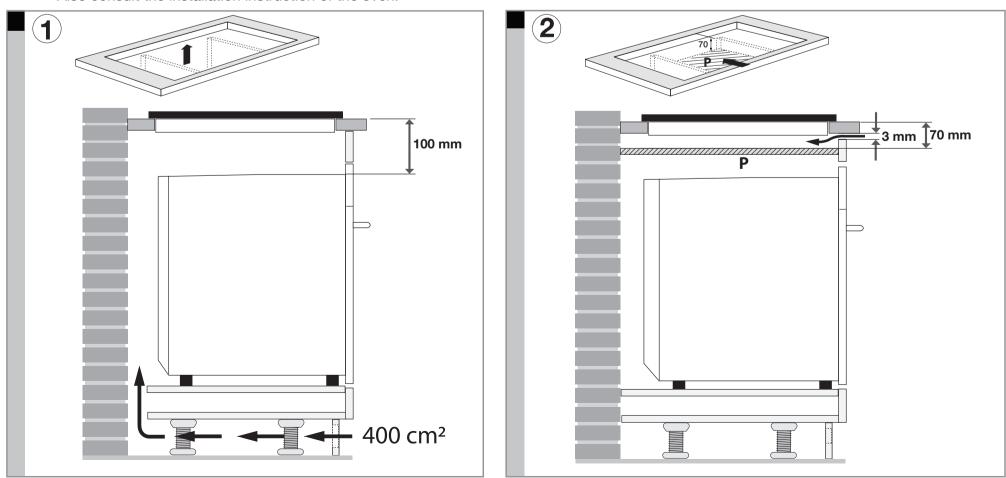


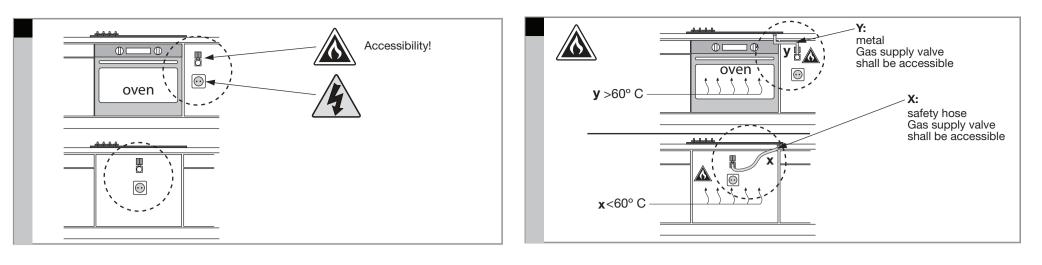




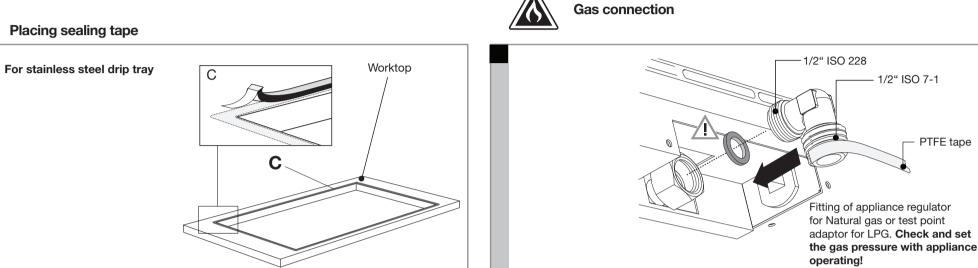



Building in

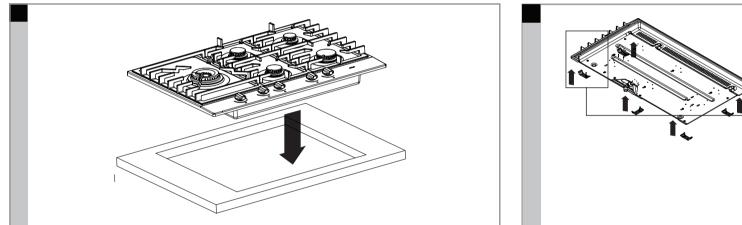

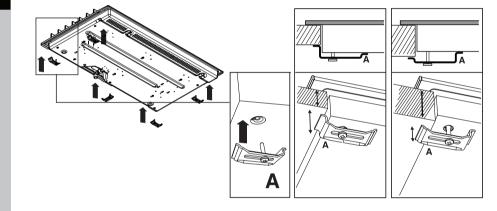

Connecting and testing

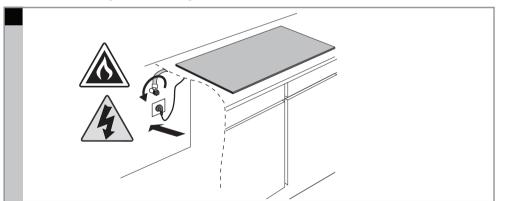

 





Small Medium Large HG16 1 2 - HG17 1 2 1 HG19 1 2 1	Wok 1 1 1
---	--------------------

Gas	Burner	Injector burner (mm)	Adj. Screw (mm)	Burner rate (MJ/h)	Gas pressure (kPa)
Natural gas (NG)	Small	0.90	0.45	4.00	1.0
	Medium	1.17	0.60	6.70	
	Large	1.31	0.65	8.60	
	Wok	1.70 + 0.66	0.60	15.70	
ULPG	Small	0.46	0.26	2.60	2.75
	Medium	0.60	0.30	4.90	
	Large	0.72	0.36	7.10	
	Wok	0.93 + 0.40	0.40	13.60	

