


EN

## WASHER-DRYER

Instructions for use

# **gorenje**

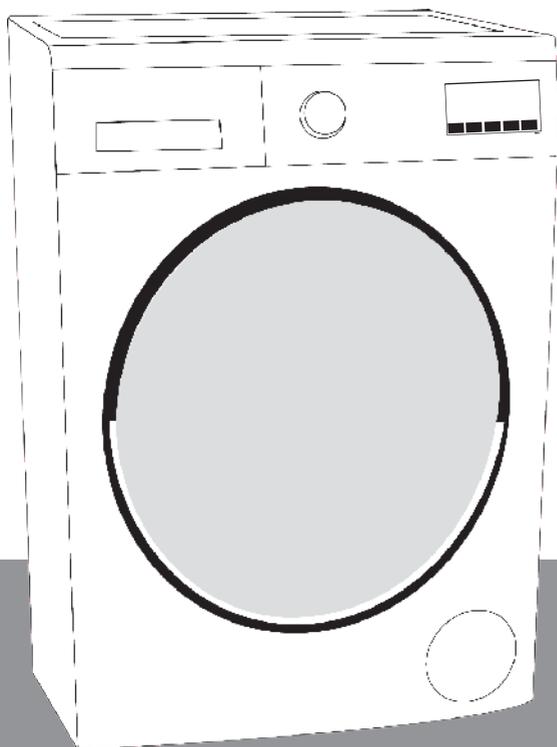

[www.gorenje.com](http://www.gorenje.com)

<b>BEFORE USING YOUR MACHINE</b>	<b>4</b>
Correct Use	4
<b>GENERAL WARNINGS</b>	<b>6</b>
Safety warnings	9
Burn risk!	9
Electrocution risk!	10
Explosion risk!	11
Fire risk!	12
Fall and injury risk!	14
Child safety!	15
<b>PACKAGING AND THE ENVIRONMENT</b>	<b>16</b>
Disposing of packaging and your old machine responsibly	16
<b>SAVINGS &amp; EFFICIENCY INFORMATION</b>	<b>17</b>
<b>OVERVIEW OF YOUR APPLIANCE</b>	<b>18</b>
General Appearance	18
Technical Specifications	20
<b>SETTING UP THE MACHINE</b>	<b>21</b>
Removing transportation safety screws	21
Placing the machine and adjusting the feet	23
Electrical connection	25
Water inlet connection	26
Water drain connection	27
<b>CONTROL PANEL</b>	<b>28</b>
Detergent drawer general view	30
Detergent drawer compartments	31
Programme knob	32
<b>WASHING OPERATION</b>	<b>33</b>
Sorting laundry	33
Explanation of washing symbols	34
Placing laundry into the machine	36
Choice of detergent and placing it into the machine	39

Programme selection	40
Auxiliary Functions	41
Twinjet system	42
Temperature selection	43
Spin speed selection	44
Auxiliary function for delay timer	45
Pre-wash function	46
Extra rinse function	47
Anti-allergic function	47
Stain level selection	48
Drying level selection:	50
Start/Pause button	54
Child Lock	55
Cancelling Programme	56
Finishing Programme	57
Warning symbols;	58
Programme table	60
Maintenance and cleaning of your machine	68
Water inlet filters	69
Detergent drawer	70
Liquid Detergent Apparatus (*)	70
Siphon cover	71
Body	71
Drum	71
Pump filter	72
Troubleshooting	74
Automatic fault warnings and what needs to be done	79
Automatic fault warnings and what to do	81
Practical information	82
Energy label and energy efficiency	86

# BEFORE USING YOUR MACHINE

## Correct Use



- **Read this user's manual.**
- **Your machine is designed to be used in domestic environments. Using it for commercial purposes shall cause your warranty to be void.**
- Do not let your pets near the machine.
- Please check the packaging of your machine before installation, and the outer surface of the machine after the packaging has been removed. Do not operate damaged machines or machines with opened packaging.
- Have your machine installed only by an authorised service company. Any intervention to your machine by anyone other than authorized services shall cause your warranty to be void.
- This appliance is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the use of the

appliance by a person responsible for their safety.

- Please use your machine for laundry that is specified as washable and dryable after washing by their manufacturer on their label.
- **You must remove the transportation safety screws before your machine's first use. The machine will malfunction if it is operated with the transport safety screws still in place and this will void your warranty.**
- Your machine warranty does not cover damage caused by external factors (floods, fire, rodents etc.)
- Please do not throw away this user manual. Store it in a safe place. It might be needed by you or the next user.

# GENERAL WARNINGS

- The necessary ambient temperature for your machine's ideal operation is 15-25°.
- Frozen hoses can tear and explode. In regions where the temperature is below zero, the electronic card may not operate safely.
- Please ensure that the clothes you will load into your machine do not have foreign objects (nails, needles, coins, lighters, matches, clips etc.) in their pockets. These foreign objects can damage your machine.
- As detergent or softener exposed to air for a long time may cause residues, only put your detergent or softener in the detergent drawer at the beginning of each wash.
- It is advised that you unplug your machine and close the water inlet tap if you will not use your machine for a long time. You should also leave the door of your machine open to prevent bad odours forming due to humidity.
- Some water might be left in your machine due to trials and tests conducted for Quality Control procedures during production. This causes no harm to your machine.
- Keep the document bag that came inside your machine that contains the user manual out of the

reach of children and babies to prevent the risk of suffocation.

- Keep the small parts found in the document part away from the reach of children and babies.
- Use pre-wash programmes only for very dirty laundry.
- You should not load your machine with the amount of laundry that will exceed the maximum laundry amount specified in the washing or drying programme you have chosen.
- In case of any malfunction, unplug the machine and close the tap first. Do not attempt to repair by yourself and consult the nearest authorized service company.
- Never open the detergent compartment when the appliance is running.
- Never force the door open when the appliance is running.
- Please adhere to the manufacturers' advice regarding the use of fabric conditioner or similar products you will use in your machine.
- While your machine is in the drying process, please do not stop your machine before the programme ends.
- If you have to do this, remove all your laundry quickly and spread it on an appropriate place immediately to allow it to cool down.
- Set up your machine in a place where its door can be completely opened. (Do not set up your machine

in places where its door cannot be fully opened.)

- Set up your machine in locations that can be ventilated and may have constant air circulation.



## **Safety warnings**

- **You must read these warnings. Ignoring these warnings may put you or your loved ones at risk of fatal injuries.**




## **Burn risk!**

- Do not touch the discharge hose or the water discharged during the discharging process as the appliance may reach high temperatures when running.
- Open the door of the machine all the way after the drying process. Do not touch the door glass. Burn hazard may occur due to high temperature.



## Electrocution risk!

- Do not use multiple plugs or extension cords.
- Do not plug in damaged plugs or plugs with torn cables.
- Never pull from the cable when unplugging.
- Grab the plug when unplugging.
- Do not plug in or out the plug from the receptacle with wet hands to prevent electric shock.
- Never touch the machine with a wet or damp hand or foot.
- Call the nearest authorized service company for assistance if the power cord malfunctions.

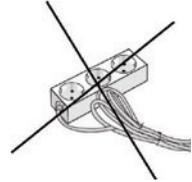



## **Explosion risk!**

- As there is a drying function on your machine, make sure that materials like stain removing chemicals or washing gas that you might have applied on your laundry earlier are properly rinsed and cleaned. Otherwise, there might be a risk of explosion when you run your machine with the drying function.



## Fire risk!

- Unwashed dry laundry must not be dried in your machine.
- Do not keep flammable or explosive liquids near your machine.
- Materials stained with food oil, acetone, alcohol, petrol, kerosene, stain remover, turpentine, beeswax and beeswax remover must first be washed with an extra amount of detergent and hot water before being put through the drying process. Otherwise, there might be a risk of fire when you run your machine with the drying function.
- If you're going to choose a washing and drying program, do not place a detergent dose adjustment device/ball into your machine. They might pose a fire risk.
- Laundry **must not be dried in the machine** under the conditions specified below due to the risk of fire:
  - If laundry is not washed.
  - If oil stains and other stains on the laundry (food oils, balms and cosmetic remains, kitchen towels etc.) are not cleaned enough.
  - Laundry cleaned with industrial chemicals.
  - Laundry that has high amounts of foam-sponge-rubber or rubber-like parts and accessories on.
  - Rubber, sponge (latex), shower bonnet,

watertight textile products, rubber-based objects and clothes or pillows filled with rubber sponge must not be dried in the washing machine with the drying function.

- Stuffed and damaged parts (pillows or jackets). The sponge parts dangling outside might catch fire during the drying process.
- The sulphur in paint-removing materials might cause corrosion. Thus, never use paint-removing materials in your machine.
- Please ensure that detergent cups are not left inside the laundry. These plastic cups might melt during drying and damage your machine and laundry.
- Laundry that has had a stain removal process applied must be rinsed thoroughly before washing.
- Never use products that contain solvent materials (like washing gas) in your machine.
- Remove all objects from the pockets of your laundry (needles, paperclips, lighters, matches etc.) when loading your machine. Fire and Explosion risk may occur.



## Fall and injury risk!

- Do not climb on your machine. The upper table of your machine may break and you might get injured.
- Tidy the hose, cable and packaging of your machine during installation. You might trip over and fall.
- Do not turn your machine upside down, or on its side.
- Do not lift your machine by holding it from extruding parts (detergent drawer, door). These parts might break and cause injury.
- There's a risk of tripping and injury if the materials like hoses and cables are not properly stored after your machine is installed.




Machine must be carried by 2 people or more.





## Child safety!

- Do not allow your children to play with the machine. It is an electrical appliance.
- Do not leave children unattended near the machine. Children might lock themselves into the machine.
- The door glass and machine surface might be extremely hot during your machine's operation.
- It is therefore especially important that children do not touch the machine as it may damage their skin.
- Keep the packaging material away from children.
- Poisoning might occur if the detergent and other washing aids are consumed, and eye or skin irritation might occur if they come into contact with the skin. Keep the cleaning materials where children cannot reach them.

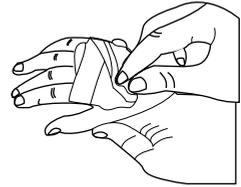

# PACKAGING AND THE ENVIRONMENT

## Disposing of packaging and your old machine responsibly

### Disposal of packaging materials

Packaging materials protect your machine from the damage that might occur during transportation. Please recycle your packaging materials.

Recycled material provides both raw material savings and decreases waste production

### Disposal of old machine

Old electrical appliances might still contain salvageable parts.

So, never throw your old devices that you do not use into the waste.

Ensure the parts of your old electronic or electrical devices are reused by giving them to your local recycling centre.

Please ensure your old appliances are kept in an appropriate place for the safety of children until they are taken outside the house




# **SAVINGS & EFFICIENCY INFORMATION**

Some important information to get more efficiency out of your machine:


- The amount of laundry you put in your washing machine should not exceed the maximum amount indicated. If you avoid overloading, your machine shall run more efficiently.
- Not using the pre-wash feature for normal and lightly soiled laundry shall save electricity and water.

# OVERVIEW OF YOUR APPLIANCE

## General Appearance

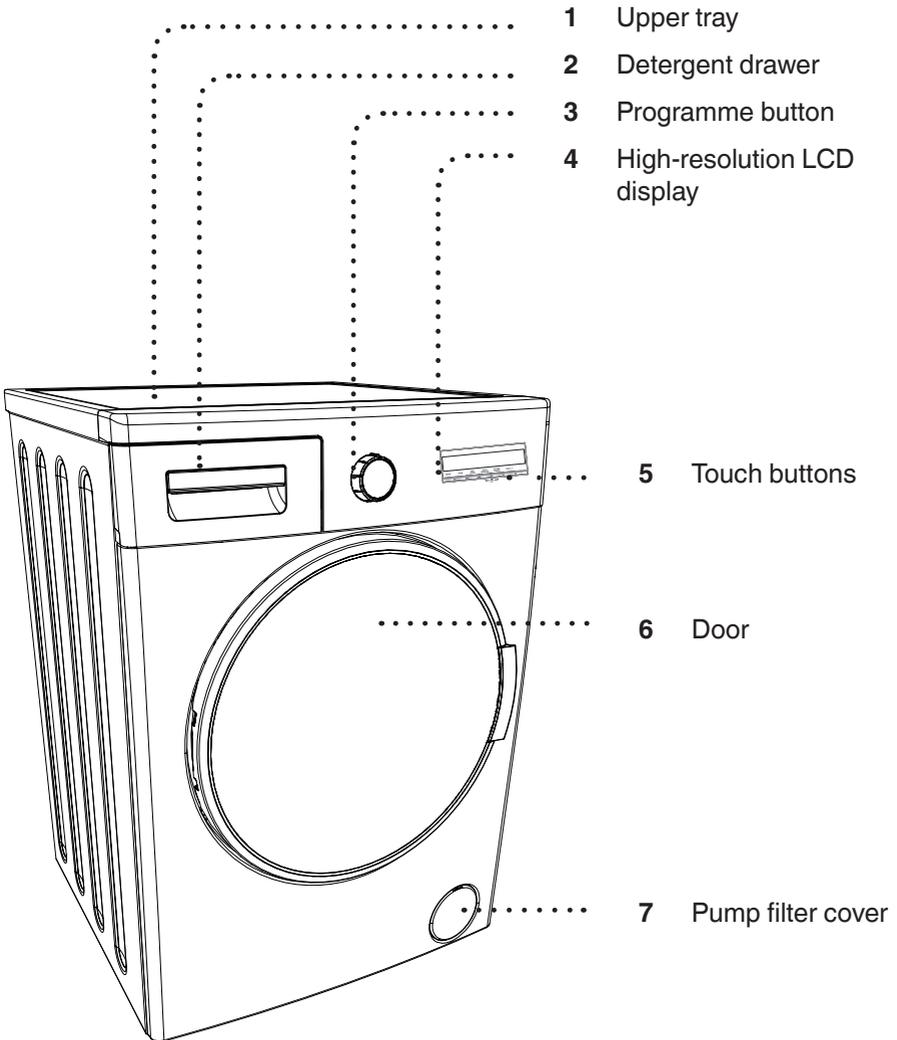

# General Appearance

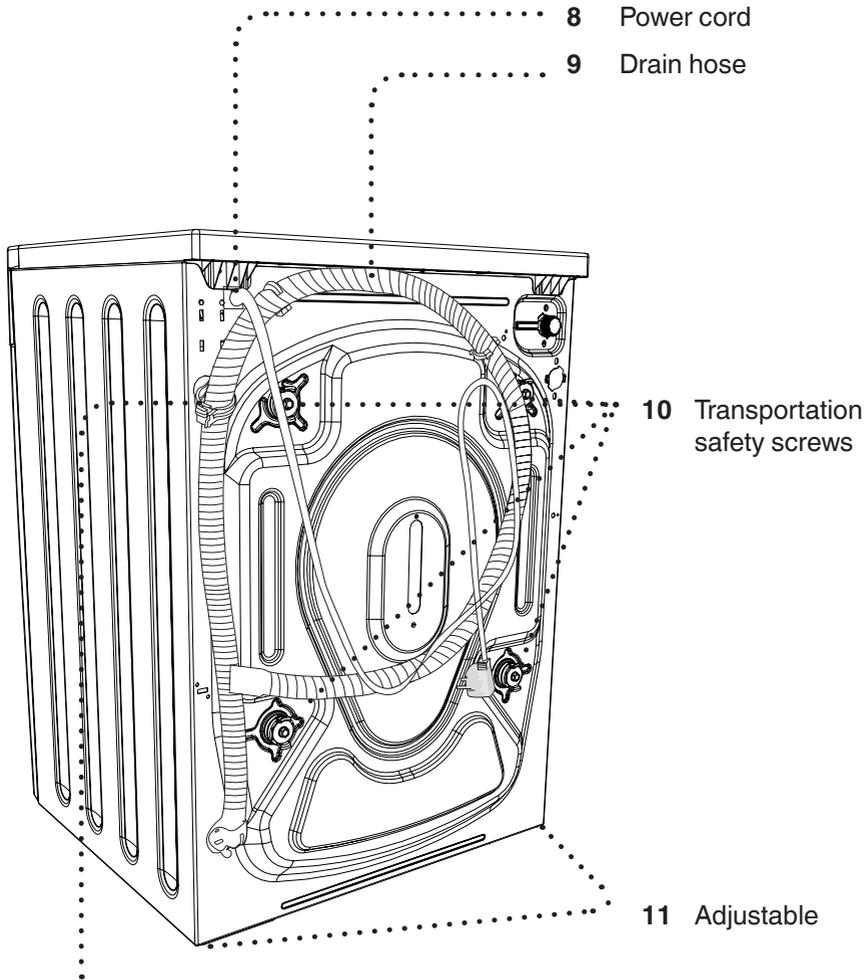

**12** Drain hose holding plastic:  
(The operation of the machine will be affected if this plastic part is removed. So please don't remove this plastic part under any condition.)

# Technical Specifications


Maximum washing capacity (dry laundry)(kg)	9.0
* Maximum drying capacity (kg)	6.0
Spin speed (rpm)	1400
Number of programmes	15
Operation voltage / Frequency (v / hz)	220-240 / 50
Water pressure (mpa)	Maximum: 1 Minimum: 0.1
Dimensions (HxWxD)(mm)	845x597x582
* You should not put dry laundry in your machine for drying.	

Energy consumption (washing, spinning, drying) (kWh/cycle)	6.12
Energy consumption (only washing and spinning) (kWh/cycle)	0.90
Water consumption (washing, spinning, drying) (l/cycle)	112
Water consumption (only washing and spinning) (l/cycle)	48


<b>EN 50229</b> standard-compliant control programmes
<b>Washing programme:</b>
<ul style="list-style-type: none"> <li>• 2. Programme “Cottons”, temperature 60 °C, maximum spin speed 1400 rpm, 9 kg laundry.</li> </ul>
<b>Drying Programmes:</b>
<ul style="list-style-type: none"> <li>• 1. Drying: 13. Programme “Cottons drying”</li> </ul>
<i>Drying level auxiliary function selection: Drying Level 2 (⏏)</i>
<i>Load group: (4.5 kg) (including a load group consisting of 1 bed sheet, 16 pillow slips)</i>
<ul style="list-style-type: none"> <li>• 2. Drying: 13. Programme “Cottons drying”</li> </ul>
<i>Drying level auxiliary function selection: Drying Level 2 (⏏)</i>
<i>Load group: (4.5 kg) (including a load group consisting of 2 bed sheets, 2 pillow slips and hand towels)</i>

# SETTING UP THE MACHINE


Have your machine installed only by an authorized service company.

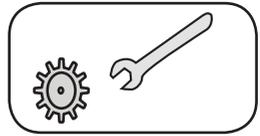


## Removing transportation safety screws

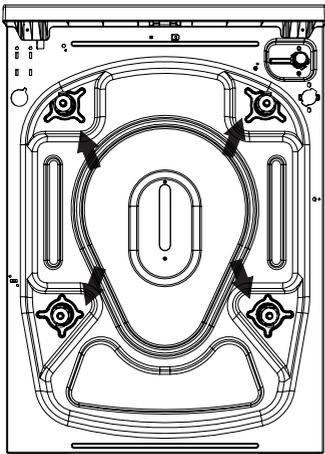

**Before operating your machine, you must remove the transport safety screws on the backside of the machine.**

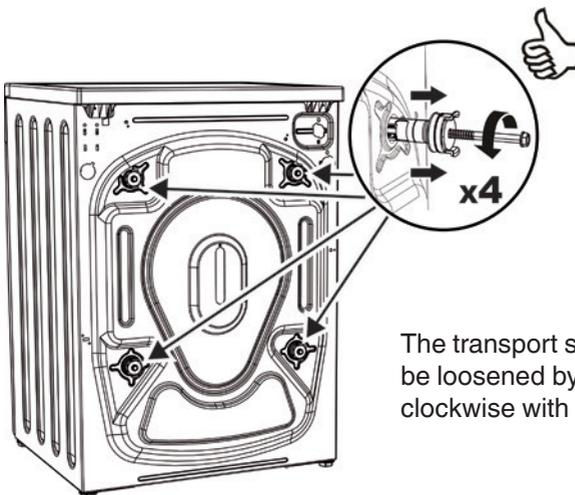

The transport safety screws should be loosened by rotating them counter clockwise with an appropriate wrench.

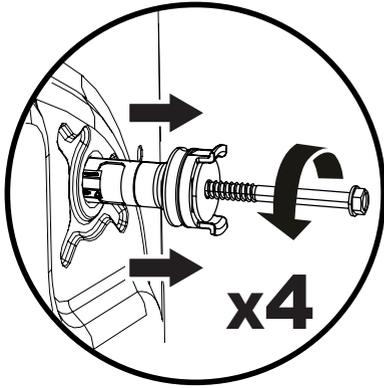


Transport screws should then be removed by pulling them out. The removed transport safety screws should be stored to be used again in case the machine needs to be transported again, e.g. if moving house.


**NOTE:**

You must remove the transportation screws from your machine before first use. Faults occurring in machines operated with transport screws still fitted shall be out of the scope of the warranty.

Place the plastic transportation screw caps found in the accessory bag in the gaps left by the transportation screws.

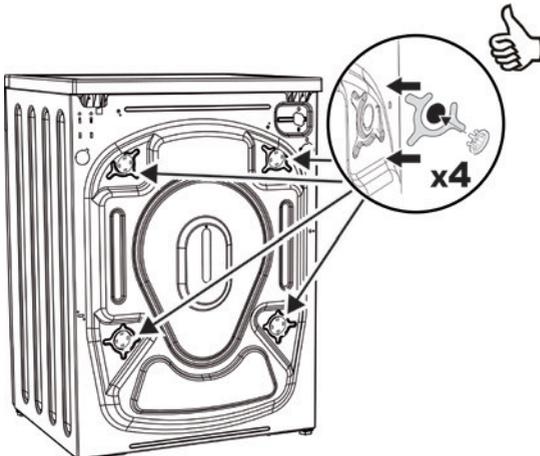


# Placing the machine and adjusting the feet

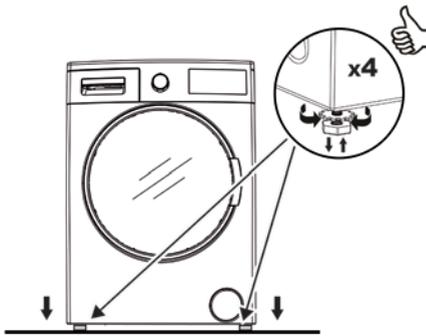

Do not install your machine on a carpet or such ground that will block ventilation from the base.


To ensure silent and vibration-free operation of your machine, it should be deployed on a non-sliding and firm ground.


You can adjust the balance of your machine by placing a spirit level on the top.

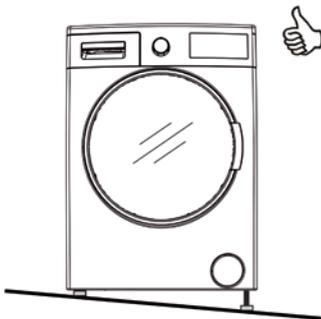

You can adjust the balance of your machine by means of the adjustable feet.

- Loosen the plastic adjustment nut.
- Adjust the feet upward and downward by rotating them.

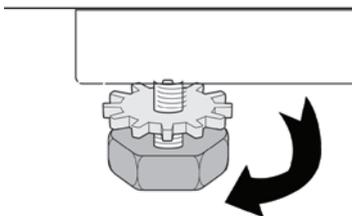

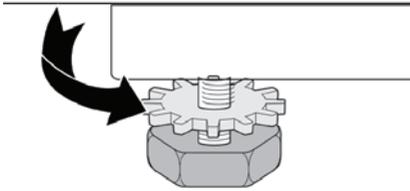

- Tighten the plastic adjustment nut after balance is achieved.




- Never put cardboard, wood or suchlike materials under your machine if you are intending to stabilize the distortions on the ground.
- When cleaning the ground on which your machine rests, be careful not to disrupt the machine's stability.



## Electrical connection



- Your washer-dryer is adjusted for 220-240V and 50Hz.
- The mains cord of your machine is equipped with a specific grounded plug.
- The mains plug should always be inserted into a grounded receptacle of 10 amperes. The fuse current value of the power line connected to this plug should also be 10 amperes.
- If you don't have such a receptacle and fuse, please have it done by a qualified electrician.
- We do not take responsibility for damages that occur due to ungrounded usage.

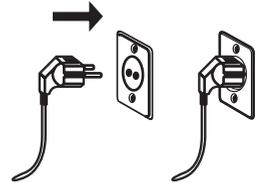


**Note:** Operating your machine under low voltage will cause the life cycle of your machine to be reduced and its performance to be restricted.

# Water inlet connection

- Operate your machine with cold water only.
- Use only the new water inlet hoses given with your machine or purchased through authorized dealers.
- 1 gasket is included in the hose packaging to prevent water leaks in connections. Fit this gasket to the end of the new water inlet hose on the side of the tap.
- Connect the white end of the water inlet hose to the water entrance valve on the back of the machine. Tighten the plastic parts on the hose using your hand.
- Connect the other end of the water inlet hose to a 3/4" water tap with threads. Tighten the plastic parts on the hose using your hand.
- In uncertain conditions, have the connection works done by a qualified plumber.
- Ensure that points of contact do not leak after you have made the connections.
- The flow of water with a pressure of 0.1-1 Mpa will allow your machine to operate more efficiently (0.1 Mpa pressure means that more than 8 litres of water will flow through a fully-opened tap per minute).
- Ensure that the new water inlet hoses are not bent, broken, crushed or resized.

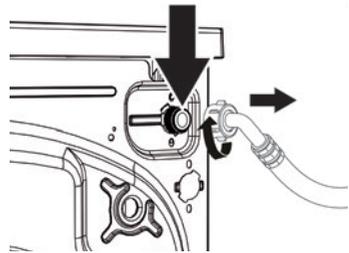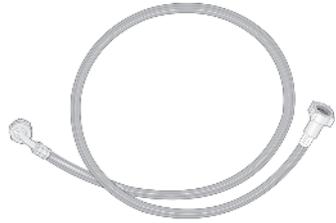


**Note:** Use only the new water inlet hose coming with your machine when making the water inlet connections. Never use old, used or damaged water inlet hoses.

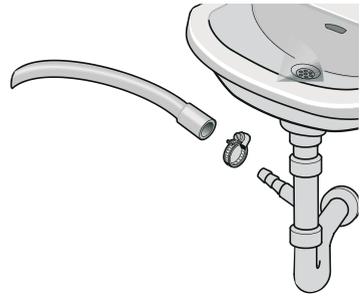


## Water drain connection

- Connect the water drain hose to a waste water drain hole or a special apparatus connected to the outlet elbow of the sink placed at a maximum height of 80 cm.
- Never attempt to extend the water discharge hose by jointing.
- Do not put your machine's water discharge hose into any container, bucket or bathtub.
- Make sure that the water discharge hose does not bend, buckle, get crushed or extended.

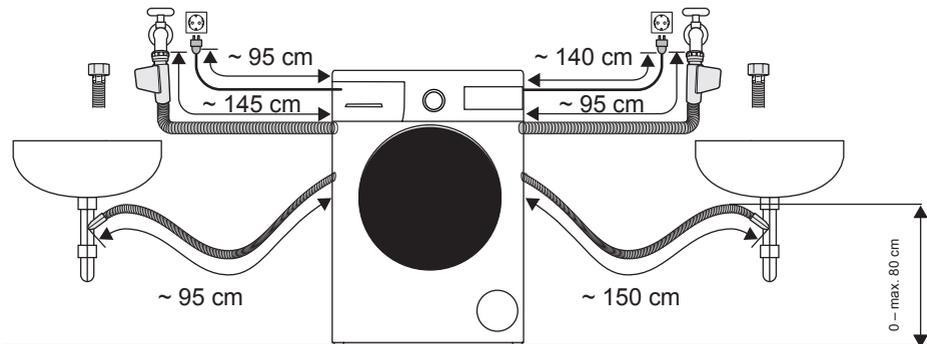


# CONTROL PANEL

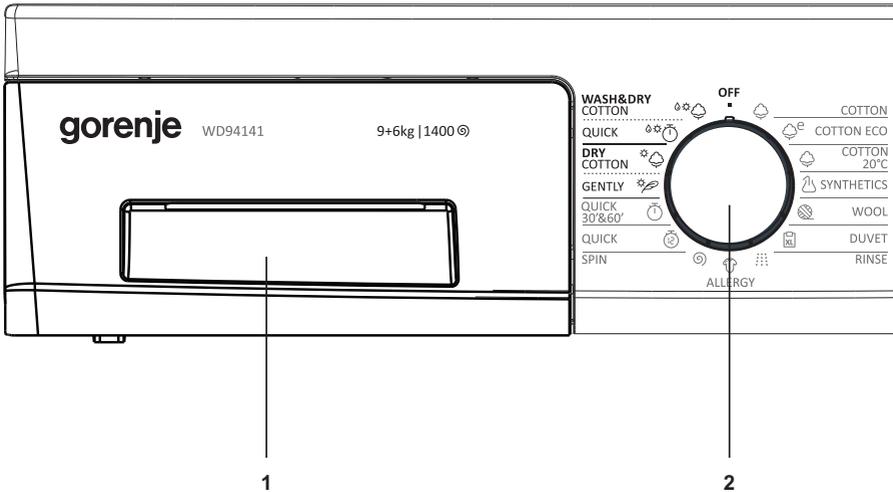

**1 Detergent drawer**

**2 Programme knob:**

You may select the programme you wish to use with the programme knob. You can select a programme by rotating the programme knob to either direction. Ensure that the programme knob is set exactly to the programme you want.

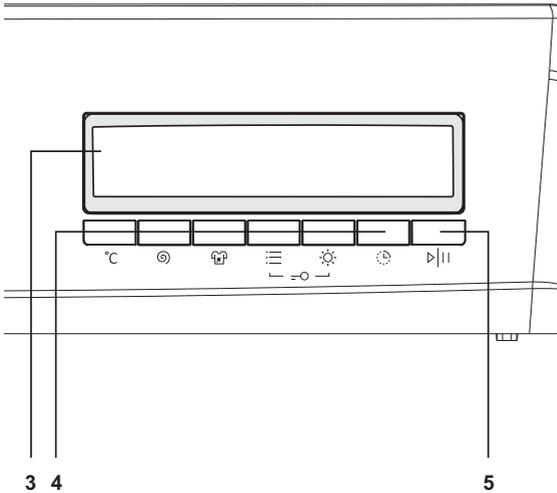

**3 LCD display:**

The display indicates the functions of the selected washing or drying program, and the appliance operation progress.


**4 Adjustment and additional function buttons:**

The buttons on your machine are touch buttons. You only have to touch them lightly to make a selection.

**5 Start/Pause button:**



You can start your machine and make it pause with this button.

# Detergent drawer general view

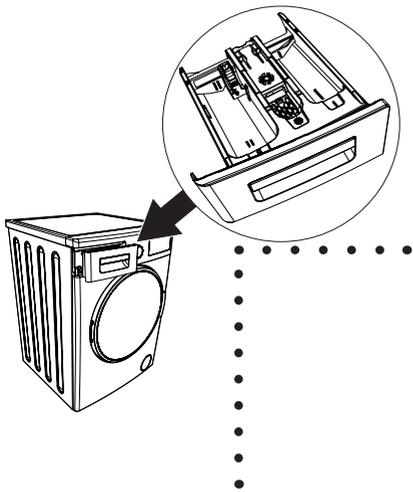

When you want to wash your laundry with liquid detergent, you can use the liquid detergent apparatus. You can use your liquid detergent in all programmes without pre-wash. For this, plug the liquid detergent apparatus to the second compartment of the detergent drawer (present in your machine) and adjust the liquid detergent amount (use liquid detergent in the amounts the detergent manufacturers foresee). Do not exceed the part that is labelled Max., use only for liquid detergent, remove this from its place during powder detergent use.)

(1)...

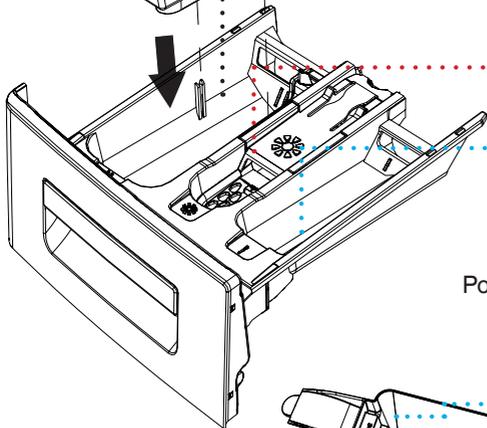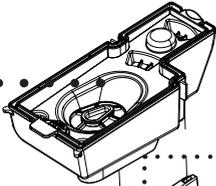


Main Wash Detergent Compartment

Softener Compartment

Pre-Wash Detergent compartment

Powder detergent level steps


(2)...

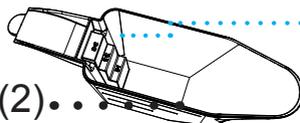


Powder detergent

(1,2) Model dependant


# Detergent drawer compartments

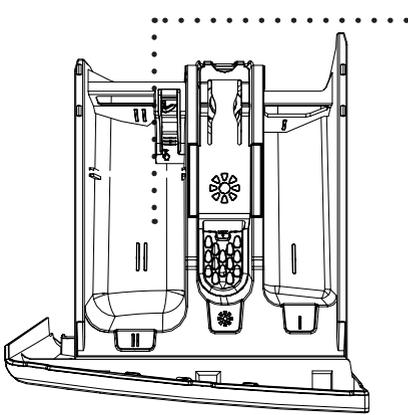

**Main wash detergent compartment:**  
In this compartment, use only materials like detergent (liquid or powder) or anti-lime. You can find the liquid detergent apparatus for your liquid detergent inside your machine during the first set up. (\*)

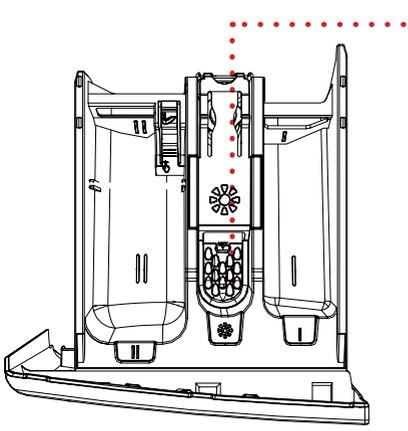


**Softener, starching, detergent compartment:**  
In this compartment, materials like softener for your laundry can be used (it is advised that you use the amount and type the manufacturer recommends). The softeners you use may sometimes remain in this compartment. The reason for this is that softener is too thick. To prevent this, it is recommended to use liquid softeners that are less thick, or dilute the softener.

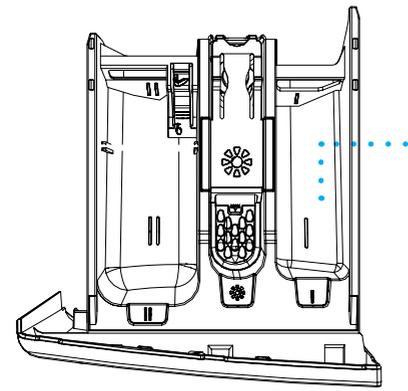

**Pre-Wash detergent compartment:**  
This compartment should be used only when the pre-wash feature is selected. It is recommended that the pre-wash feature is used only for very dirty laundry. Please refer to page 65 for the maintenance of the detergent drawer.

(\*) Model dependant

# Programme knob

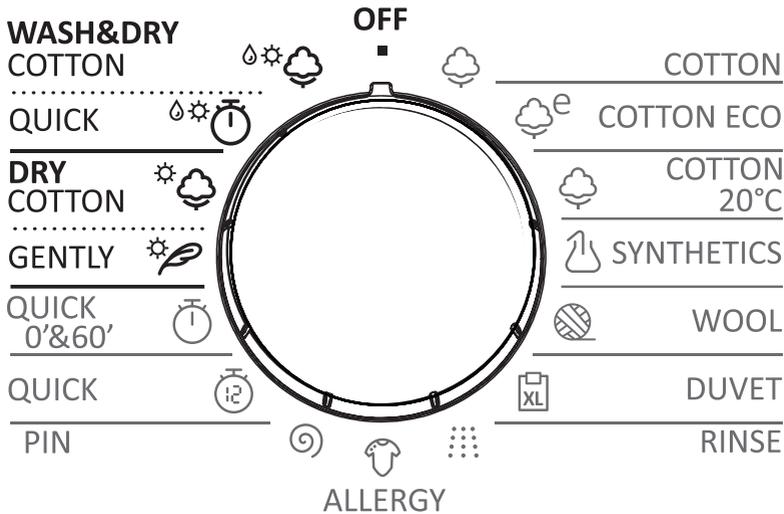


You can select the programme you want to wash your laundry in using the programme knob. You may set the programme selection by rotating the programme knob in either direction. Ensure that the programme button is exactly on the programme selected.


- You can see page (53) programme table for programme features.

# WASHING OPERATION

- Open the tap.

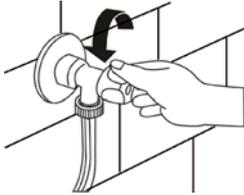

- Plug in your machine.

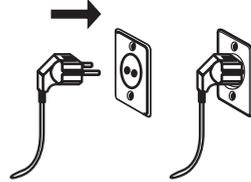


## Sorting laundry

Your laundry items have product labels on them that specify their appropriate washing conditions. Wash or dry your laundry according to the specifications on the product label.

- Sort your laundry according to their type (cotton, synthetic, delicates, wool, etc.), washing temperature (cold, 30 °C, 40 °C, 60 °C, 90 °C), their level of dirtiness (less dirty, dirty, very dirty).
- Never wash your coloured and white laundry together.
- Wash your coloured laundry items separately in the first washing as they may bleed.
- Ensure that there are no metallic materials on your laundry items or in the pockets; if you find any, take them out.

**WARNING:** Any malfunctions occurring due to foreign materials getting in your machine are not covered by warranty.

- Zip up and button up your laundry items.
- Remove the metallic or plastic hooks of curtains or place them in a washing net or bag and then secure them.
- Reverse textiles such as pants, knitwear, t-shirts and sweat suits.
- Wash socks, handkerchiefs and suchlike small laundry items in a washing net.

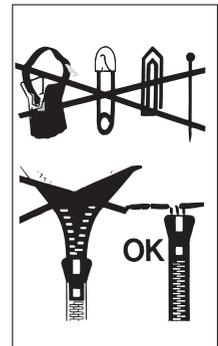

# Explanation of washing symbols



Sturdy Material



Delicate fabric



Maximum washing temperature is 95 °C



Maximum washing water temperature 60 °C



Maximum washing water temperature 40 °C



Maximum washing water temperature 30 °C



Hand washing



Dry cleaning only



Can be bleached in cold water



Do not use bleach



Ironing temperature maximum 200 °C



Ironing temperature maximum 150 °C



Ironing temperature maximum 110 °C



No ironing



Can be dry cleaned with all kinds of solvents



Can be cleaned only with perchloride, lighter gas, alcohol or R113.



Can be cleaned only with perchloride, lighter gas, alcohol or R113.



No dry cleaning



Leave on flat surface



Hang when wet



Dry by hanging



Drying in normal temperature dryer



Low temperature



Do not dry in dryer




# Placing laundry into the machine




**You must select a programme before loading your laundry into the machine. If you load laundry into the machine without selecting a programme, the load sensor will not be activated.**

**Note:** The maximum load capacity of your machine may change according to the programme you select. Do not exceed the maximum dry loading capacity indicated in the programme table for washing programmes. If you exceed the load capacity of the programme you selected,  symbol will be displayed on the screen of your machine and your machine will warn you with a sound. It is advised that you remove laundry from your machine until this symbol disappears.


- Open the loading door of your machine.
- Check inside the drum of your machine. There might be laundry left inside from previous washes. If there is, empty your machine before selecting your programme.
- Place your laundry items into the machine by spreading them well. Fold objects like quilts and blankets that you will load into the machine as shown below.

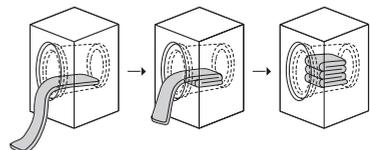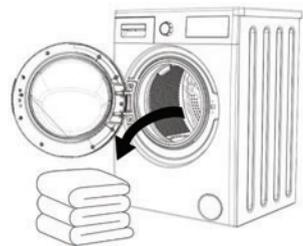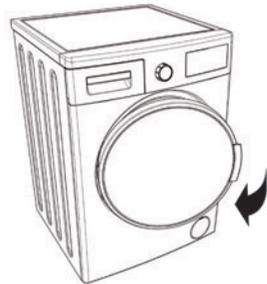

- There is a load detection system in your machine. The load detection system measures the weight of the laundry inside your machine and informs you by the moving sticks on the electronic screen and automatically adjusts the programme features (programme duration, energy consumption, water consumption etc.) according to the load amount.
- If you continue to operate your washing machine whilst overloaded, washing and drying performance will be affected. Additionally, your washing machine can be damaged and you may see your clothes get yellow after drying programmes.

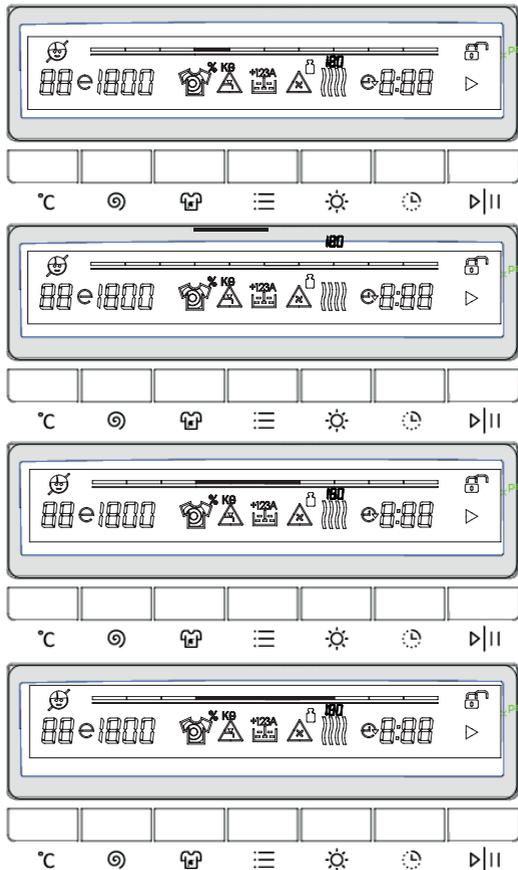

- Put each item of laundry in separately.
- Ensure that no laundry is stuck between the cover and bellow seal when closing the door of your machine.
- Ensure that the machine door is completely closed.
- Tightly shut the door of your machine or the machine won't start the washing operation.

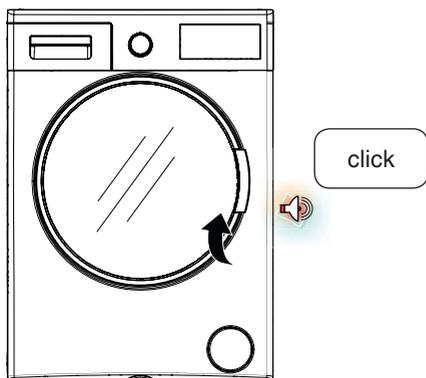

# Choice of detergent and placing it into the machine

The amount of detergent you will put in your machine will depend on the following criteria:

- Your detergent utilization will be based on how soiled the laundry is.
- Do not prewash your less stained laundry and put the correct amount of detergent in the 2nd compartment of the detergent drawer.
- The Pre-wash feature may be used for your very dirty laundry. If you are going to do a pre-wash, place 1/4 of the detergent you would normally put in the detergent compartment into the compartment numbered 1, and put the remaining 3/4 to the compartment numbered 2.
- Use detergents produced for automatic washing machines in your machine. Adhere to the advice of detergent manufacturers while determining the amount of detergent you should use with your laundry.
- The higher the degree of hardness of the water the more detergent you will use.
- The amount of the detergent you will use will increase as the amount of your laundry increases.
- Put the softener in the softener compartment in the detergent drawer. Do not exceed the MAX level. Otherwise, the softener will flow into the washing water through flushing.
- Softeners with high density are required to be thinned to a degree before being put in the drawer. Otherwise, the high-density softener will clog the siphon and block the flow of the softener.
- You can use your liquid detergent in all programmes without pre-wash. For this, plug the liquid detergent apparatus to the second compartment of the detergent drawer (present in your machine) and adjust the liquid detergent amount (use liquid detergent in the amounts the detergent manufacturers foresee). Do not exceed the part that is labelled Max, use only for liquid detergent, remove this from its place during powder detergent use.)

For positioning the detergent apparatus in the detergent box, see the page 30. (\*)





**If you are going to select a washing or drying programme, do not place a detergent dosage adjustment device/ball in your machine. They might pose a fire risk.**

(\*) Model dependant

# Programme selection

- Please select your desired washing / drying programme from the programme knob.

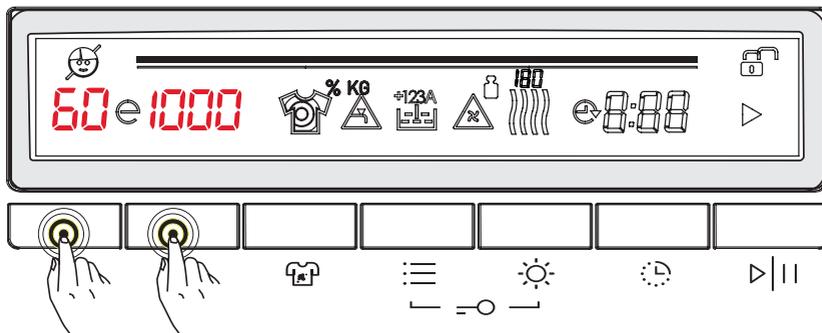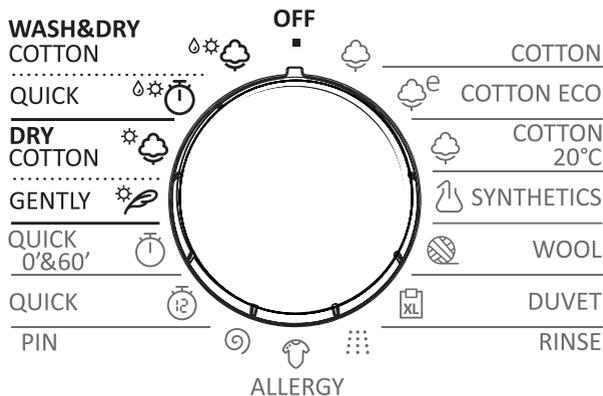

- Touch the temperature setting button (--, 30 °C, 40 °C, 40 °C e, 50 °C, 60 °C, 60 °C e, 70 °C, 80 °C, 90 °C) to adjust the temperature.
- Touch the spinning setting button (-, 400, 600, 800, 1000, 1200, 1400) to adjust the spinning setting.


**Note:** Once the spinning setting is made, if a drying programme is selected your machine will adjust the spinning automatically in order to increase its drying performance.

For programme features, see programme table on page (55).

# Auxiliary Functions

Before starting the programme, you can optionally select an auxiliary function.

- Press the button of the auxiliary function you would like to select.
- If an auxiliary function symbol flashes continuously on the electronic display, the auxiliary function you have selected will be activated.
- If an auxiliary function symbol blinks on the electronic display, the auxiliary function you have selected will not be activated.

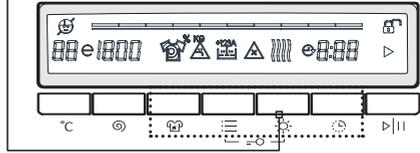

## Reason for non-activation:

- The auxiliary function you want to use in the washing programme you have selected is not applicable.
- Your machine has passed over the stage, during which the auxiliary function you would like to select would be implemented.
- It is not compatible with an auxiliary function you have selected previously.

## Half-Load Detection System

Your machine features a half-load detection system.


In case you put approximately half of the maximum laundry capacity or less in your machine, your machine will run so as to save washing time, water consumption and energy in some programmes. When the half-load function is active, the machine can complete the programme you have set in a shorter time.

# Twinjet system

Detergent water in your machine will be circulated with 2 water injection mechanisms and a mixing system via the twinjet system.

Circulated detergent water will be injected over your laundry, allowing a better washing performance.

The twinjet system will help you wash larger amounts of laundry in a shorter time with a better washing performance, guaranteeing less energy and water consumption.

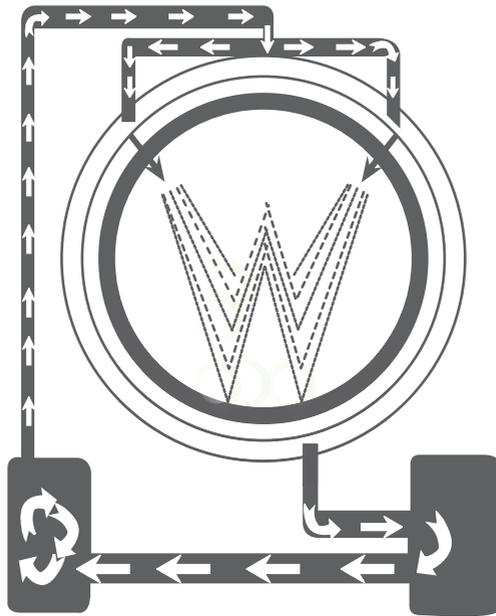

Twinjet unit


Pump unit

# Temperature selection

You can select the washing water temperature with the washing water temperature adjustment button.



Whenever you select a new programme, the maximum washing water temperature is shown on the washing water temperature display.

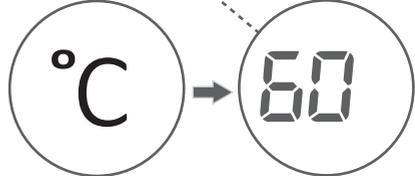

You can gradually decrease the washing water temperature between the maximum temperature and cold washing (--) by pressing the washing water temperature adjustment button.




If you have missed the washing water temperature you wanted, you can return to the intended temperature by continuously pressing the washing water temperature adjustment button.



## Spin speed selection

You can set the spin speed for your laundry with the revolution speed setting button.

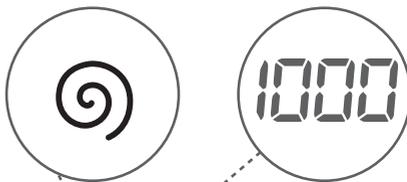


When you select a new programme, the maximum spin revolution speed of the programme you have selected will be viewed on the display of revolution speed.



You can gradually reduce the revolution speed between cancel spinning (-) options through to the maximum spin revolution of the programme selected by pressing the revolution speed setting button.




Če ste preskočili nastavitev hitrosti ožemanja, to lahko kasneje storite tako, da držite tipko za nastavitev hitrosti in tako ponovno spremenite število vrtljajev.

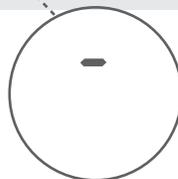

# Auxiliary function for delay timer

By using this auxiliary function, you can delay the start of your wash by a certain amount of time. This time can vary from an hour to 23 hours.

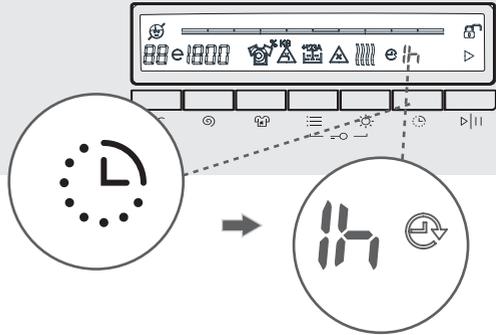

## To use the delay timer auxiliary function:

- Press the time delay button once.
- Expression of “0.5h” will appear on the display.
-  symbol will flash on electronic display.
- Touch the time delay button until the time after which you want washing operation to be started.

If you have skipped the time delay you want to set, you can go back to the time desired by keeping the time delay button pressed.

To run the time delay function, your machine is required to be operated by touching the Start/Pause button.

**Note:** After the time delay selection, you can select the other functions without touching the “Start/Pause” button and then you can activate the time delay function by touching the “Start/Pause” button.

## Canceling the Time Delay operation:

- If you want to cancel during the selection, touch the time delay button repeatedly until you see the duration of the programme you have selected on the electronic display. When you see the duration of the programme on the electronic display, the time delay is cancelled. (When the time delay button is touched continuously, the delay duration shall constantly rotate in its values.)
- If you want to cancel the time delay operation after you touch the “Start/Pause” button, it will be enough to touch the time delay button just once. The symbol will go off on the electronic display, you should touch “Start/Pause” button for your machine to start washing operation.

# Pre-wash function

You can give your heavily soiled laundry a pre-wash before the main wash using this function. When using this function, you should put detergent in the front washing compartment of the detergent drawer.




- Touch the  symbol button to activate the pre-wash additional function.

**Note:** If the  symbol is not displayed on the screen when you want to choose the pre-wash additional function, it means that this feature cannot be used in the washing programme you selected.

# Extra rinse function

You can add an additional rinse or rinses to your laundry by using this function. Your machine offers you 3 rinsing options for this additional feature.

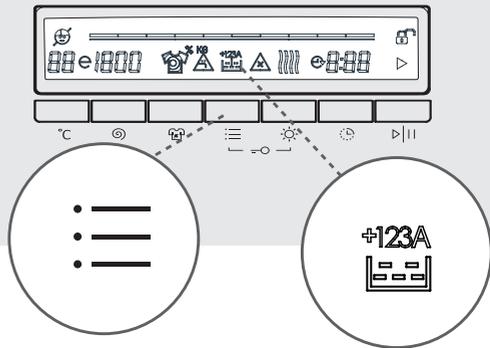

One additional rinse is performed at the end of washing.



Two additional rinses are performed at the end of washing.



Three additional rinses are performed at the end of washing.

- If you want to perform more than one rinse, touch the  symbol button until you see the number of rinses you wish.

**Note:** If the  symbol is not displayed on the screen when you want to choose the additional rinsing function, it means that this feature is not used in the washing programme you selected.

# Anti-allergic function

You can add this additional rinse operation to your laundry by using this function. Your machine will carry out all rinsing steps with hot water (it is recommended for laundry worn on delicate skin, baby clothes and underwear)

- Touch the  symbol button until you see the  symbol to activate the anti-allergic additional function.


**Note:** If the  symbol is not displayed on the screen when you want to select the anti-allergic additional function, it means that the washing programme you selected does not use this feature.

# Stain level selection

You can change your wash settings according to how dirty on your laundry is and have your laundry washed in less or more time, at a lower or higher temperature.

The stain levels are automatically set in certain programmes. You can make changes as you like.

**Note:** If no change occurs when you touch the dirtiness level button, this means there is no dirtiness level selection in the programme you have selected.

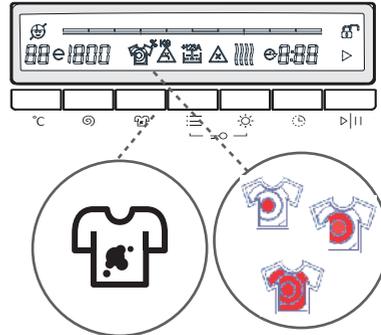

Little dirt (no pre-washing)



Dirty (apply pre-washing if necessary.)



Very dirty (apply pre-washing if necessary.)


PROGRAMMES	DIRTINESS SELECTION	FACTORY DEFAULT	SELECTABLE LEVELS	
Cotton	S	Dirty	Very dirty	Little dirt
Cotton eco	S	Dirty	Very dirty	Little dirt
*Cotton 60 e	S	Dirty	Very dirty	Little dirt
*Cotton 40 e	S	Dirty	Very dirty	Little dirt
Eco 20 °C	NA	Little dirt	NA	NA
Synthetics	S	Very dirty	Little dirt	Dirty
Wool	S	Little dirt	Dirty	Very dirty
Duvet	S	Little dirt	Dirty	Very dirty
Rinse	NA	Little dirt	NA	NA
Allergy safe	NA	Dirty	NA	NA
Spin	NA	Little dirt	NA	NA
Rapid 12 min.	NA	Little dirt	NA	NA
Daily 60 °C	S	Dirty	Little dirt	NA
Gentle Dry	NA	Little dirt	NA	NA
Cotton Dry	NA	Little dirt	NA	NA
Quick Wash & Dry	NA	Little dirt	NA	NA
Cotton Wash & Dry	NA	Little dirt	NA	NA
S: Selectable                      NA: Not available				

\* Energy label declaration programmes

# Drying level selection:

## If you would like to dry your laundry after washing;

- You can select the drying level you desire by touching the drying level selection button.
- Level 1 » ||| «, Level 2 » |||| «, Level 3 » ||||| « symbols shall be displayed on the display of your appliance when you press the drying level button.

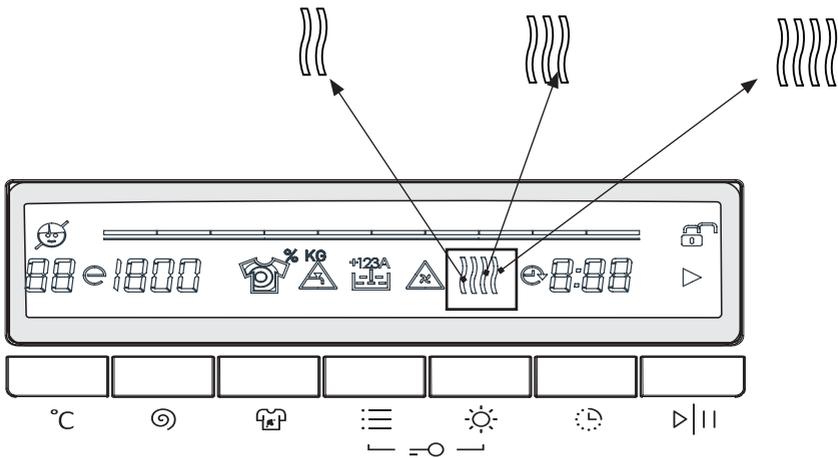


- Level 1 » ||| « : Recommended for laundry that will be ironed before using. If you would like to select the » ||| « feature, press the drying level button until you see the » ||| « symbol on the display.
- Level 2 » |||| «: Recommended for laundry that requires hanger drying. If you would like to select the » |||| « drying feature, press the drying level button until you see the » |||| « symbol on the display.
- Level 3 » ||||| «: Recommended for laundry that will be folded and put to the wardrobe after the end of the programme. If you would like to select the » ||||| « drying feature, press the drying level button until you see the » ||||| « symbol on the display.

**Note:** If no change occurs when you touch the drying level button, this means there is no drying level selection in the programme you have selected.

**If you want to select the drying duration for your laundry at the end of the washing cycle:**

- You can select the drying duration you want by touching the drying level button.
- When you touch the drying level button, the display of your machine will display the selected drying level 1 » ||| «, level 2 » |||| «, level 3 » ||||| «.

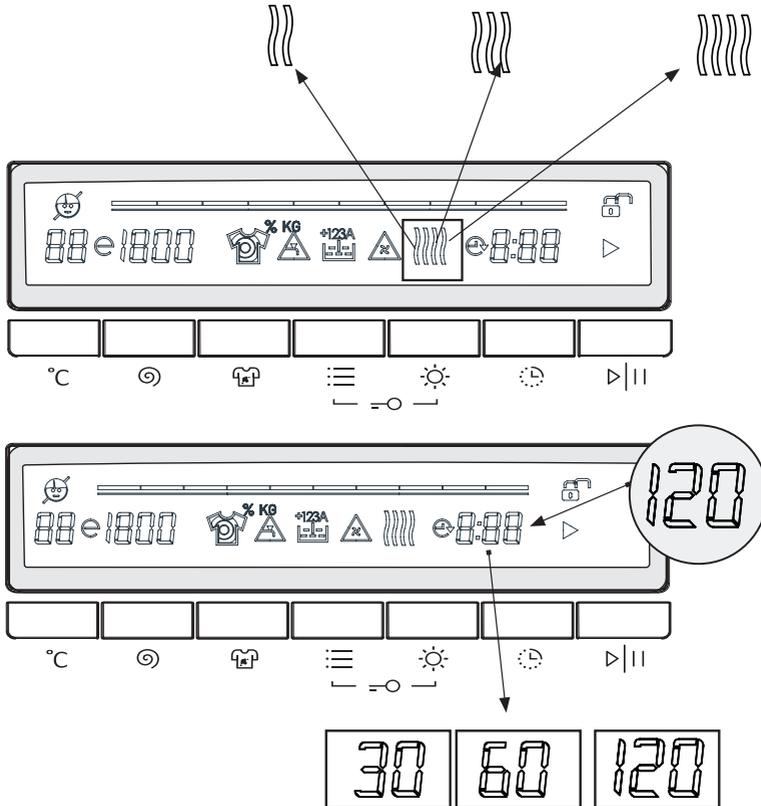

If you keep touching the button you will see the drying duration (30 min, 60 min, 120 min) options on the screen. You can select the drying duration you desire.

**Note:** If the 30 min, 60 min, 120 min durations do not appear on the screen when you want to select the drying duration feature, it means this drying feature is not used for the washing programme you have selected.

## Drying level selection:

Please see the selection table chart for drying level and duration.

Programmes	Drying option	Drying profile	Default Dry Level	Selectable Dry Levels		
				1	2	3
Cotton	S	Cotton Dry	Level 1	1	2	3
Cotton eco	S	Cotton Dry	-	1	2	3
Eco 20 °C	S	Cotton Dry	-	1	2	-
Synthetics	S	Gentle Dry	-	1	2	3
Wool	NS	-	-	-	-	-
Duvet	NS	-	-	-	-	-
Rinse	S	Cotton Dry	-	1	2	3
Allergy safe	S	Cotton Dry	-	1	2	-
Spin	S	Cotton Dry	-	1	2	3
Rapid 12 min.	S	Cotton Dry	-	1	-	-
Daily 60 °	S	Cotton Dry	-	1	2	-
Gentle Dry	S	Gentle Dry	Level 1	1	-	3
Cotton Dry	S	Cotton Dry	Level 1	1	-	3
Quick Wash & Dry	NS	Cotton Dry	Level 1	-	-	-
Cotton Wash& Dry	S	Cotton Dry	Level 3	1	-	3

S. Selectable NS: No selection


Selectable drying duration levels			
Cotton	30	60	120
Cotton eco	30	60	120
Eco 20 °C	30	60	120
Synthetics	30	60	120
Wool	-	-	-
Duvet	-	-	-
Rinse	30	60	120
Allergy safe	30	60	120
Spin	30	60	120
Rapid 15 min.	30	60	120
Daily 60°	30	60	120
Gentle Dry	30	60	120
Cotton Dry	30	60	120
Quick Wash & Dry	-	-	-
Cotton Wash& Dry	30	60	120

Table: Recommended drying levels according to load amount

	1–2 kg	3–4 kg	5-6 kg
Dry Level 1	✓	✓	✗
Dry Level 2	✗	✓	✓
Dry Level 3	✗	✓	✓

# Start/Pause button

By touching the Start/Pause button, you can start the programme you have selected or suspend a running programme. When you want to start your machine, the symbol  will be displayed on the screen. When you switch your machine to the standby mode while running, the symbol  will flash on the display.

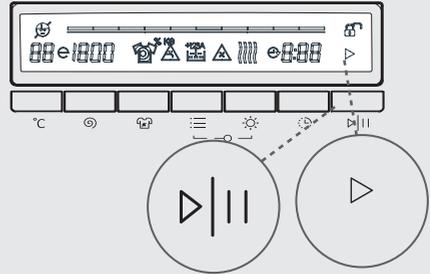


## Main symbol explanations

-  Start/Pause symbol
-  Door lock active/ Door lock not active
-  Washing Programme remaining duration and delayed start remaining duration
-  Delayed Start symbol
-  Extra rinsing and anti-allergic auxiliary function symbol
-  Pre-washing indicator symbol
-  Pump malfunction symbol
-  Water cut off malfunction symbol
-  Stain level symbol
-  Spin speed indicator symbol
-  Economic washing temperature indicator symbol
-  Washing temperature indicator symbol

# Child Lock

To avoid the programme flow from being affected if programme buttons are pressed or the programme button is turned when your machine is in the middle of a washing cycle, the Child Lock function is available. Child lock will be activated by pressing both auxiliary functions 4 and 5 at the same time for more than 5 seconds.

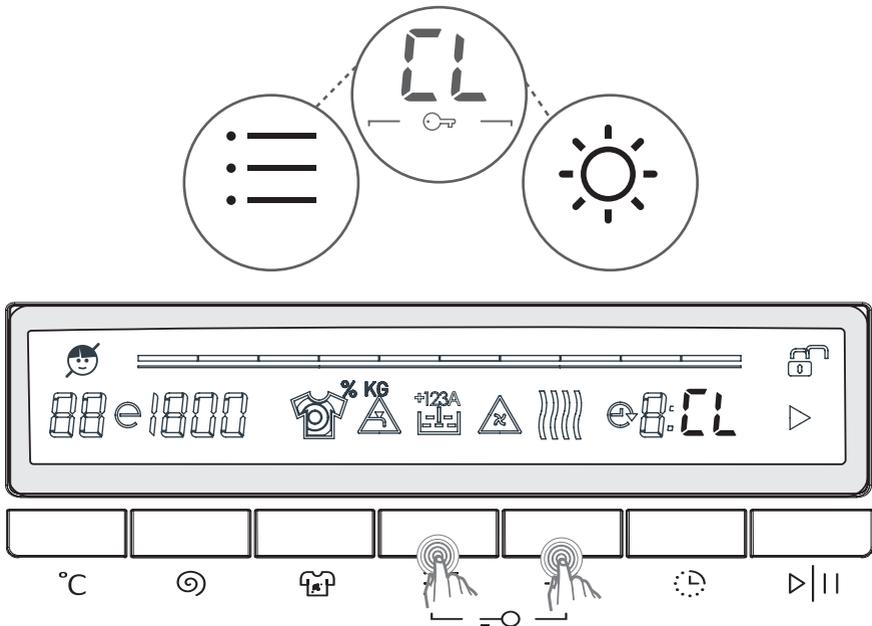

“CL” symbol will flash on the electronic display when activated.

If any button is pressed while child lock is active, the “CL” symbol will blink on the electronic display.

If whilst the child lock is engaged and any programme is running, the programme knob is switched to the OFF position and another programme is selected, the programme previously selected continues from where it left.

To deactivate it, it is sufficient to press the same buttons for more than 5 seconds. When the child lock is deactivated, the “CL” symbol on the electronic display will go off.


# Cancelling Programme

**If you want to cancel any programme running:**

1. Switch the programme knob to the “OFF” position.
2. Your machine will stop the washing operation and the programme will be cancelled.
3. To get rid of the water accumulated in the machine switch the programme knob to any programme.
4. Your machine will perform the necessary discharge operation and cancel the programme.
5. You can run your machine by selecting a new programme.

# Finishing Programme

Your machine will stop by itself as soon as the programme you have selected finishes.

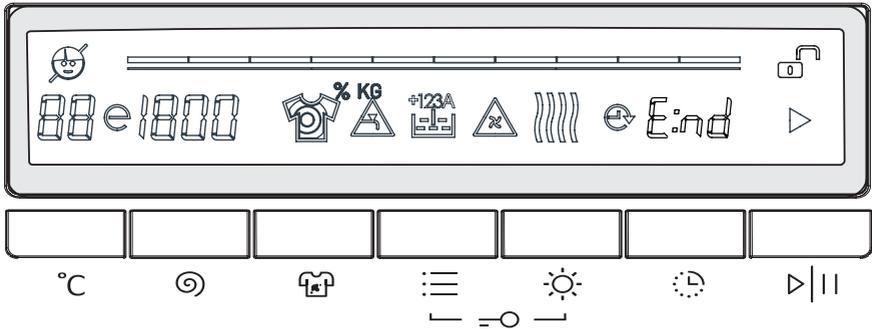

- “END” will be displayed on the electronic display for 2 minutes.
- The door lock open symbol  shall be displayed on the screen.
- You can open the machine’s door and remove the laundry.
- Leave the door of your machine open to allow the inner part of your machine to dry after removing your laundry.
- Switch the programme knob to the OFF position.
- Unplug your machine.
- Turn the water tap off.

# Warning symbols;

## WARNING OF WATER CUT-OFF / LOW MAINS WATER PRESSURE

If the symbol  flashes on the electronic display:

- Water tap may be closed. Check.
- Mains water may be cut-off. Check. If so, switch the programme knob to the “OFF” position. You can select a programme and run your machine after the mains water is supplied.
- Mains water pressure may be low. Check.
- Water inlet hose may be twisted. Check.
- Water inlet hose may be clogged. Clean water inlet hose filters. (\*)
- Valve inlet filter may be clogged. Clean the valve inlet filters. (\*)



Water supply failure / lower water supply pressure

(\*) See the chapter regarding maintenance and cleaning of your machine.

# Warning symbols;

## WARNING OF CLOGGED PUMP FILTER

If symbol  flashes on the electronic display:

- Pump filter may be clogged. Clean the pump filter. (\*)
- Discharging hose may be clogged or twisted. Check the discharging hose.



Pump filter clog alarm

(\*) See the chapter regarding maintenance and cleaning of your machine.

# Programme table

COTTON 	
Washing temperature (°C)	*90°-80°-70°-60°-50°-40°-30°-°-°-
Maximum washing / drying capacity (kg)	9.0 / 6.0
Detergent Drawer	2
Programme duration (min)	108
Laundry type / Remarks	Heat resistant, cotton and linen textiles. (Underwear, bed sheet, tablecloths, (towels, max. 4.5 kg)

COTTON ECO 	
Washing temperature (°C)	* 60° e -60°-40°-40 °-30 °- °-°-
Maximum washing / drying capacity (kg)	9.0 / 6.0
Detergent Drawer	2
Programme duration (min)	140
Laundry type / Remarks	Heat resistant, cotton and linen textiles. (Underwear, bed sheet, tablecloths, (towels, max. 4.5 kg)

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

COTTON 20° 	
Washing temperature (°C)	*20°-"-"-"
Maximum washing / drying capacity (kg)	4.0 / 4.0
Detergent Drawer	2
Programme duration (min)	112
Laundry type / Remarks	Lightly soiled, cottons and linen textiles. (Underwear, bed sheet, tablecloth, (towel max. 2 kg.) Bedding, etc.)

SYNTHETICS 	
Washing temperature (°C)	*60- 40°-30°-"-"-"
Maximum washing / drying capacity (kg)	3.5 / 3.5
Detergent Drawer	2
Programme duration (min)	125
Laundry type / Remarks	Synthetics and synthetic blended textiles. (Synthetic blended shirts, blouses, socks etc.)

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

WOOL 	
Washing temperature (°C)	30°-"-"
Maximum washing / drying capacity (kg)	2.5
Detergent Drawer	2
Programme duration (min)	55
Laundry type / Remarks	Woollen and wool blended textiles having a "machine washable" label

DUVET 	
Washing temperature (°C)	40°- 30°- "-"
Maximum washing / drying capacity (kg)	2.5
Detergent Drawer	2
Programme duration (min)	92
Laundry type / Remarks	You can use this programme to wash your fibre duvets that bear the "machine washable" tag. (max. 2.5 kg)

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

RINSE 	
Washing temperature (°C)	"--"
Maximum washing / drying capacity (kg)	9.0 / 6.0
Detergent Drawer	2
Programme duration (min)	50
Laundry type / Remarks	If you want to get an additional rinse after washing your laundry, you can use this programme for all kinds of laundry.

ALLERGY 	
Washing temperature (°C)	60°- 50°- 40°- 30°- "--"
Maximum washing / drying capacity (kg)	4.0 / 4.0
Detergent Drawer	2
Programme duration (min)	180
Laundry type / Remarks	Baby clothes

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

SPIN 	
Washing temperature (°C)	"--"
Maximum washing / drying capacity (kg)	9.0 / 6.0
Detergent Drawer	2
Programme duration (min)	20
Laundry type / Remarks	If you want to get an additional spin after washing your laundry, you can use this programme for all kinds of laundry.

QUICK 12' 	
Washing temperature (°C)	30°- "--"
Maximum washing / drying capacity (kg)	2.0 / 2.0
Detergent Drawer	2
Programme duration (min)	12
Laundry type / Remarks	You can wash lightly soiled, cotton, coloured and linen textiles shortly in 12 minutes. Note: As the washing period is short, the amount of the detergent should be much less with respect to the other washing programmes. If the machine detects an unbalanced load, the programme duration will extend.

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

QUICK 30'&60' 	
Washing temperature (°C)	60°- 50°- 40°- 30°- "--"
Maximum washing / drying capacity (kg)	4.0 / 4.0
Detergent Drawer	2
Programme duration (min)	***30 / 60
Laundry type / Remarks	Soiled, cotton, coloured and linen textiles.

\*\*\* Daily 60 min. programme can wash your laundry within 30 min. according to the selected soiling level.

If you want to wash your laundry in 30 min, just select the "lightly soiled" option among soiling levels. 

*(\*\*The washing duration of the selected programme according to maximum load capacity.)*

*(\***Black parts** are factory defaults)*

*If you want to select more than one auxiliary function, the functions you want to select may be incompatible.*

*Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.*

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

GENTLE DRY 	
Washing temperature (°C)	"--"
Maximum washing / drying capacity (kg)	3.5
Detergent Drawer	2
Programme duration (min)	40
Laundry type / Remarks	Delicate laundry bearing the "suitable for machine drying" label

COTTON DRY 	
Washing temperature (°C)	"--"
Maximum washing / drying capacity (kg)	6.0
Detergent Drawer	2
Programme duration (min)	50
Laundry type / Remarks	Cotton laundry bearing the "suitable for machine drying" label.

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.

# Programme table

QUICK WASH & DRY 	
Washing temperature (°C)	30°-°--°
Maximum washing / drying capacity (kg)	0.5 kg. 29 min (3 shirts) 1.5 kg. 60 min (6 shirts)
Detergent Drawer	2
Programme duration (min)	29/60
Laundry type / Remarks	Cotton, coloured and linen laundry bearing the “suitable for machine drying” label. Note: Your machine determines the programme duration itself based on the amount of laundry that you will load.

COTTON WASH & DRY 	
Washing temperature (°C)	90-80-70-60°-50°-40°-30°-°--°
Maximum washing / drying capacity (kg)	6.0 / 6.0
Detergent Drawer	2
Programme duration (min)	142
Laundry type / Remarks	Cotton and linen textiles. (Underwear, bed sheet, tablecloth, (towel max. 3.0 kg)

(\*\*The washing duration of the selected programme according to maximum load capacity.)

(\***Black parts** are factory defaults)

If you want to select more than one auxiliary function, the functions you want to select may be incompatible.

Do not dry towels, cotton and linen textiles, synthetic and synthetic blended laundry together. To dry your laundry, select the most appropriate drying programme for your type of laundry.

**NOTE:** PROGRAMME DURATION MAY VARY DEPENDING ON THE AMOUNT OF LAUNDRY, TAP WATER, AMBIENT TEMPERATURE AND SELECTED AUXILIARY FUNCTIONS.



# Maintenance and cleaning of your machine



## **WARNING!**

Unplug your machine before starting the maintenance and cleaning of your machine.

Turn the water tap off before starting the maintenance and cleaning of your machine.

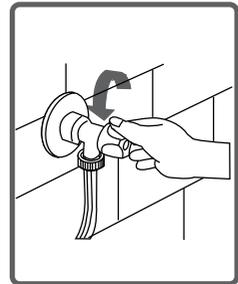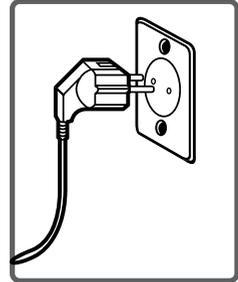

## **CAUTION!**

Your machine's parts may be damaged if cleaners with solvent agents are used.


Do not use cleaning materials with solvent agents.

# Water inlet filters

Filters are in place to prevent dirt and foreign substances in the water from entering the machine and can be found both on the faucet side and on the ends of water valves along the water inlet hose of your machine.

If your machine cannot take in a sufficient amount of water despite the water tap being open, these filters should be cleaned.

(It is recommended that you clean your water inlet filters once every 2 months.)

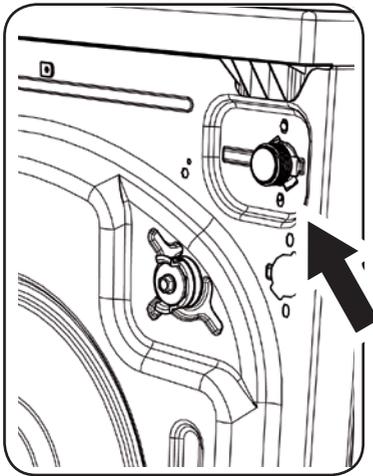


- Detach both ends of the water inlet hose.
- Remove the filters on the water inlet valves using pliers and then clean them with a brush and water.
- Disassemble the filter on tap side of the water inlet hose manually and clean it.
- Once the filters are cleaned, put them back in place in the reverse order.


## CAUTION:

**The filters of water inlet valves may be clogged due to a contaminated water tap or the lack of necessary maintenance or valves may be broken down, causing continuous water leakage into your machine.**


**The breakdowns that may arise due to these reasons are out of the scope of warranty.**

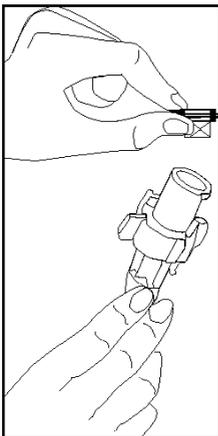

## Detergent drawer

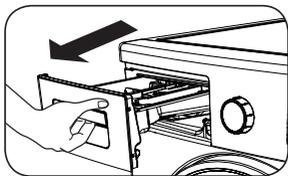

Your detergents may deposit residue in the detergent drawer and housing of the detergent drawer over time. To clean the residue, disassemble the detergent drawer at regular intervals. It is recommended that you clean your detergent drawer every 2 months.

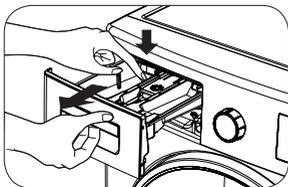


To eject the detergent drawer:


- Pull the detergent drawer all the way out.
- Push on the section shown below in the detergent drawer you have pulled all the way out and keep pulling and then remove the detergent drawer.
- Rinse it using a brush.
- Collect residues in the housing of the detergent drawer so that they don't fall inside your machine.
- Assemble the detergent drawer after drying it using a towel or dry cloth.
- Do not wash your detergent drawer in a dishwasher.



## Liquid Detergent Apparatus (\*)

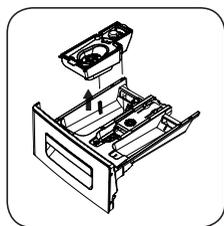


For the cleaning and maintenance of the liquid detergent level apparatus, remove the apparatus from its location as shown in the picture and thoroughly clean the detergent residues. Put the apparatus back into its place. Make sure no residues are left inside.

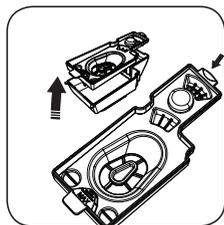

(\*) Machinery specifications may vary depending on the product purchased.

## Siphon cover

Disassemble the detergent drawer. Disassemble the siphon cover and clean the softener residues completely. Replace the siphon cover after cleaning it. Check whether it has settled properly.

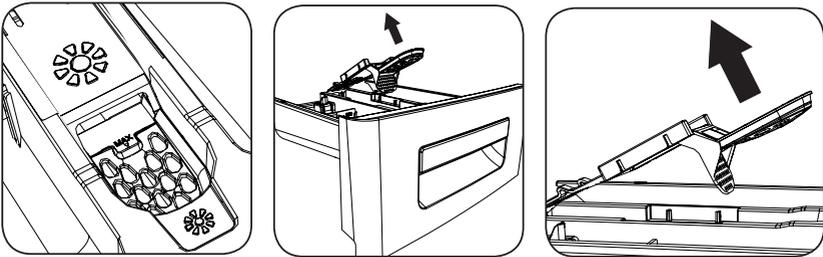





## Body

Clean the outer body of your machine with warm water and a non-flammable cleaning agent that will not abrade the body of your machine. After rinsing with some water, dry it using a soft and dry cloth.

## Drum

Do not leave metallic objects such as needles, paper clips, coins etc. in your machine. These objects lead to the formation of rust stains in the drum. To clean such rust stains, use a non-chlorine cleaning agent and follow the instructions of the cleaning agent manufacturer. Never use wire wool or similar hard objects for cleaning rust stains.




# Pump filter

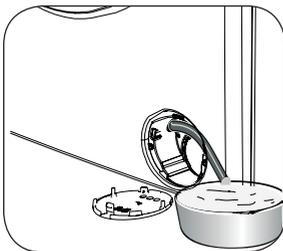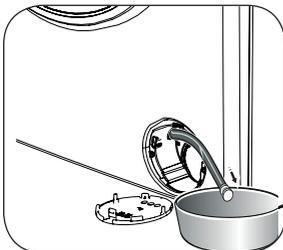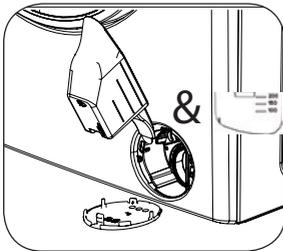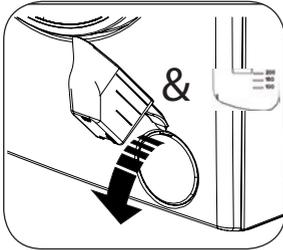

Your machine contains a filter system that prevents thread or fluff left over from your laundry and other small materials from entering the pump during the discharge operation after a completed wash cycle. This is to protect and prolong the life of the pump. It is recommended that you clean your pump filter once every 2 months.

- You may use the washing powder scoop supplied with your machine or liquid detergent level plate to open the pump cover.
- Lodge the end point of the plastic part to the opening of the cover and press backwards. The cover will open.
- Pull the black rubber hose and detach it from its clamp, place a container under it and remove its plug.
- Collect the discharged water in the container.

**Note:** According to the amount of water inside the machine, you may have you empty the water collection container several times.

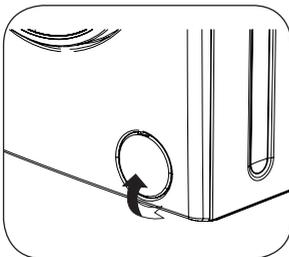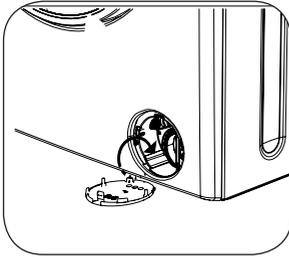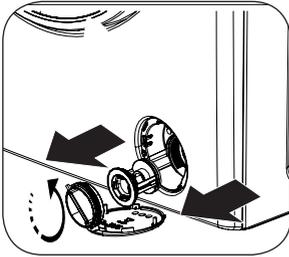

- Put back the plug of the black rubber hose after discharging the water.
- Mount the black rubber hose back to its clamp.
- Loosen the filter cover by turning it counter-clockwise, and remove by pulling.
- Clean the foreign materials inside the filter with the help of a brush.
- After cleaning the filter replace the filter cover and tighten by turning clockwise.
- Please note that filter cover will leak water unless properly placed back.
- You can close the pump cover reverse of how you opened it.
- While closing the pump cover, ensure that the parts inside the cover meet the holes on the front panel side.

# Troubleshooting

All repairs required for your machine should be carried out by an authorised service company. If your machine requires a repair or if you cannot solve an issue with the information provided below, then you should:

- Unplug the machine.
- Close the water tap.
- Contact the nearest authorised service company.

<b>FAULT</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION METHOD</b>
Your machine will not start.	It is not plugged in.	Insert the plug into the socket.
	Your fuse is defective.	Change your fuse.
	Check the mains supply.	Mains supply is cut off.
	Start/Pause button is not pressed.	Press the Start/Pause button.
	The programme knob is in stop (off) position.	Bring the programme knob to the desired position.
	The door of your machine is not closed properly.	Close the door of your machine.
No water is entering the machine.	Your tap is closed.	Open the tap.
	Check the water inlet hose.	Water inlet hose may be twisted.
	Water inlet hose may be blocked.	Clean the water inlet hose filters. (*)
	Valve inlet filter is blocked.	Clean the valve inlet filters. (*)
	The door of your machine is not closed properly.	Close the door of your machine.

(\*) See page 69

<b>FAULT</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION METHOD</b>
Your machine does not discharge.	Discharging hose clogged or twisted.	Check the discharging hose.
	Pump filter clogged.	Clean the pump (**) filter.
Your machine vibrates.	You machine's feet are not adjusted.	Adjust the feet of your machine. (***)
	Transportation safety screws are not removed.	Remove the transportation safety screws from your machine (****)
	Your machine only has a small amount of laundry inside.	This will not prevent the operation of your machine.
	Your machine is overloaded with laundry or the laundry is not distributed evenly.	Do not put more laundry in than the amount recommended and make sure it is loaded evenly.
	Your machine rests on a hard surface.	Avoid installing your machine on hard surfaces. When settling your machine, leave 2 cm of space between it and walls or hard surfaces.

(\*\*) See page 72

(\*\*\*) See page 23

(\*\*\*\*) See page 21

<b>FAULT</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION METHOD</b>
Excessive foam is formed in the detergent drawer.	Excessive amount of detergent used.	Press the Start/Pause button. To eliminate foam formation, mix a spoon of softener with half a litre of water, and pour the mixture in the detergent drawer. After 5-10 minutes, press the Start/Pause button again. In your next washing operation, adjust the detergent dose accordingly.
	Wrong detergent used.	Use detergents produced only for automatic washing machines in your machine.
Unsatisfactory washing result.	The contamination degree of your laundry does not match the programme you have chosen.	Select programmes appropriate for your laundry's level of dirtiness. (See page 52 programme table)
	Amount of detergent used insufficient.	Adjust the amount of detergent according to the amount and level of dirtiness of your laundry.
	Your machine has more than the maximum capacity laundry inside the machine.	Load your machine with an amount of laundry that does not exceed the maximum laundry capacity.

<b>FAULT</b>	<b>POSSIBLE CAUSE</b>	<b>SOLUTION METHOD</b>
As soon as the machine is loaded with water, water discharges.	The end of the water drain hose is too low for the machine.	Set the water drain hose to an appropriate height. (*****)
No water appears in the drum during washing.	No fault. Water is in the unseen part of the drum.	-
Laundry has detergent residues on it.	Non-dissolving particles of some detergents may adhere to your laundry as white spots.	Perform an extra rinse by setting your machine to the “Rinsing” programme, or clean the spots using a brush after your laundry dries.
	The reason for these spots may be oil, cream or ointment.	Apply the maximum amount of detergent instructed by the detergent manufacturer in the next washing operation.
Spinning operation is not performed or runs late.	No fault. Unbalanced load control system has been activated.	The unbalanced load control system will try to spread your laundry evenly. The spinning operation will begin after your laundry is spread. Place the laundry in the machine in a balanced fashion next time.

(\*\*\*\*\*) See page 27.

FAULT	POSSIBLE CAUSE	SOLUTION METHOD
The load detection system on the screen does not work while loading the machine.	Laundry is placed into the machine without choosing a washing or drying programme.	Remove the laundry in your machine. Switch the programme knob to the OFF position, reselect the programme you want to select. Load the laundry in the machine and run.
 symbol is displayed on the screen and machine does not run.	There is more laundry in the machine than the maximum laundry amount for the washing or drying programme you selected.	Remove laundry from your machine until the symbol disappears.
Laundry remains damp after the drying operation.	Appropriate drying programme is not selected. The maximum load capacity for the selected programme might be exceeded.	Select a drying programme appropriate for your laundry (see page 78 for the programme table).

# Automatic fault warnings and what needs to be done

Your machine is equipped with systems which are capable of both taking necessary precautions and warning you in case of any breakdown by means of continuous self-checking during washing operations.

ERROR CODE	POSSIBLE FAULT	WHAT TO DO
E01	The door of your machine is left open.	<p>Close the machine door.</p> <p>If your machine persists to indicate the fault, turn off your machine, unplug it and contact the nearest authorised service company immediately.</p>
E02	Water cut-off or low mains water pressure	<ul style="list-style-type: none"> <li>• Water tap may be closed. Check.</li> <li>• Mains water may be cut-off. Check.</li> <li>• If so, switch the programme knob to the OFF position. You can select a programme and run your machine after the mains water is supplied.</li> <li>• Mains water pressure may be low. Check.</li> <li>• Water inlet hose may be twisted. Check.</li> <li>• Water inlet hose may be clogged.</li> <li>• Clean water inlet hose and valve inlet filters.(*)</li> </ul> <p>If the problem persists, unplug your machine, turn off your tap and contact the nearest authorised service company.</p>

ERROR CODE	POSSIBLE FAULT	WHAT TO DO
E03	Pump is damaged, pump filter is clogged or pump electrical connection is malfunctioning.	Clean the pump filter (**). If the problem persists, contact the nearest authorised service company.
E04	Your machine has an excessive amount of water.	Your machine will drain water by itself. After the draining operation, turn off your machine and unplug it. Turn off your tap and contact the nearest authorised service company.

(\*) See chapter on appliance cleaning and maintenance.


# Automatic fault warnings and what to do

FAULT	POSSIBLE CAUSE	WHAT TO DO
	<p>Water cut-off or low mains water pressure</p>	<ul style="list-style-type: none"> <li>• Water tap may be closed. Check.</li> <li>• Mains water may be cut-off. Check.</li> <li>• If so, switch the programme knob to position 0. You can select a programme and run your machine after the mains water is supplied.</li> <li>• Mains water pressure may be low. Check.</li> <li>• Water inlet hose may be twisted. Check.</li> <li>• Water inlet hose may be clogged.</li> <li>• Clean water inlet hose filters. (*)</li> <li>• Inlet valve filter may be clogged.</li> <li>• Clean the inlet valve filters. (*)</li> </ul> <p>If the problem persists, unplug your machine, turn off your tap and contact the nearest authorised service company.</p>
	<p>Pump is faulty or pump filter is clogged or electrical connection of the pump is faulty.</p>	<ul style="list-style-type: none"> <li>• Pump filter may be clogged. Clean the pump filter. (*)</li> <li>• Discharging hose may be clogged or twisted. Check the discharging hose.</li> </ul> <p>If the problem persists, contact the nearest authorised service company. (*)</p>

## Practical information

### Alcoholic drinks:

The spilt area should initially be washed using cold water, and then wiped with glycerine and water and rinsed with vinegar mixed with water.

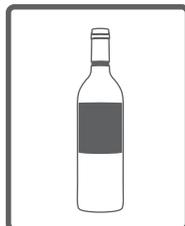

### Shoe shine:

The stain should be rubbed out gently without damaging the fabric and be scrubbed and rinsed with detergent. If the stain is not removed, it should be scrubbed using a mixture obtained by adding 1 scale of alcohol (96°) into 2 scales of water, and then be washed with warm water.



### Tea and coffee:

Stretch the stained area of your cloth over the opening of a container and pour water as hot as the type of your laundry permits.

In case the type of your laundry permits this, wash with bleach.



### Chocolate and cocoa:


After submerging your laundry in cold water and rubbing it using soap or detergent, wash it in the temperature that the fabric type of your laundry can stand. In case the oil stain is still visible, wipe with oxygenated water (3%).



# Practical information

## Tomato paste:

After rubbing out the dried substances without damaging your laundry submerge it in water for 30 minutes, and then scrub and wash it with detergent.

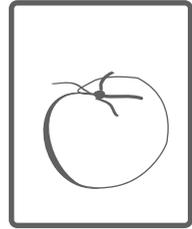


## Grease and oil stains:

First wipe the residues. Scrub the spot with detergent and wash it with warm soapy water.



## Mustard:


Apply glycerine on the soiled area. Scrub with detergent and wash. If the stain cannot be removed, wipe with alcohol. (For synthetic and colour fabrics, a mixture of 1 scale of alcohol and 2 scales of water should be used).

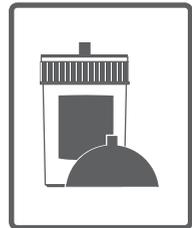

## Practical information

### **Fruit:**

Stretch the stained area of your laundry over the top of a container and pour cold water on it. Do not pour hot water on the spot. Wipe with cold water and apply glycerine. Allow 1-2 hours, wipe with a few drops of white vinegar and rinse it.

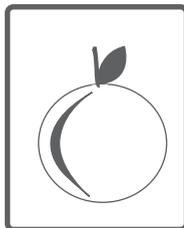


### **Grass stain:**

Wipe the stained part with detergent. If the type of your cloth permits bleach, wash with bleach. Wipe your woollen laundry items with alcohol. (For colour fabrics, a mixture of 1 scale of pure alcohol and 2 scales of water).



### **Oil paint:**

The stain should be removed by applying thinner before drying. Then it should be wiped with detergent and washed.

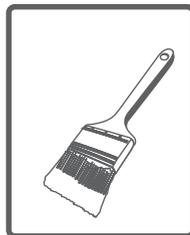

### **Burn stain:**


If your laundry is suitable for applying bleach, you can add bleach into washing water. For wool fabric, cover the stain with a cloth previously submerged in oxygenated water, put a dry cloth over the stain and iron. Rinse thoroughly and wash.



# Practical information

## **Blood stain:**

Submerge your laundry in cold water for 30 minutes. If the stain is not removed, then submerge in a mixture of water and ammoniac (3 spoons of ammoniac in 4 litres of water) for 30 minutes.

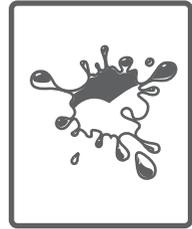


## **Cream, ice-cream and milk:**

Submerge your laundry in cold water and scrub the stained area with detergent. If the spot is not removed, apply a suitable amount of bleach. (Do not use bleach for coloured laundry.)




## **Mould:**

Mould stains should be cleaned as soon as possible. The stain should be washed with detergent, and if it does not disappear, wipe with oxygenated water (3%).

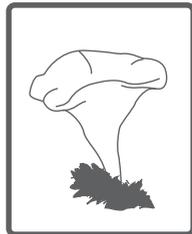

## **Ink:**

Hold the stained area under running water and wait until the flow of inked water ends. Then wipe it with water mixed with lemon juice and detergent, and wash after 5 minutes.

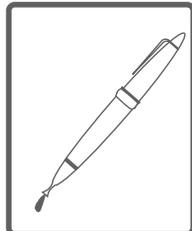

## **Energy label and energy efficiency**

Energy and water consumption may vary based on water pressure, water hardness, water temperature, ambient temperature, laundry amount, additional function selection and voltage fluctuations. To reduce energy and water consumption, use your machine with the laundry capacity proposed for the selected programme, wash your laundry less dirty or daily laundry in short programmes, carry out cleaning and maintenance periodically, and use your machine in convenient time intervals specified by your electricity vendor.



