



# Instructions for use

OVEN

OM8487S / BO4SM3F3-77  
OM8487A / BO4SM3F3-78

**Pictograms used**



Important information



Tip

# YOUR MICROWAVE

## Your microwave

Introduction	4
Control panel	5
Description	6
Guide rails/Telescopic guide rails	6
Accessories	6
Door	7
Cooling fan	7
Main functions	7
Keys	8
Navigation	9

## Initial use

What to do first	11
------------------	----

## Operation

Selecting your function	13
Functions settings mode	13
Progress mode	15
Finish display	15
Changing settings during the progress	16

## Use

Functions table	17
Using the microwave	18
Settings menu	20
Plus menu	22
Cooking information	22
Stage cooking	23
Go to manual cooking	24
Programs and Favourites	24
Egg timer	24
Child lock	25
Extra functions	26

## Cleaning

Cleaning the appliance	27
Aqua clean	27
Removing and cleaning the guide rails	28
Replacing the oven lamp	28

## Solving problems

General	30
---------	----

## Your oven and the environment

Disposing of the appliance and the packaging	32
--	----

## Cooking test

Food tested in compliance with the EN 60705-2 standard	33
--	----

## *Introduction*

---

Congratulations on choosing this Asko microwave. This product is designed to offer simple operation and optimum user-friendliness. The microwave has a wide range of settings enabling you to select the correct cooking method every time.

This manual shows how you can best use this microwave. In addition to information about operating the microwave, you will also find background information that may be useful when using the appliance.




**Please read the separate safety instructions carefully before using the appliance!**

**Read this manual before using the appliance and keep it in a safe place for future use.**

Installation instructions are supplied separately.

# YOUR MICROWAVE

## Control panel

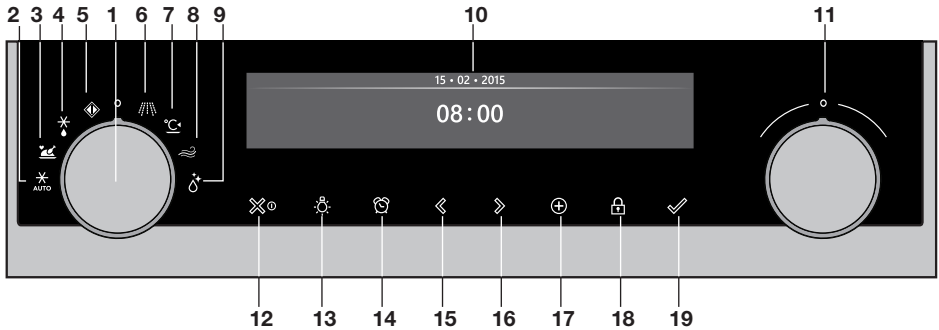

1. Function knob (in 'Off' position)
2. Defrost programs
3. Programs & Favourites
4. Defrost
5. My microwave
6. Microwave
7. Warming
8. Clean air
9. Aqua clean
10. Display
11. Selection knob
12. On/off key and stop key (cancel)
13. Light key
14. Timer key
15. Navigation key left
16. Navigation key right
17. Plus key
18. Child lock key (lock key)
19. Confirm key (+ 30 seconds microwave (6) time)




### Note:

The keys respond best if you touch them with a large area of your fingertip. Every time you press a key during use, a short acoustic signal will sound.

## Description

1. Control panel
2. Oven levels
3. Oven door
4. Door handle

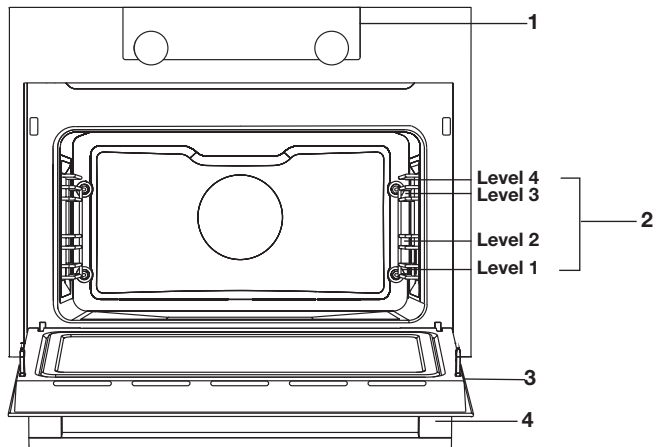

## Guide rails/Telescopic guide rails

 
- The oven has four or five guide rails (Level 1 to 4/5), depending on the model. Level 1 is mainly used in combination with bottom heat. The two upper levels are mainly used for the grill function.
- Place the oven rack, baking tray or steam dish in the gap between the guide rail sliders.
- A number of shelf levels can have fully-retractable telescopic guide rails, depending on the model.
  - Pull the telescopic guide rails out of the oven cavity completely and place the oven rack / baking tray / steam dish on them. Then slide the oven rack / baking tray / steam dish on the telescopic guide rails, back into the oven cavity.
  - Only close the oven door when the telescopic guide rails have been returned completely back into the oven cavity.

## Accessories

Your appliance is accompanied by a range of accessories, depending on the model. Only use original accessories; they are specially suited to your appliance.

# YOUR MICROWAVE

**Note:** not all accessories are suitable/available for every appliance (it may also differ by country). When purchasing, always provide the exact identification number of your appliance. Please see the sales brochures or check online for more details about optional accessories.

Accessories that can be supplied with your appliance (depending on the model)	
	<b>Glass baking tray;</b> for microwave and oven use. <ul style="list-style-type: none"><li>• NOT suitable for pyrolysis cleaning.</li></ul>

## Door




- The door switches interrupt the operation of the microwave when the door is opened during use. The microwave continues operating when the door is closed.
- This oven has a 'Soft close door system'. When closing the oven door, this system dampens the movement, from a certain angle, and silently closes the oven door.

## Cooling fan







- The appliance is equipped with a cooling fan that cools the casing and control panel.

## Main functions

With the function knob you can select the main functions of your microwave.





Setting	Description
	<b>Off/standby mode</b>
	<b>My microwave</b>
	<b>Programs and favourites</b> Favourites Programs

## YOUR MICROWAVE

	<b>Defrost</b> Manual defrost
	<b>Microwave</b> Microwave
	<b>Clean air</b>
	<b>Warming</b>
	<b>Aqua clean</b>
	<b>Defrost programs</b>





## Keys

In the table below you can find the description of the different keys.


Keys	Description of the keys
	<b>On/off key and stop key:</b> - Press short: cancel operation or go one step back in the menu. - Press long: turn the appliance off or on.
	<b>Light key:</b> - To turn the cavity light on or off.
	<b>Egg timer</b> - The egg timer can be used independent of the oven function. - The longest possible timer setting is 23:59.
	<b>Navigation key left</b> - To move the active area to the left.



# YOUR MICROWAVE

	<b>Navigation key right</b> - To move the active area to the right.
	<b>Plus key</b> - To open or exit the settings menu (in standby-mode). - To open or exit the plus menu with the extra options possible at that moment (in on-mode).
	<b>Child lock key</b> - Press and hold the left navigation key and right navigation key simultaneously to lock the appliance.
	<b>Confirm key</b> - To confirm all the white settings/elements in the screen. - Add 30 seconds microwave time (microwave function).

## Navigation

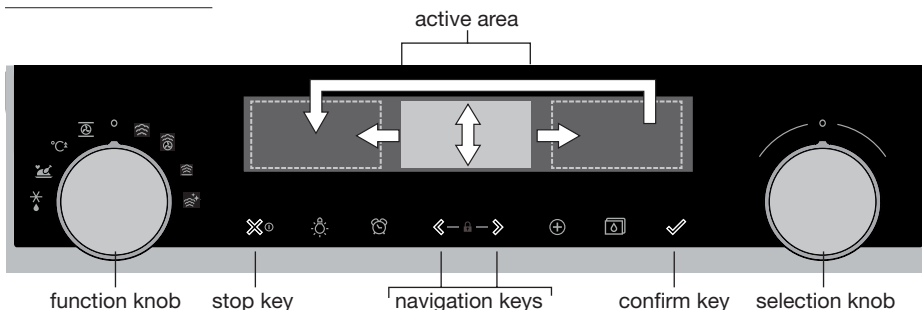

By turning the function knob away from the 0-position, the icon of the chosen main function is lit. The display will show the icon and name of the activated function for about 1,5 seconds. Next you will see the chosen main function and sub-function at the top of the display in the feedback bar. Also the function settings mode will become active (grey background). In this activated area you can select your settings using the selection knob.



**Within every menu the navigation is as follows:**

- Use the navigation keys or press the selection knob to move the active area (grey background).
- The setting in the active area can be changed by turning the selection knob (left = decrease, right = increase). The setting will be saved automatically.
- When all elements in the screen are set, then confirm these settings by pressing the confirm key (this key will start blinking when it is possible to start the program).
- Press the stop key to go one step back in the menu.



At the top of the display is a feedback bar. This bar shows where you are in the menu and what setting you are changing. Functions / settings are separated with a vertical line.

SETTINGS | GENERAL | SOUND | KEY SOUND

PROGRAMS | ... | CHICKEN

 
## What to do first

- Clean the microwave interior and accessories with hot water and washing-up liquid. Do not use aggressive cleaning agents, abrasive sponges and similar.
- The microwave will emit a particular odor when it is used for the first time; this is normal. Make sure that there is good ventilation during initial use.



When the appliance is first plugged in or after connection when the appliance was disconnected from the power mains for a long period of time, you have to set 'Language', 'Date' and 'Time'.

### Setting the language



In case you are not comfortable with the language on the display, you can select another language. The default setting is 'English'.

1. Turn the selection knob and select your preferred language from the displayed list.
2. Confirm the setting by pressing the confirm key.  
*The next screen will be displayed.*

### Setting the date



1. Turn the selection knob and change the first setting (Day).
2. Confirm this setting by pressing the right navigation key or by pressing the selection knob.
3. Turn the selection knob and change the next setting (Month).
4. Confirm this setting by pressing the right navigation key or by pressing the selection knob.
5. Turn the selection knob and change the last setting (Year).
6. Confirm this setting by pressing the confirm key.  
*The next screen will be displayed.*

## Setting the time



1. Turn the selection knob and change the hours.
2. Confirm this setting by pressing the right navigation key or by pressing the selection knob.
3. Turn the selection knob and change the minutes.
4. Confirm this setting by pressing the confirm key.

*All the start-up settings are now set and the display will show the standby screen. The appliance is now ready for use.*

 


The language, time and date can be adjusted in the settings menu (see 'Settings menu' chapter). The settings menu can be opened from the start display via the 'Plus' menu.

## Stand-by display

The standby display will show the time, date and the timer (if set). The appliance goes to standby mode after:

- Turning the function knob to 0 ('off' position).
- Pressing the stop key multiple times (deeper in the menu).



## Off mode

- Default the appliance will shut down after no action for a set time of 30 minutes.
- Press and hold the stop key to shut down the appliance manually.

## Switching the appliance on

- Press and hold the stop key to switch on the appliance.
- The appliance can also be switched on by turning the function knob to a function.

## Selecting your function

Select a function appropriate for the meal you are cooking. Consult the table in chapter 'Functions table' to see which functions are available.

- Go directly to the progress mode by pressing the confirm key (this key is blinking if it is possible to start the program).

After you have chosen a main function, the function settings mode is active (grey background). In this activated area, it is now possible to change the settings in this function.

## Function settings mode

**Example** (Microwave / one minute)

1. Choose a main function by turning the function knob.

*The first sub-function setting is active.*



Now the settings can be changed as desired.

There is the possibility to set:

 
- The function (consult the table in chapter 'Functions table').
- The power.
- The time.

2. Turn the selection knob and change the setting.



3. Confirm the setting by pressing the right navigation key or by pressing the selection knob.

*The next sub-function setting becomes active.*



4. Turn the selection knob and change the setting.



5. Confirm the setting by pressing the right navigation key or by pressing the selection knob.

*The next sub-function setting becomes active.*

 


- ▶ The default timer setting is displayed. Press the confirm key to start the program directly with the chosen settings (see step 7).
  - ▶ To set the timer, go to step 6.
6. Turn the selection knob and change the setting.




- ▶ M:S notation.
7. If preferred, select any additional setting using the plus menu (for example fast preheat). See for more information chapter 'Plus menu'.
  8. Start the program: press the confirm key to go to the progress mode.

*The program will start with the chosen settings; the oven will go to the progress mode and the progress screen is shown.*



## Progress mode

 - Left side on the screen, the power is displayed.
- Right side on the screen, the time (counting down) is displayed.  
Next to the cooking time you can see the finishing time.



## Finish display

When the timer is finished, the 'finish display' will appear.

Now it is possible to:

- Stop the progress.
- Add extra time.
- Save as favourite.



### **Stop the progress**

1. Press the confirm key.

*The finish display will be closed and the standby screen will be shown.*

- If there is no action within 10 minutes, the display will switch to standby mode.

### **Add extra time**

1. Press the right navigation key to select 'Add extra time'.
2. The time setting becomes active and can be changed directly by rotating the selection knob.
3. Confirm by means of the confirm key.

*The previous process is activated again.*

### **Save as favourite**

1. Press the right navigation key to select 'Save as favourite'.  
*The next screen will show 10 positions where the program can be positioned.*
2. Select a position for your recipe by rotating the selection knob and press the confirm key to save it.  
*If there is already another program at the selected position, then a popup will be shown: 'program will be overwritten' (accept or cancel).*
3. Give the recipe a name. Rotate the selection knob to select the appropriate letter and press the selection knob to confirm and go to the next letter.
  - You can delete a character by means of the backspace function in the character list (arrow).
4. Press the confirm key to save the recipe.

### **Changing settings during the progress**

- During progress, pressing the navigation keys will show the active area. The selected setting can now be changed, see chapter 'Function settings mode'.
- After confirmation with the confirm key the progress screen will be shown with the changed settings.
- After 5 seconds without actions the progress settings are cancelled and the display will return to the progress screen.



## Functions table

Consult the table to select the preferred function. Also consult the instructions for preparation on the dish packaging.




- In 'Microwave function': do not use metal cookware or utensils and do not preheat the oven.
- Only use glass dishes that can withstand temperatures of 275 °C.

Function	Description	
	<p><b>Microwave</b></p> <ul style="list-style-type: none"> <li>• Microwave energy is used to cook and defrost foods. It provides fast efficient cooking without changing the colour or form of food.</li> <li>• Place the glass dish on level 1.</li> <li>• Suggested power: 1000 W</li> </ul>	
	<p><b>Defrost programs</b></p> <ul style="list-style-type: none"> <li>• Use 'Defrost programs' for defrosting by selecting a setting from the list of pre-programmed settings.</li> </ul>	
	<p><b>Programs and Favourites</b></p> <ul style="list-style-type: none"> <li>• Use 'Programs' for baking and roasting by selecting a dish from a list of pre-programmed dishes.</li> <li>• Favourites: you can select your own stored recipes.</li> </ul>	
	<p><b>Defrost</b></p> <ul style="list-style-type: none"> <li>• This function uses microwaves. Dishes are defrosted quickly and efficiently.</li> <li>• Suggested power: 90 W</li> </ul>	
	<p><b>My microwave</b></p> <ul style="list-style-type: none"> <li>• Microwave power and cooking time can be adjusted for the 'My microwave' function.</li> </ul>	
	<p><b>Warming</b></p> <ul style="list-style-type: none"> <li>• Keep warm: this function is used to keep already cooked dishes warm.</li> </ul>	
	<p><b>Clean air</b></p> <ul style="list-style-type: none"> <li>• The fans are operated for cooling and deodorization.</li> </ul>	
	<p><b>Aqua clean</b></p> <ul style="list-style-type: none"> <li>• Grease and grime can easily be removed from the oven walls with a damp cloth.</li> </ul>	

## Using the microwave

Microwaves are high-frequency electromagnetic waves. The energy makes it possible to cook or warm up dishes without affecting the form or colour.

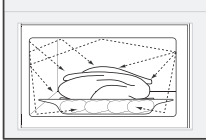

### Cooking principle

1. The microwaves generated by the microwave are spread evenly by a distribution system. This cooks the dish evenly.
2. The food absorbs the microwaves to a depth of approximately 2.5 cm. Cooking then continues, because the heat is spread in the dish.
3. The cooking times vary and depend on the dish you use and the properties of the food:
  - Quantity and density
  - Moisture content
  - Starting temperature (whether or not it is cooled)

### Important

The dish is cooked from the inside out by means of heat distribution. The cooking continues even when you take the dish out of the oven. Standing times in recipes and in this manual should therefore be adhered to, in order to ensure:

- Even heating into the middle of the dish;
- Equal temperatures in all parts of the dish.

Power	Use
1000 W	<ul style="list-style-type: none"> <li>• For quick heating of drinks, water and dishes containing a lot of moisture.</li> <li>• For cooking fresh or frozen vegetables.</li> </ul>
750 W	<ul style="list-style-type: none"> <li>• For preparing and heating of drinks and dishes.</li> </ul>
600 W	<ul style="list-style-type: none"> <li>• For melting chocolate.</li> <li>• For cooking fish and seafood.</li> <li>• For heating on two levels.</li> <li>• For cooking dried beans at low temperatures.</li> <li>• For heating or cooking delicate dishes with eggs.</li> </ul>
360 W	<ul style="list-style-type: none"> <li>• For cooking dairy products or jam at low temperatures.</li> </ul>
180 W	<ul style="list-style-type: none"> <li>• For fast defrosting of dishes.</li> <li>• For softening butter or ice cream.</li> </ul>
90 W	<ul style="list-style-type: none"> <li>• For defrosting cakes containing cream.</li> </ul>

## Guidelines for microwave cookware

Cookware that you use for the microwave function should not block the microwaves. Metals such as stainless steel, aluminium and copper reflect microwaves. For that reason, do not use metal cookware.

Cookware which is designated as microwave-safe can be used safely. For more information about suitable cookware, consult the following guidelines and always use the glass baking tray on level 1 if you use the microwave function.

Cookware	Microwave safe	Remarks
Aluminium foil	✓✗	Can be used in small quantities to prevent certain parts of the dish from overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Porcelain and earthenware	✓	Porcelain, earthenware, glazed earthenware and ivory porcelain are usually suitable, unless they have a metal edge.
Disposable crockery made from polyester or cardboard	✓	Frozen meals are sometimes packaged in disposable tableware.
Fast food packaging <ul style="list-style-type: none"> <li>• Polystyrene cups</li> <li>• Paper bags or newspaper</li> <li>• Recycled paper or metal edges</li> </ul>	✓ ✗ ✗	Can be used to warm up dishes. Polystyrene can melt if it overheats. Can catch fire. Can cause arcing.
Glassware <ul style="list-style-type: none"> <li>• Oven dishes</li> <li>• Fine glassware</li> <li>• Glass jars</li> </ul>	✓	Can be used, unless it has a metal edge. Can be used to warm up dishes or liquids. Thin glass can break or shatter with sudden heating. The lid must be removed. Only suitable for warming.
Metal	✗	Can cause arcing or fire.
Paper <ul style="list-style-type: none"> <li>• Plates, cups, kitchen paper</li> <li>• Recycled paper</li> </ul>	✓ ✗	For short cooking times and warming. For absorbing excess moisture. Can cause arcing.

## USE

Cookware	Microwave safe	Remarks
Plastic	✓	<p>Especially heat-resistant thermoplastic material. Other types of plastic can warp or discolour at high temperatures. Do not use melamine plastic.</p> <p>Can be used to hold moisture. May not touch the food.</p> <p>Be careful when you remove the film; hot steam can escape. Only if boil-proof or ovenproof. Must not be airtight. If necessary, prick it with a fork.</p>





✓ : Recommended

✓X : Careful

X : Unsafe

### Settings menu

The settings menu is only available by pressing the plus key when the appliance is in standby mode.

Setting	Description
	<p><b>General</b></p> <p>Language Time Date Sound</p>
	<p><b>Display</b></p> <p>Brightness Clock size Night mode Appliance to stand-by mode</p>
	<p><b>Cooking</b></p> <p>My microwave Default program intensity</p>
	<p><b>System</b></p> <p>Appliance information Factory settings Oven light</p>

#### General

You can set the following from this menu:

- Language (language of the display)
- Time (always in 24H format)

- Time display (24H or 12H format)
- Date (always day-month-year format)
- Date display (ddmmyyyy or mmddyyyy)
- Sounds (volume of the general sounds and alarms)
- Key sounds (on/off)
- Welcome sound (startup/shutdown sound on/off)

## Display

You can set the following from this menu:

- Brightness (low, mid, high)
- Night mode (start and end time for lower display brightness: first display set start timer, second display set end time)
- Clock size (small / large)
- Standby (auto switch off / manually switch off)



**Changing to manually switch off will increase energy consumption. If the oven is switched off manually (or when an interruption of the power supply occurs) this function will be reset (the display will automatically switch off).**

## Cooking settings

You can set the following from this menu:

- My microwave (adjust power and time of 'My microwave')
- Default program intensity (low / medium / high)

## System






You can set the following from this menu:

- Appliance information (request appliance information)
- Factory settings (back to factory settings)
- Oven light (auto switch off after 1 min. / manual)

## Plus menu

Depending on the the function, there is a possibility to choose extra functionality (after you have chosen a main function and settings in the 'Function settings mode') by pressing the 'plus key'.

- A small icon next to the current time will give an indication about the activated plus menu functions. The colour of the icon will indicate if it is active (white) or inactive (grey).
- To exit the plus menu, press the 'stop key' or 'plus key'; the display will show the previous screen again.
- To cancel an extra functionality, select 'cancel' (icon with a red stripe).

+ Menu	Description	Icon
	<b>Cooking</b> Request more information about the selected function.	
	<b>Add to favourites</b> Add the settings for the cooked dish to your favourites (see chapter 'Finish display').	
	<b>Stage cooking</b> Combine up to three functions in one cooking process.	
	<b>Go to manual cooking</b> To edit a standard program as stage cooking program.	

## Cooking information

The cooking info display will give more information about the chosen function, like the needed equipment and for what kind of purposes the function is used.

## Stage cooking

This function allows you to combine up to three functions in one cooking process. Select different functions and settings to compose the cooking process of your preference.

1. Press the plus key (in the 'Function settings mode').
2. Select 'Stage cooking' by pressing the right navigation key.
3. Press the confirm key.

*A small icon will appear next to the current time. The first stage is already filled with the current settings of the function. If there is no time set, then the default time will be set for the first stage.*

- For example: the oven mode and hot air 180 °C is selected; the default time of 30 min. will be added to the first stage.
4. To add a stage, choose the second function by pressing the navigation keys or pressing the selection knob.
  5. Press the confirm key.  
*The display will switch to the settings screen.*
  6. Select the desired function, set the temperature and time.
  7. Save the stage and return to the stage cooking overview by pressing the confirm key.
    - If the stop key is pressed the setting will be cancelled and the display will turn to the previous display.
  8. If desired, add a third stage. Repeat steps 4, 5, 6 and 7.
  9. After confirmation, the display will show the set stages, with an edit and delete icon.
  10. If all stages are set according to your wishes, then return to the oven setting screen. Press the 'plus key' to close the plus menu.  
*The display will show the normal oven setting screen with the settings of the first stage (stage 1 icon white).*
  11. Start the process by pressing the confirm key.
    - If the stop key is pressed, the stage cooking menu will be closed and the oven will return to the normal mode.

## Go to manual cooking

- In the manual cooking mode, a standard program from the 'Programs and favorites' function can be chosen and edited as in 'Stage cooking' mode.
- By selecting the manual function in the plus menu, a popup will appear: 'Switch to oven mode?'. After confirmation the display will switch to the stage cooking mode if the selected program has more stages.

## Programs and Favourites

### **Automatic programs**

- You can use 'automatic programs' for baking and roasting by selecting a dish from a list of pre-programmed dishes. First select the type of dish and then the dish itself from the available list.
- All the program categories have a picture. When a dish is selected, the program settings will appear. The name of the dish and the name of the active selection are shown in the text bar.
- In the settings, first a picture of the dish is visible (not editable), the weight (depending on the dish) (if it is editable), the intensity (not always editable) and the cooking time. If necessary, adjust the intensity and/or the weight.

### **Favourites** (see chapter 'Finish display')

- You can select your own stored recipes in 'favourites'.
- If there are no saved recipes, a pop-up will appear: 'No saved dishes'.
- The name of the recipe appears in the text bar and the saved oven settings are shown.



## **Egg timer**

---

The egg timer can be used independent of the oven function.

1. Press the timer key.
2. Change the time by rotating the selection knob.
  - The longest possible timer setting is 23:59.
3. Confirm the setting by pressing the confirm key.

*The egg timer is started.*

- To cancel the timer, set the time back to 0:00 and confirm by pressing the confirm key
  - To close the egg timer menu, press the timer key or the stop key.
4. When the egg timer goes off, a pop-up will appear with the text 'Egg timer expires' and an acoustic signal will sound. Press the stop key to switch off the signal and close the pop-up menu.
    - The sound will stop automatically after approximately 2 minutes.

## **Child lock**

---

The oven's control panel can be locked by means of the Child Safety Lock, to protect the oven against unintended use.

1. Press and hold the lock key.

*The appliance will go into key lock mode. A pop-up will be shown.*

*After 3 seconds the 'Key lock is active' pop-up will close. The current state of the appliance will be visible.*

- If the key lock has been activated during a cooking process, the process will keep running.
  - If a key is pressed during key lock, the 'Key lock is active' pop-up will show again.
  - The stop key is still active during lock mode. If the appliance is switched off, the process will stop. To turn the appliance on again, deactivate the key lock mode.
2. To deactivate the key lock mode, press and hold the lock key again.

## Extra functions

### **Warming**

- Keep warm
  - ▷ Use this function to keep already cooked food at temperature.
  - ▷ For this function you can set the food-warming temperature and duration.

### **Defrost**

- This function uses microwaves. Dishes are defrosted quickly and efficiently. Use this function for slow defrosting of frozen dishes (cakes, biscuits, cookies, bread, bread rolls and frozen fruit).
- By choosing this function you can determine the defrost power level and duration.
- Turn the food over after half the defrost time has elapsed; stir the food or break up large pieces if these are frozen together.

### **Clean air**

- The fans are operated for cooling and deodorization.

### Cleaning the appliance

Clean the oven regularly to prevent fat and food particles from accumulating, especially on the surfaces of the interior and the exterior, the door and the seal.

- Activate the child lock (to prevent that the appliance is switched on accidentally).
- Clean the exterior surfaces with a soft cloth and warm soapy water.
- Next wipe with a clean, damp cloth and dry the surfaces.
- Remove splashes and stains on the interior surfaces with a cloth and soapy water.
- Next wipe with a clean, damp cloth and dry the surfaces.



#### **Important**

- Make sure that no water enters the vents.
- Never use abrasive cleaning materials or chemical solvents.
- Always make sure that the seal of the door is clean. This prevents accumulation of dirt and allows you to close the door properly.

### Aqua clean

With aqua clean and a damp cloth, you can easily remove grease and dirt from the oven walls.

#### **Using aqua clean**

Only use aqua clean when the oven has cooled down fully. It is more difficult to remove dirt and grease if the oven is hot.



The program takes 30 minutes.

Food remains on the enamel walls will be sufficiently soaked after 30 minutes so that they can be removed with a damp cloth.

1. Remove all accessories from the oven.
2. Pour 0.15 litres of water into the bottom of the oven.
3. Press the confirm key to start aqua clean.



**Please note:** Do not open the door during the cleaning program.


### Removing and cleaning the guide rails

Use conventional cleaning products to clean the guide rails.

- Remove the screw using a screwdriver.
- Remove the guide rails from the holes in the back wall.



*Save the guide rail spacers carefully. Return the spacers after cleaning. This prevents sparks being created during use.*

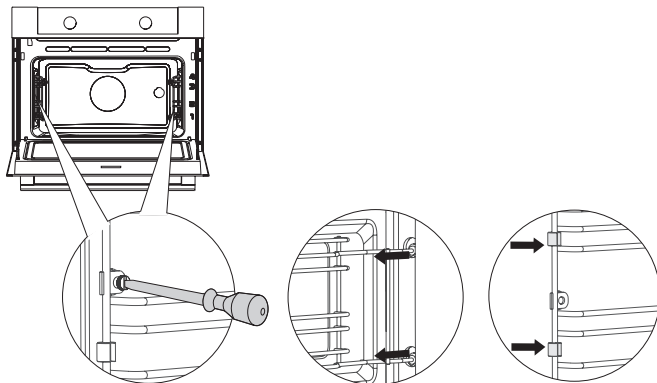

## Replacing the oven lamp



**The lamp in this household appliance is only suitable for illumination of this appliance. The lamp is not suitable for household room illumination.**

The light bulbs (2x) (halogen G9, 230 V, 25 W) are a consumer items and therefore not covered by warranty. To replace it, first remove the baking tray, oven rack and guide rails.




**Disconnect the appliance from the power supply by removing the plug from the socket or by switching off the circuit breaker in the fuse box.**



**Please note: the light bulb can be very hot! To prevent burns, use protection to remove the light bulb.**

1. Remove the four screws from the cover panel. Remove the cover panel and glass.
2. Remove the light bulb and install a new one.
3. Do not remove the seal from the cover panel.  
The seal should not become lose from the cover panel.  
The seal must fit perfectly in the oven wall recess.

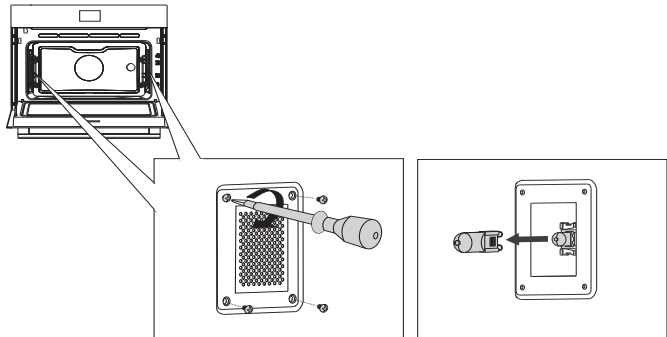

## General

---

If you have problems with your oven, consult the error overview below. Should the problems persist, please contact the Customer Services Department.

### **The food stays raw**

- Check whether the timer has been set and you have pressed the confirm key.
- Is the door closed properly?
- Check whether a fuse has blown and whether a circuit breaker has been activated.

### **The food is overcooked or undercooked**

- Check whether the correct cooking time has been set.
- Check whether the correct power has been set.

### **The sensors don't respond; the display is locked.**

- Disconnect the appliance from the power supply for a few minutes (unscrew the fuse or switch off the mains); then reconnect the appliance and switch it on.

### **Sparking in the oven space.**

- Ensure that all cover panels from the lamps are secure and that all spacers are placed on the guide rails.

### **Power failure can cause the display to reset.**

- Remove the plug from the socket and put it back in again.
- Set the time again.

### **There is condensation in the oven.**

- This is normal. Wipe the oven clean after use.

### **The fan keeps working after the oven is switched off.**

- This is normal. The fan will keep working for a while after the oven is switched off.

### **Air flow can be felt at the door and the exterior of the appliance.**

- This is normal.

**Light reflects on the door and the exterior of the appliance.**

- This is normal.

**Steam escapes from the door or the vents.**

- This is normal.

**Clicking sounds can be heard when the oven is working, particularly in the defrost setting.**

- This is normal.

**The fuse switches off regularly.**

- Consult a service technician.

**The display gives an error code, ERROR XX ...**

*(XX indicates the number of the error).*

- There is a fault in the electronic module. Disconnect the appliance from the power supply for a few minutes. Then reconnect it and set the current time.
- Consult a service technician if the error persists.

**Storing and repairing the oven**

Repairs should only be performed by a qualified service technician.

If maintenance is required, take the plug from the socket and contact the customer service.

**Have the following information to hand when you call:**

- The model number and serial number (stated on the inside of the oven door)
- Guarantee details
- A clear description of the problem



**Choose a clean, dry place if you have to store the oven temporarily, as dust and moisture can damage the appliance.**

### Disposal of the appliance and packaging

This product is made from sustainable materials. However, the appliance must be disposed of responsibly at the end of its useful life. The government can provide you with information about this.

The packaging of the appliance can be recycled. The following materials have been used:

- cardboard
- polyethylene wrap (PE)
- CFC-free polystyrene (hard PS foam)

Dispose of these materials responsibly in accordance with legal provisions.



The product has a pictogram of a rubbish bin with a cross through it. This indicates that household appliances must be disposed of separately. This means that the appliance may not be processed via the regular waste flow at the end of its useful life. You should take it to a special municipal waste depot or a sales outlet that offers to do this for you.

Collecting household equipment separately prevents harm to the environment and public health. The materials used in manufacturing this appliance can be recycled, which provides considerable savings in energy and raw materials.

### **Declaration of conformity**








We hereby declare that our products comply with the relevant European directives, standards and regulations as well as all requirements referred to in the standards.



# COOKING TEST

*Food tested in compliance with the EN 60705-2 standard*

## OM8487S / OM8487A

Microwave cooking					
Dish	Equipment	Guide (from the bottom)	Power (W)	Cooking time (min)	System
Egg custard, 1000 g	Glass container, dimension 25x25 cm, uncovered + glass baking tray	1	360	23-28	
Sponge cake	Round glass container, diameter 22 cm, uncovered + glass baking tray	1	360	22-25	
Meatloaf, 900 g	Glass container, dimensions 25x 12.5 cm, uncovered + glass baking tray	1	600 360	10 12-15	
Defrost meat (minced meat), 500 g	Glass baking tray	1	180 90	8 15-17	
Defrosting raspberries, 250 g	Glass container, uncovered + glass baking tray	1	180	7-7.30	







The appliance rating label is located on the inside of the appliance.

When contacting the service department,  
have the complete type number to hand.

You will find the addresses and phone numbers of the service organisation on the guarantee card.

 **ASKO**



597440

en (06-17)