

GB Instructions for use


DE Gebrauchsanweisung

F Notice d'utilisation

SI Navodilo za uporabo

BIH **HR** Upute za uporabu

BIH **SRB** **MNE** Uputstva za upotrebu

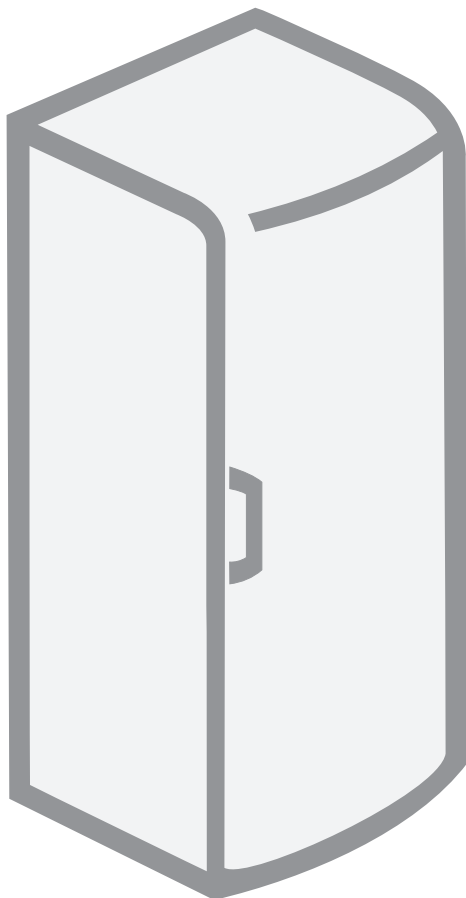

Refrigerator
Kühlschrank
Réfrigérateur
Hladilnik
Hladnjak
Frižider

We thank you for the confidence you have shown by purchasing our appliance.
We wish you a lot of pleasure using the appliance.

The appliance is intended solely for household use.

The refrigerator is intended for use in households, for storing fresh food at temperatures higher than 0°C.

Important warnings	3
A few tips on how to save power with your refrigerator-freezer combo	4
Appliance description	5
Installation and connection	6
Changing the door opening direction	7
Operating the appliance	8
Storing food in the refrigerator	10
Defrosting the appliance.....	12
Cleaning the appliance	12
Troubleshooting	13
Information on appliance noise	14

Important warnings

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Before connecting the appliance, carefully read the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several types / models; therefore, they may include descriptions of settings and equipment that may not be available in your appliance.
- Warning: the appliance should be secured against tripping, using the supplied bracket – see instructions, chapter “Installation and Connection”.
- Before connecting to the power mains, the appliance should be left to stand still in upright position for at least 2 hours. Thus, operation errors due to the effect of transport on the cooling system will be much less likely to occur.
- The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.
- The appliance may not be used outdoors and should not be exposed to rain.
- The appliance must be disconnected from the power mains (unplug the power cord from the wall outlet) before cleaning or before replacing the bulb.
- If the power cord is damaged, it should be replaced by a service technician or other authorized person.
- If the appliance is not used for a longer period of time, switch it off with the relevant button and disconnect it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.
- To protect the environment, dispose of the appliance after its useful life by taking it to an authorized waste collection center.
- The packaging is made of environment-friendly materials that can be recycled, disposed of, or destroyed without hazard to the environment.
- Children should not play with the appliance.
- The label with basic information on the appliance is attached in the appliance interior. If the label is not in your local language, replace it with the one supplied with the appliance.

- **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- **WARNING!** Do not damage the refrigerant circuit.
- **WARNING!** Do not use electric appliances in the refrigerator or freezer interior, except for those expressly allowed by the refrigerator-freezer manufacturer.




The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

A few tips on how to save power with your refrigerator-freezer combo

- Observe the installation instructions.
- Do not open the appliance door more frequently than necessary.
- Occasionally check whether air can circulate freely behind the appliance.
- Condenser unit mounted on the appliance back wall must be kept clean at all times (see section "Cleaning the appliance").
- If the seal is damaged or loose, replace it as soon as possible.
- Store your food in closed containers or other appropriate packaging.
- Before placing the food in the refrigerator, let it cool down to room temperature.
- Defrost your frozen food in the refrigerator compartment.
- Remove the freezer drawers and door as described in the instructions, in order to make use of the entire capacity.
- Defrost your conventional freezer when a frost layer approximately 3-5 millimetres thick has accumulated on the surfaces in the freezer compartment.
- Make sure the shelves are evenly distributed and that the food is arranged in a way that allows free circulation of air (heed the recommended food arrangement as described in the instructions).
- In appliances fitted with a fan, do not block the fan slots.

Appliance description

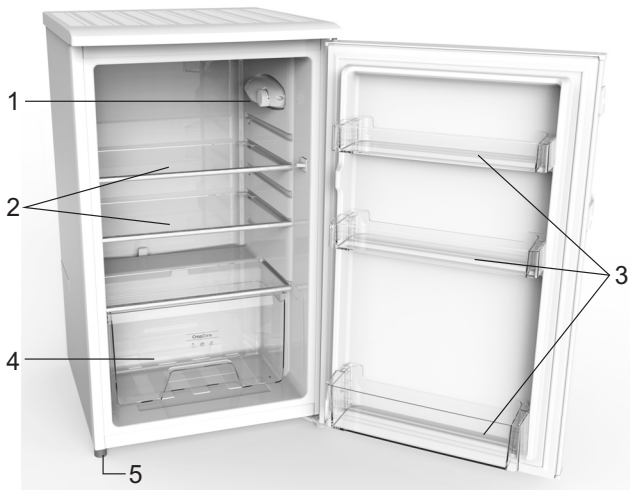

- 1 Control unit
- 2 Shelf (height adjustable)
- 3 Refrigerator door rack (deep and shallow version)
- 4 Fruit and vegetables bin
- 5 Leveler leg


Installation and connection

Selecting the room

- The appliance should be installed in a dry and well ventilated room. The appliance will operate correctly if the environment temperature is within the ranges listed in the table below. The appliance class is indicated on the label with the basic information on the appliance.

Class	Ambient temperature
SN (subnormal)	from +10°C to +32°C
N (normal)	from +16°C do +32°C
ST (subtropical)	from +16°C do +38°C
T (tropical)	from +16°C do +43°C

Installing the appliance

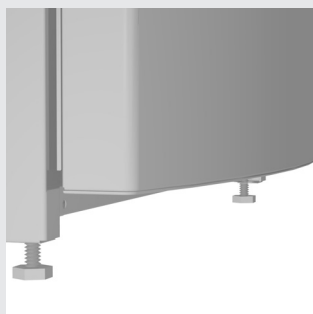

- Appliance installation should be carried out by at least two persons to avoid any physical injury or damage to the appliance.
- The appliance should stand firmly in an upright position on a sufficiently solid base. At the front, the appliance is fitted with two adjustable legs that can be used to level the appliance.
 - If there is a kitchen furniture element above the appliance, there should be a clearance of at least 5 centimeters between this element and the refrigerator, to ensure sufficient cooling of the condenser unit.
 - Do not expose the appliance to direct sunlight and do not place it near sources of heat. If this cannot be avoided, install an insulation panel.
 - The appliance may stand freely or it can be placed next to a kitchen furniture element or a wall. Mind the space required to open the door and pull out the drawers and shelves.







Connecting the appliance

- Use the power cord to connect the appliance to the power mains. The wall outlet should be fitted with a ground contact (safety socket). Nominal voltage and frequency are indicated on the label with basic information on the appliance.
- The appliance should be connected to the power mains and grounded in compliance with the relevant effective standards and regulations. The appliance will withstand short-term deviations from the nominal voltages, but not more than from -6 % to +6%.

Changing the door opening direction

Tools required: socket wrench / spanner Nr. 8, slot and cross screwdriver


1. Disassemble the screws behind the fixed roof with cross-slot screwdriver and remove the cover from the refrigerator.
2. Remove the screws fixed the top-hinge (A) with cross-slot screwdriver.
3. Replace the top-hinge and the door limit block and the door bearing bush to the other side
 - a) replace the top-hinge.
 - b) replace the door bearing bush and the limit block.
4. Disassemble the screws fixed the bottom-hinge (B) with cross-slot screwdriver and replace the hinge to the other side then fix it with screws
Note: the refrigerator incline angle less 45°.
5. Replace the leveler to the other side and adjust it to make sure the cabinet level.
6. Set the door right position, fix the top-hinge and then the roof cover.

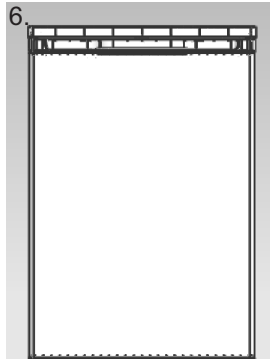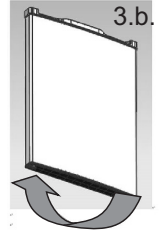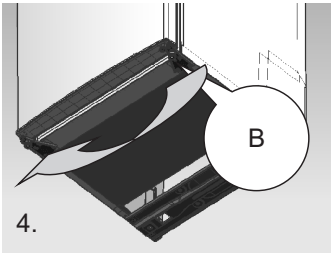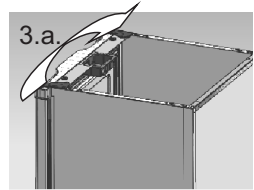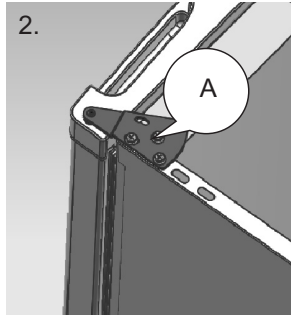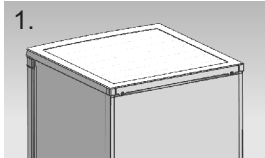

Ensure the Appliance is unplugged and empty.
Adjust the two leveling feet to their highest position.
We recommend you have someone to assist you.


NOTE: To take the door off it is necessary to tilt the Appliance backward.
You should rest the Appliance on something solid e.g.a chair just below the top panel.
Do not lay the Appliance completely flat as this may damage the coolant system.

Operating the appliance

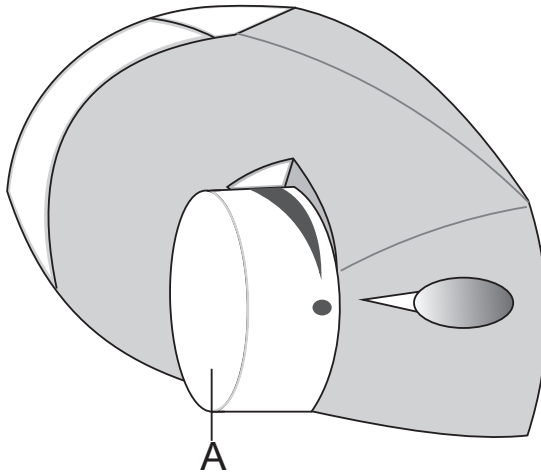

A Temperature setting and on/off knob



Switching the appliance on/off

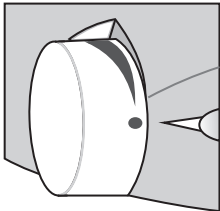

To switch on: rotate the **A** dial clockwise.

Switching off: Rotate the **A** knob back to the position in which the arrow is aligned with the symbol ● (caution: appliance will remain powered, i.e. there will still be electric current in the appliance).



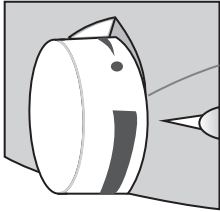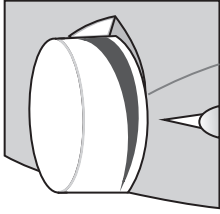





Adjusting the temperature



- To set the desired temperature, rotate the **A** dial in clockwise direction, i.e. to the right.
- A change in the environment temperature will affect the temperature in the appliance. Adjust the setting with the **A** dial accordingly. Positions towards the **thicker part** of the sign mean a lower temperature in the appliance (cooler). Settings towards the **thinner part of the sign** mean a higher temperature (warmer).
- If the temperature of the room where the appliance is installed is below 16°C, we recommend setting the **A** dial temperature to **the thickest part of the sign**.

Storing food in the refrigerator

Important warnings on food storage

-  **Appropriate use of the appliance, appropriate food packaging, maintaining the appropriate temperature and observing the hygienic guidelines will affect decisively the quality of food storage.**
-  **Observe the best before dates indicated on the product packaging.**
-  **Food stored in the refrigerator should be placed in closed containers or otherwise suitably packed to prevent emitting scent and moisture.**
-  **Do not store inflammable, volatile, and explosive substances in the refrigerator.**
-  **Bottles with high alcohol content should be tightly sealed and stored in an upright position.**
-  **Some organic solutions, essential oils in lemon and orange peel, butter acid, etc. may damage the plastic surfaces in case of a prolonged contact, causing premature ageing of these materials.**
-  **Unpleasant smell warns of poor appliance cleanliness or deteriorated food (see Cleaning and Maintenance).**
-  **Remove perishables from the refrigerator before a longer period of absence from home.**

Refrigerator interior equipment

The equipment depends on the models.

- The shelves can be inserted to any of the shelf guides in the refrigerator interior. Food that perishes quickly should be kept at the back of the shelf where the temperatures are lower.
- The bin / drawer at the bottom of the refrigerator compartment, under the glass shelf, is intended for storing fruit and vegetables. It provides humidity, thus preventing the food from dehydrating. The food must be appropriately packaged in order to prevent emitting or receiving smell and moisture.
- Interior side of the refrigerator door is fitted with racks and bins intended for storing cheese, butter, eggs, yoghurt, and other smaller packages, tubes, cans, etc. The lower part of the door is fitted with a bottle rack.

Food storage time**Recommended storage time for the refrigerator**

Foodsmoked	Time
eggs, marinated meat, smoked meat	up to 10 days
cheese	up to 10 days
root vegetables	up to 8 days
butter	up to 7 days
deserts, fruit, ready-to-eat dishes, raw meat chunks	up to 2 days
fish, raw chopped meat, seafood	up to 1 day

Defrosting the appliance

Automatic refrigerator defrosting

The refrigerator does not require defrosting, as ice accumulated on the back wall of the refrigerator compartment interior is melted automatically. The accumulated ice is thawed when the compressor is not operating. The drops will drip through the opening in the refrigerator back wall into a container above the compressor, from where they will evaporate.

If an excessive layer of ice is accumulated on the refrigerator back wall (3-5 mm), the appliance should be disconnected and defrosted manually.

Cleaning the appliance

Before cleaning, disconnect the appliance from the power mains - rotate the thermostat knob **A** to the ● position and unplug the power cord from the wall outlet.

- Use a **soft cloth** to clean all surfaces. Cleaners containing **abrasive particles, acids, or solvents, are not appropriate** as they will damage the surface.

Clean the **appliance exterior** with water or a mild solution of suds.

Lacquer-coated and aluminum surfaces can be cleaned with lukewarm water to which some mild detergent was added.

Cleaning agents with minor alcohol content are also acceptable (e.g. window cleaners).

Cleaners with alcohol content are not allowed for cleaning plastic parts.

Clean the appliance **interior** with lukewarm water to which you may add some **vinegar**.

- Placed under the cooling board that cools the refrigerator interior are a trough (groove) and an opening through which melted water is discharged from the appliance interior. The trough and the opening should never be blocked; therefore, check them often and clean as required (e.g. using a plastic straw).
- After cleaning, switch on the appliance and put the food back in.

Troubleshooting

Problem:	Cause or remedy:
Your Refrigerator will not operate:	<ul style="list-style-type: none"> • The power supply cord is unplugged. • The thermostat knob is set to OFF position.
The light so not work:	<ul style="list-style-type: none"> • The power supply cord is unplugged. • A household fuse or circuit breaker has tripped. • A light bulb is loose in the socket. • A light bulb has burned out.
Food in the refrigerator compartment freezing:	<ul style="list-style-type: none"> • The thermostat knob is set too cold. • The position of food stored touches the refrigerant power of refrigerator back wall.
Food in the refrigerator compartment is not cold:	<ul style="list-style-type: none"> • The air vents are blocked in the compartment. This prevents the movement of cold air. • The door(s) are opened too often of not close properly. • A large amount of food has just been added to the refrigerator or refrigerator compartment. • The position of thermostat knob is adjusted too low.
Melted frost Leak over compartment inside or on floor:	<ul style="list-style-type: none"> • The drain – off mouth entrance is blocked. • Evaporator pan is in place.
The refrigerator seems to make unusual noise:	<ul style="list-style-type: none"> • The refrigerator is leveled on the floor. • The body of the refrigerator touches the wall. • The drip tray is not placed properly.
There is interior moisture build - up:	<ul style="list-style-type: none"> • The air vents are blocked in the refrigerator. • The door is opened often. • The room is humid. • The food is not packaged correctly. • The control is not set correctly of the surrounding conditions.
The doors will not close completely:	<ul style="list-style-type: none"> • The shelves are out of position. • The gaskets are dirty. • The fridge is not level.

If the above methods are not yet effective, please contact with the maintenance service department for help without any delay.

Information on appliance noise

Cooling in the refrigerators-freezers is enabled by a cooling system with a compressor (with some appliances also a fan), which emits a certain level of noise during operation. The level of noise depends on installation, proper use, and appliance age.

- **After appliance startup**, the compressor may be somewhat louder (fluid noise, noise caused by refrigerant flowing through the system). This is not a sign of malfunction and it will not affect the appliance useful life. Eventually, the level of this noise will be reduced.
- Occasionally, **sudden or louder noise** may appear during appliance operation, which will appear uncommon; these are mostly the result of improper installation:
 - The appliance must be placed horizontally and firmly on a solid base.
 - The appliance should not be in contact with the wall or adjacent elements.
 - Make sure the appliance interior equipment is appropriately fitted and that the noise is not caused by vibrating cans, bottles, or other containers in contact with each other.

WE RESERVE THE RIGHT TO CHANGES THAT TO NOT AFFECT THE APPLIANCE FUNCTIONALITY.