


**GB** Instructions for use

**D** Gebrauchsanweisung

**SI** Navodilo za uporabo

**BIH** **HR** Upute za uporabu

**BIH** **SRB** **MNE** Uputstva za upotrebu

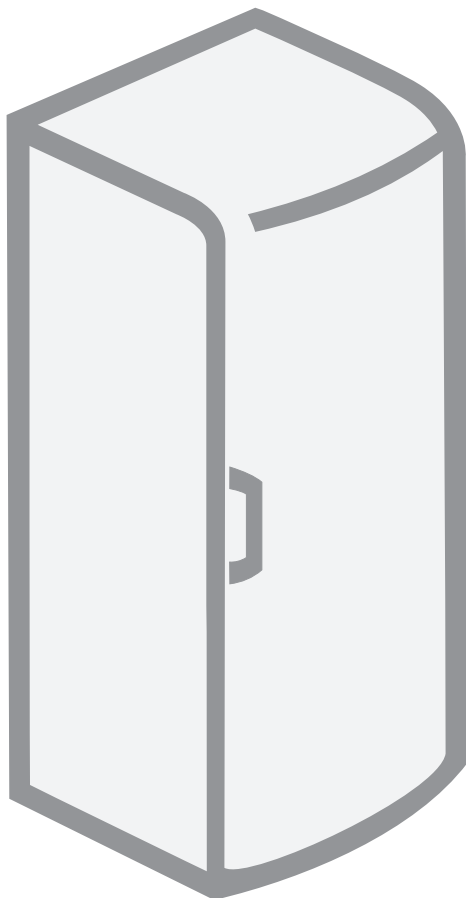

Upright freezer  
Gefrierschrank  
Zamrzovalna omara  
Uspravna ledenica  
Zamrzivač ladičar

# Upright freezer

We thank you for the confidence you have shown by purchasing our appliance.  
We wish you a lot of pleasure using the appliance.

**The appliance is intended solely for household use.**

**The upright freezer** is intended for use in households, for freezing fresh food and long-term storage of frozen food (up to one year, depending on the type of food).

<b>Important warnings .....</b>	<b>3</b>
<b>A few tips on how to save power with your refrigerator-freezer combo .....</b>	<b>4</b>
<b>Appliance description .....</b>	<b>5</b>
<b>Installation and connection .....</b>	<b>6</b>
<b>Changing the door opening direction .....</b>	<b>7</b>
<b>Operating the appliance .....</b>	<b>8</b>
<b>Freezing fresh food and storing frozen food .....</b>	<b>10</b>
<b>Defrosting the appliance.....</b>	<b>12</b>
<b>Cleaning the appliance .....</b>	<b>13</b>
<b>Troubleshooting .....</b>	<b>14</b>
<b>Information on appliance noise .....</b>	<b>15</b>

## Important warnings

- The appliance is manufactured in compliance with the effective safety standards. However, it can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Before connecting the appliance, carefully read the instructions for use which describe the appliance and its correct and safe use. The instructions apply to several types / models; therefore, they may include descriptions of settings and equipment that may not be available in your refrigerator.
- Remove the packaging that is intended for protecting the appliance or its respective parts during transport.
- Before connecting to the power mains, the appliance should be left to stand still in upright position for at least 2 hours. Thus, operation errors due to the effect of transport on the cooling system will be much less likely to occur.
- The appliance must be connected to the power mains and grounded in compliance with the effective standards and regulations.
- The appliance may not be used outdoors and should not be exposed to rain.
- The appliance must be disconnected from the power mains (unplug the power cord from the wall outlet) before cleaning or before replacing the bulb.
- If the power cord is damaged, it should be replaced by a service technician or other authorized person.
- If the appliance is not used for a longer period of time, switch it off with the relevant button and disconnect it from the power mains. Empty the appliance, defrost it, clean it, and leave the door ajar.
- To protect the environment, dispose of the appliance after its useful life by taking it to an authorized waste collection center.
- The packaging is made of environment-friendly materials that can be recycled, disposed of, or destroyed without hazard to the environment.
- Children should not play with the appliance.
- The label with basic information on the appliance is attached in the appliance interior. If the label is not in your local language, replace it with the one supplied with the appliance.
- **WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- **WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- **WARNING!** Do not damage the refrigerant circuit.
- **WARNING!** Do not use electric appliances in the refrigerator or freezer interior, except for those expressly allowed by the refrigerator-freezer manufacturer.




The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## A few tips on how to save power with your refrigerator-freezer combo

- Observe the installation instructions.
- Do not open the appliance door more frequently than necessary.
- Occasionally check whether air can circulate freely behind the appliance.
- Condenser unit mounted on the appliance back wall must be kept clean at all times (see section "Cleaning the appliance").
- If the seal is damaged or loose, replace it as soon as possible.
- Store your food in closed containers or other appropriate packaging.
- Before placing the food in the refrigerator, let it cool down to room temperature.
- Defrost your frozen food in the refrigerator compartment.
- Remove the freezer drawers and door as described in the instructions, in order to make use of the entire capacity.
- Place the cold accumulators (only with some models) directly onto the frozen food, at the front, in the upper section of the freezer compartment.
- Defrost your conventional freezer when a frost layer approximately 3-5 millimetres thick has accumulated on the surfaces in the freezer compartment.
- Make sure the shelves are evenly distributed and that the food is arranged in a way that allows free circulation of air (heed the recommended food arrangement as described in the instructions).
- In appliances fitted with a fan, do not block the fan slots.

# Appliance description

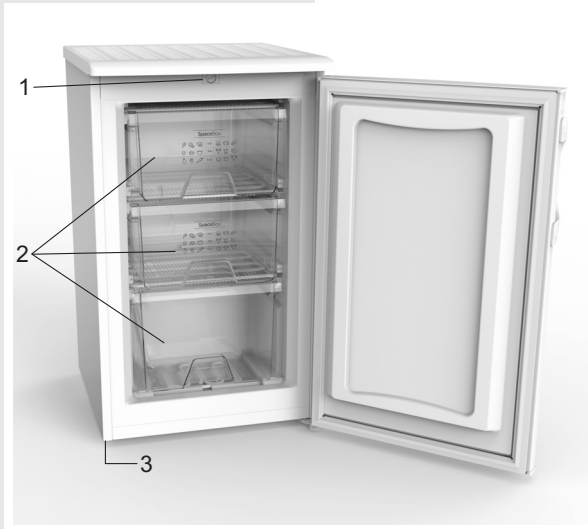

- 1 Control unit
- 2 Freezing and storage area
- 3 Leg


# Installation and connection

## Selecting the room

- The appliance should be installed in a dry and well ventilated room. The appliance will operate correctly if the environment temperature is within the ranges listed in the table below. The appliance class is indicated on the label with the basic information on the appliance.

Class	Temperature
SN (subnormal)	from +10°C to +32°C
N (normal)	from +16°C to +32°C
ST (subtropical)	from +16°C to +38°C
T (tropical)	from +16°C to +43°C

## Installing the appliance

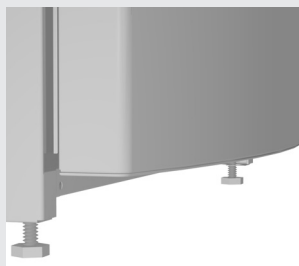

Appliance installation should be carried out by at least two persons to avoid any physical injury or damage to the appliance.

- The appliance should stand firmly in an upright position on a sufficiently solid base. At the front, the appliance is fitted with two adjustable legs that can be used to level the appliance (only with some models). Rear side of the appliance is fitted with wheels (certain models only) facilitating the positioning of the appliance at the preselected place.
- If there is a kitchen furniture element above the appliance, there should be a clearance of at least 5 centimeters between this element and the refrigerator, to ensure sufficient cooling of the condenser unit.
- Do not expose the appliance to direct sunlight and do not place it near sources of heat. If this cannot be avoided, install an insulation panel.







## Connecting the appliance

- Use the power cord to connect the appliance to the power mains. The wall outlet should be fitted with a ground contact (safety socket). Nominal voltage and frequency are indicated on the label with basic information on the appliance.
- The appliance should be connected to the power mains and grounded in compliance with the relevant effective standards and regulations. The appliance will withstand short-term deviations from the nominal voltages, but not more than from -6% to +6%.

# Changing the door opening direction

**Tools required: socket wrench / spanner Nr. 8, slot and cross screwdriver**


1. Disassemble the screws behind the fixed roof with cross-slot screwdriver and remove the cover from the refrigerator.
2. Remove the screws fixed the top-hinge (A) with cross-slot screwdriver.
3. Replace the top-hinge and the door limit block and the door bearing bush to the other side
  - a) replace the top-hinge.
  - b) replace the door bearing bush and the limit block.
4. Disassemble the screws fixed the bottom-hinge (B) with cross-slot screwdriver and replace the hinge to the other side then fix it with screws  
Note: the refrigerator incline angle less 45°.
5. Replace the leveler to the other side and adjust it to make sure the cabinet level.
6. Set the door right position, fix the top-hinge and then the roof cover.

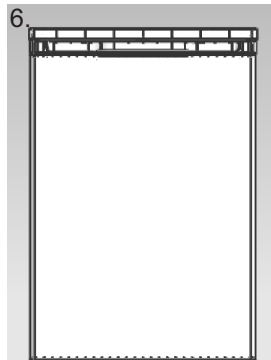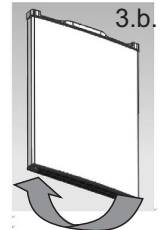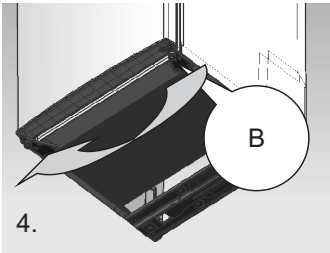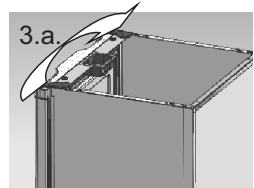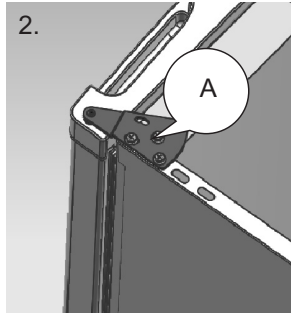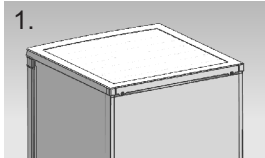


Ensure the Appliance is unplugged and empty.  
Adjust the two leveling feet to their highest position.  
We recommend you have someone to assist you.

**NOTE:** To take the door off it is necessary to tilt the Appliance backward.  
You should rest the Appliance on something solid e.g.a chair just below the top panel.  
Do not lay the Appliance completely flat as this may damage the coolant system.

## Operating the appliance

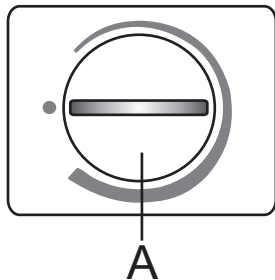


### *Turning the appliance on*

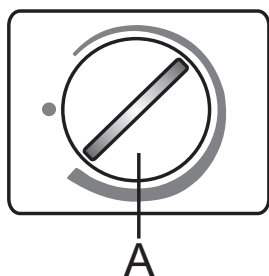

Rotate the thermostat knob **A** clockwise towards the thicker end of the sign.


### *Turning the appliance off*

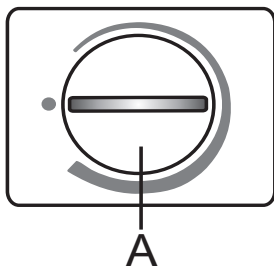

Rotate the **A** knob back to the position where the arrow is pointing to the ● symbol (the appliance is still powered).



## ***Adjusting the temperature***

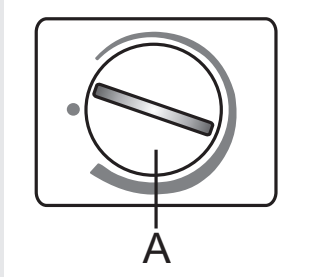


- Recommended setting for the thermostat knob **A** is half way between the thinner and the thicker end of the sign.
- A change in the environment temperature will affect the temperature in the appliance. The thermostat knob setting should be adjusted accordingly.

Positions towards the thicker part of the sign mean a lower temperature in the appliance (cooler). Settings towards the thinner part of the marking mean a higher temperature (warmer).

# Freezing fresh food and storing frozen food

## Freezing procedure

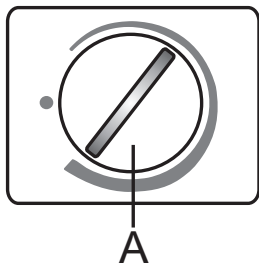

**⚠ Maximum quantity of fresh food that can be introduced into the appliance at a time is indicated on the label with basic information on the appliance. If this quantity is exceeded, freezing quality will deteriorate, as will the quality of the already frozen food.**

- Activate the freezer power boost 24 hours before freezing fresh food:
  - rotate the **A** dial towards the thickest part of the marking;

After 24 hours, place the fresh food into the freezing area / compartments. Fresh food should not be in contact with the frozen food already in the freezer!

- When freezing a minor quantity of food (1-2 kg), activating the Super Freeze function is not necessary.
- After 24 hours, the food can be moved to other parts of the freezers and the freezing process can be repeated as required.
- After the freezing process, rotate the **A** dial back to the desired setting.

## Important warnings on freezing fresh food

**⚠ The freezer should only be used for freezing food that is appropriate for freezing. The food should always be fresh and of adequate quality.**

**⚠ Choose an appropriate packaging for the food and package it correctly.**

**⚠ The packaging should be airtight and watertight to prevent loss of humidity or vitamins from the food.**

**⚠ Indicate the type of food, quantity, and freezing date on each food package.**

**⚠ It is important that the food is frozen as quickly as possible; therefore, smaller packages should be preferred. Before freezing, the food should be cooled.**

## Storing pre-frozen food

- When storing or using frozen food, observe the manufacturer's instructions. Temperature and best before date are indicated on the packaging.
- Only choose food with undamaged packaging, stored in freezers at temperatures of  $-18^{\circ}\text{C}$  or lower.
- Do not buy a food package covered with frost, as this is a sign that the food has been slightly thawed several times. Such food is of lesser quality.
- When transporting frozen food, prevent it from defrosting / thawing. Higher temperature will result in shorter storage time and deteriorated food quality.

---

***Storage times for frozen food*****Recommended time for storage in the freezer**

<b>Food</b>	<b>Time</b>
fruit, beef	from 10 to 12 months
vegetables, veal, poultry	from 8 to 10 months
venison	from 6 to 8 months
pork	from 4 to 6 months
chopped, dice, or ground meat	4 months
bread, pastry, ready-to-eat meals, lean fish	3 months
tripes / innards	2 months
smoked sausage, fatty fish	1 month

---

***Defrosting frozen food***

Microorganisms are not destroyed by freezing. After defrosting, their activity is resumed intensively and the food may perish quickly. Therefore, use the thawed food as quickly as possible. Partial thawing decreases the nutritive value of the food, particularly fruit, vegetables, and ready-to-eat food.

# Defrosting the appliance

## ***Defrosting traditional freezer***

- The freezer should be defrosted 2 – 3 times a year, or more often if appliance door is opened more frequently. Moving the cold accumulators (only with some models) directly onto the frozen food in the upper freezer compartment may reduce the number of times the freezer needs to be defrosted.
- 24 hours before defrosting, activate the freezer power boost to additionally cool the food (see chapter “Freezing process”).

After 24 hours, remove the frozen food from the freezer and protect them from thawing.

- Disconnect the appliance – rotate the thermostat knob **A** to the ● position and unplug the power cord from the wall outlet.
- Do not use electrical appliances to defrost the appliance (hairdryer etc.);
- When defrosting the refrigerator, do not use any defrosting sprays as these may damage the plastic surfaces or harm your health.
- Clean the appliance interior and wipe it dry (see cleaning the appliance).
- Before putting the food back into the freezer, connect the appliance to the power mains and rotate the **A** knob back to the desired setting.

## Cleaning the appliance

**Before cleaning, disconnect the appliance from the power mains** – rotate the thermostat knob **A** to the ● position and unplug the power cord from the wall outlet.

- Use a **soft cloth** to clean all surfaces. Cleaners containing **abrasive particles, acids, or solvents, are not appropriate** as they will damage the surface.

Clean the **appliance exterior** with water or a mild solution of suds.

Lacquer-coated and aluminum surfaces can be cleaned with lukewarm water to which some mild detergent was added.

Cleaning agents with minor alcohol content are also acceptable (e.g. window cleaners).

Cleaners with alcohol content are not allowed for cleaning plastic parts.

Clean the appliance **interior** with lukewarm water to which you may add some **vinegar**.

- Frost and ice accumulated in a layer of 3-5 mm will cause an increase in power consumption; therefore it should be removed regularly. Do not use any sharp objects, solvents, or sprays.
- After cleaning, switch on the appliance and put the food back in.

# Troubleshooting

<b>Problem:</b>	<b>Cause or remedy:</b>
Your Freezer will not operate	<ul style="list-style-type: none"> <li>• The power supply cord is unplugged.</li> </ul>
The doors will not close completely	<ul style="list-style-type: none"> <li>• The drawers are out of position.</li> <li>• The gaskets are dirty.</li> <li>• The Freezer is not level.</li> </ul>
Food frozen in the refrigerator Compartment	<ul style="list-style-type: none"> <li>• Is the thermostatic dial set to the correct position?</li> <li>• Have the foods stuff been put too crowded?</li> </ul>
The freezer is noisy when running	<ul style="list-style-type: none"> <li>• Check the freezer is level and it is not in contact with another appliance or kitchen furniture.</li> </ul>
The freezer does not cool sufficiently	<ul style="list-style-type: none"> <li>• If the door has been opened too often, or it has been left open for a while it will take time for the freezer to reach its set temperature.</li> <li>• Check the airflow the rear of the freezer has not been reduced due to insufficient clearance.</li> </ul>
The following characteristics should not be looked upon as a problem.	<ul style="list-style-type: none"> <li>• A gentle tricking sound caused by coolant flowing the pipe. Compressor operating at high temperature.</li> </ul>

If the above methods are not yet effective, please contact with the maintenance service department for help without any delay.

## Information on appliance noise

Cooling in the refrigerators-freezers is enabled by a cooling system with a compressor (with some appliances also a fan), which emits a certain level of noise during operation. The level of noise depends on installation, proper use, and appliance age.

- **After appliance startup**, the compressor may be somewhat louder (fluid noise, noise caused by refrigerant flowing through the system). This is not a sign of malfunction and it will not affect the appliance useful life. Eventually, the level of this noise will be reduced.
- Occasionally, **sudden or louder noise** may appear during appliance operation, which will appear uncommon; these are mostly the result of improper installation:
  - The appliance must be placed horizontally and firmly on a solid base.
  - The appliance should not be in contact with the wall or adjacent elements.
  - Make sure the appliance interior equipment is appropriately fitted and that the noise is not caused by vibrating cans, bottles, or other containers in contact with each other.

WE RESERVE THE RIGHT TO CHANGES THAT TO NOT AFFECT THE APPLIANCE FUNCTIONALITY.