 


Hisense

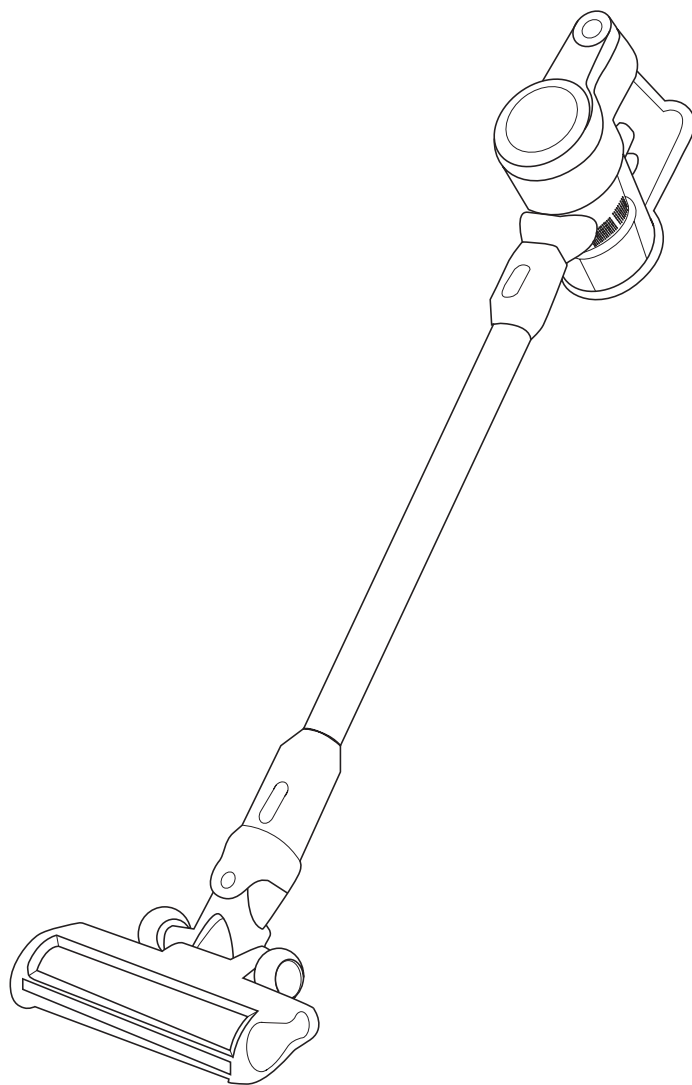

CORDLESS
VACUUM
CLEANER
Hi-Move III

QUICK GUIDE




78 dB (A)

Turbo

2/1


The diagram illustrates the features and usage of a cordless stick vacuum cleaner. On the left, a full-length view of the vacuum is shown. To its right, a hand is shown holding the dust container, which is filled with debris. Below this, two icons with checkmarks indicate: 1) A power button icon with a checkmark, suggesting the device is powered on. 2) A battery level icon with a checkmark, indicating the battery is charged. On the right side, a hand is shown holding the motor unit, which is attached to a motorized roller head. Above this, a 'Turbo' mode icon with a checkmark is shown. Below it, a 'no cord' icon with a checkmark indicates it is cordless. At the bottom right, a '2/1' icon with a checkmark is shown, likely representing a 2-in-1 functionality. The vacuum cleaner is shown in two positions: one upright and one tilted to show the motor unit and roller head. Sparkles around the roller head suggest cleaning performance.

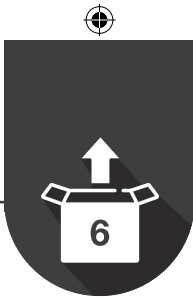


1. Suction hose



2. Motor unit with housing

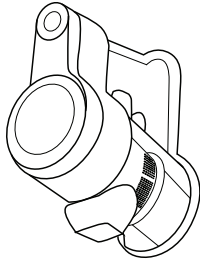


3. Adapter with power cord

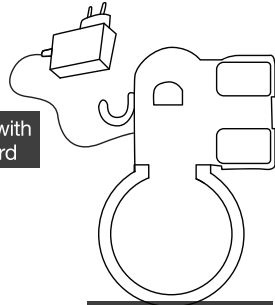


4. Wall-mountable holder

6. Electric brush

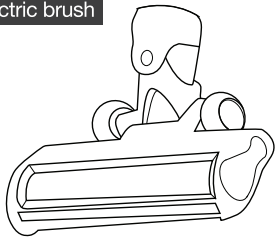


5. Extra attachments

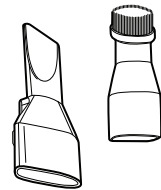






 
1.






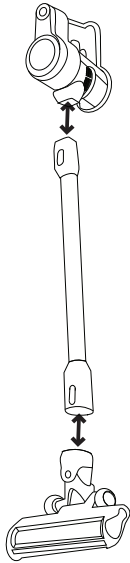


 2.

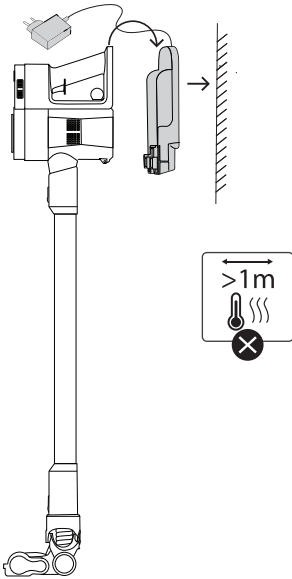


i

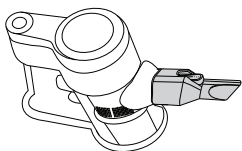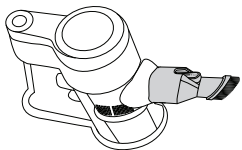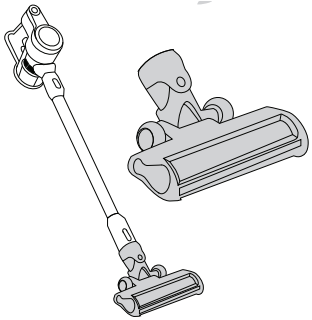   


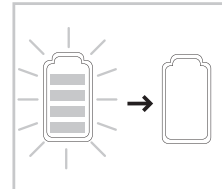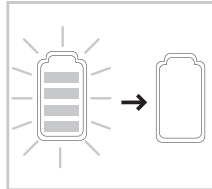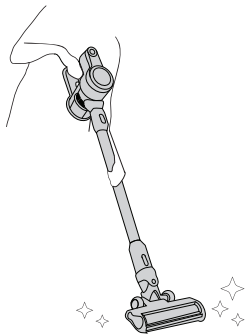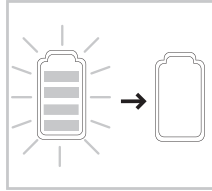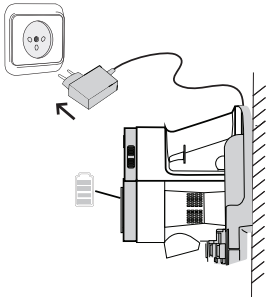      


1

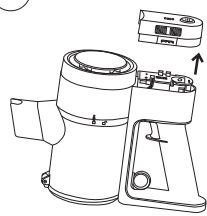 


2

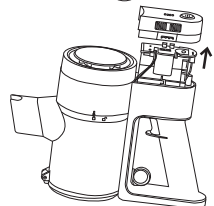 


5






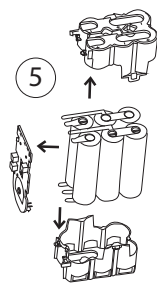 







4

 

3

 

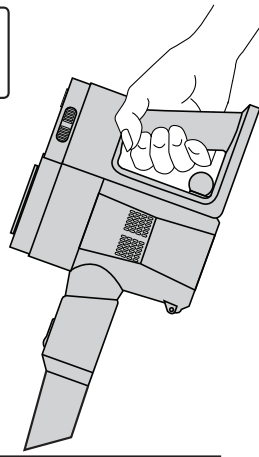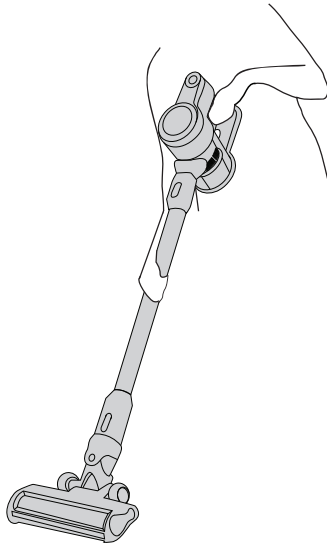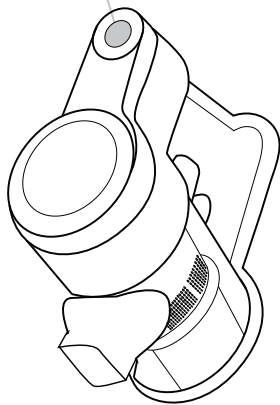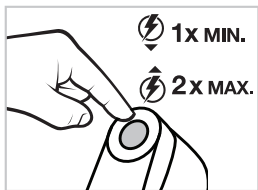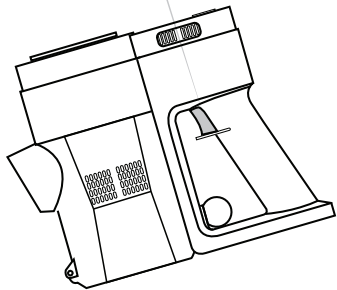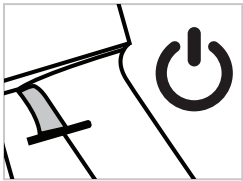      

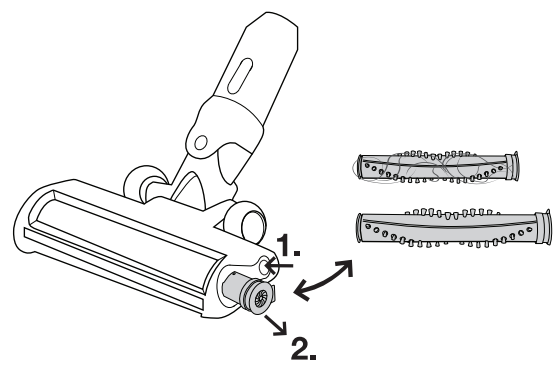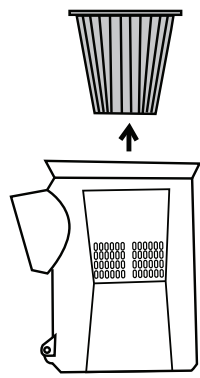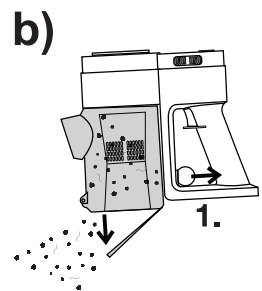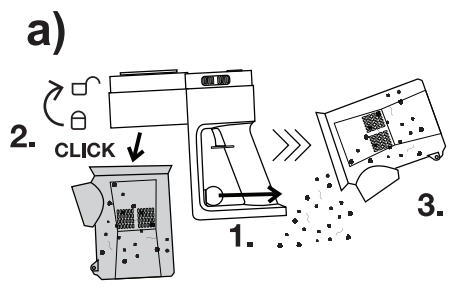     

Hisense