



Instructions for use  
OVEN

OCSM8487x / BO4TO1F5-42  
OCSM8487A1 / BO4TO1F5-42

**Pictograms used**



Important information



Tip

# YOUR OVEN

## ***Your oven***

Introduction	4
Control panel	5
Description	6
Guide rails/Telescopic guide rails	6
Accessories	7
Door	8
Cooling fan	8
Main functions	8
Keys	10
Navigation	11

## ***Initial use***

What to do first	13
------------------	----

## ***Operation***

Selecting your function	16
Function settings mode	16
Progress mode	18
Finish display	18
Changing settings during the progress	19

## ***Use***

Functions table	20
Using the microwave	26
Steam function	28
Programs and Favourites	30
Defrost	30
Settings menu	31
Plus menu	32
Stage cooking	36
Kitchen timer	37
Child lock	37

## ***Cleaning***

Cleaning the appliance	38
Steam clean	38
Cleaning the water tank filter	39
Descaling	39
Removing and cleaning the guide rails	40
Replacing the oven light bulb	41

## ***Solving problems***

General	42
---------	----

## ***Your oven and the environment***

Disposal of the appliance and packaging	44
---	----

## *Introduction*

---

Congratulations on choosing this Asko oven. This product is designed to offer simple operation and optimum user-friendliness. The oven has a wide range of settings, enabling you to select the correct cooking method every time.

This manual shows how you can best use this oven. In addition to information about operating the oven, you will also find background information that may be useful when using the appliance.



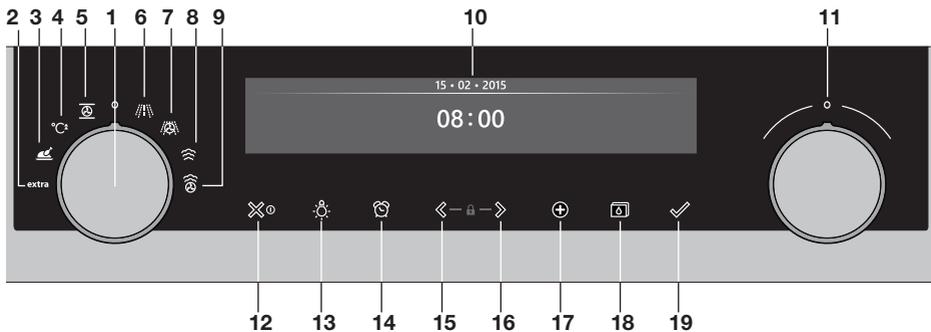
**Please read the separate safety instructions carefully before using the appliance!**

**Read this manual before using the appliance and keep it in a safe place for future use.**

Installation instructions are supplied separately.

# YOUR OVEN

## Control panel




1. Function knob (in 'Off' position)
  2. Extra
  3. Programs & Favourites
  4. Fast preheat
  5. Oven
  6. Microwave
  7. Combi microwave
  8. Steam
  9. Combi steam
  10. Display
  11. Selection knob
  12. On/off key and stop key (cancel)
  13. Lighting key
  14. Timer key
  15. Navigation key left\*
  16. Navigation key right\*
  17. Plus key
  18. Water reservoir key
  19. Confirm key
- \* touching 15+16 activates Child lock



### Note:

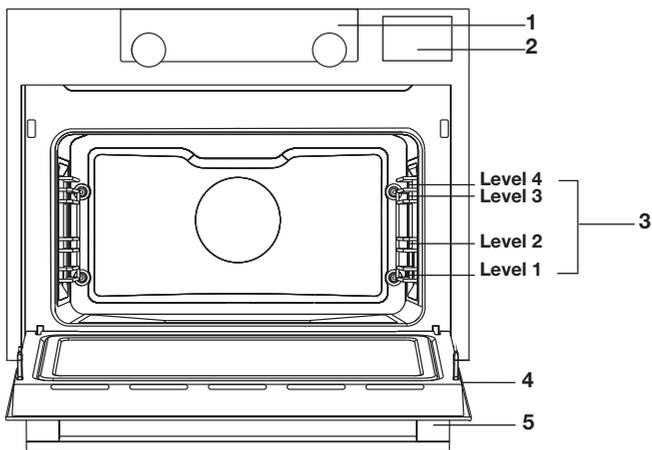The keys respond best if you touch them with a large area of your fingertip. Every time you touch a key during use, a short audio signal will sound.

## Description



1. Control panel
2. Water reservoir cover
3. Oven levels
4. Oven door
5. Door handle

## Guide rails/Telescopic guide rails

- The oven has four or five guide rails (Level 1 to 4/5), depending on the model. Level 1 is mainly used in combination with bottom heat. The two upper levels are mainly used for the grill function.
- Place the oven rack, baking tray or steam dish in the gap between the guide rail sliders.
- A number of shelf levels can have fully-retractable telescopic guide rails, depending on the model.
  - Pull the telescopic guide rails out of the oven cavity completely and place the oven rack / baking tray / steam dish on them. Then slide the oven rack / baking tray / steam dish on the telescopic guide rails, back into the oven cavity.
  - Only close the oven door when the telescopic guide rails have been returned completely back into the oven cavity.

# YOUR OVEN

## Accessories

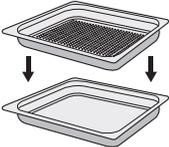
Your appliance is accompanied by a range of accessories, depending on the model. Only use original accessories; they are specially suited to your appliance. Be sure that all the accessories that are being used are able to withstand the temperature settings of the chosen oven function.

**Note:** not all accessories are suitable/available for every appliance (it may also differ by country). When purchasing, always provide the exact identification number of your appliance. Please see the sales brochures or check online for more details about optional accessories.

**Note:** never place an accessory on the bottom of the oven!

Accessories that can be supplied with your appliance (depending on the model)	
	<p><b>Enamelled baking tray;</b> to be used for pastries and cakes.</p> <ul style="list-style-type: none"><li>• Do not use the enamelled baking tray for microwave functions!</li><li>• Suitable for pyrolysis cleaning.</li></ul>
	<p><b>Oven rack;</b> mainly used for grilling. A steam dish or pan with food can also be placed on the oven rack.</p> <ul style="list-style-type: none"><li>• The oven rack is equipped with a safety peg. Lift the rack slightly at the front to slide it out of the oven.</li><li>• Do not use the oven rack for microwave functions!</li></ul>
	<p><b>Deep enamelled baking tray;</b> to be used for roasting meat and baking moist pastry.</p> <ul style="list-style-type: none"><li>• Do not place the deep baking tray on the lowest level during a cooking process, except when using it as a drip tray during grilling, roasting or roasting with a spit roast (when available).</li><li>• Do not use the deep enamelled baking tray for microwave functions!</li><li>• Suitable for pyrolysis cleaning.</li></ul>
	<p><b>Glass baking tray;</b> for microwave and oven use.</p> <ul style="list-style-type: none"><li>• NOT suitable for pyrolysis cleaning.</li></ul>
	<p><b>Non-perforated steam dish;</b> 40 mm deep (useful for collecting moisture during steaming).</p> <ul style="list-style-type: none"><li>• Note: discolouration may occur at temperatures above 180 °C! This will not influence the proper function of the oven.</li></ul>
	<p><b>Perforated steam dish;</b> 40 mm deep (useful for steam settings).</p> <ul style="list-style-type: none"><li>• Note: discolouration may occur at temperatures above 180 °C! This will not influence the proper function of the oven.</li></ul>

## YOUR OVEN

Accessories that can be supplied with your appliance (depending on the model)	
	<p><b>Perforated steam dish; 1/3GN.</b> <b>Perforated steam dish; 1/2GN.</b></p> <ul style="list-style-type: none"><li>Note: discolouration may occur at temperatures above 180 °C! This will not influence the proper function of the oven.</li></ul>
	<ul style="list-style-type: none"><li>The steam dishes can be used simultaneously on two levels. Place the perforated steam dish in the middle of the oven and the non perforated steam dish one level below the perforated steam dish.</li><li>For steaming you can place the perforated steam dish in the non-perforated steam dish. They can only be used together on a level with telescopic guide rails.</li></ul>

### Door

- The door switches interrupt the operation of the steam oven when the door is opened during use. The oven continues operating when the door is closed.
- This oven has a 'Soft close door system'. When closing the oven door, this system dampens the movement, from a certain angle, and silently closes the oven door.

### Cooling fan

The appliance is equipped with a cooling fan that cools the casing and control panel.

### Main functions

With the function knob you can select the main functions of your oven.

Setting	Description
	<b>Off/standby mode</b>

## YOUR OVEN

	<p><b>Oven</b>          Hot air          Hot air + bottom heat          Bottom + top heat          Large grill          Grill          Large grill + fan          Upper heat          Bottom heat          Bottom heat + fan          Pro roasting          Eco hot air</p>
	<p><b>Fast preheat</b>          With this function, the oven space quickly reaches the desired temperature. Do not use this setting when you have a dish in the oven space.</p>
	<p><b>Programs and favourites</b>          Favourites          Programs</p>
	<p><b>Extra</b>          Defrost          Regenerate          Plate warming          Keep warm          Steam clean</p>
	<p><b>Microwave</b>          Microwave</p>
	<p><b>Combi microwave</b>          Hot air + microwave          Large grill + fan + microwave</p>
	<p><b>Steam</b>          Steam          Steam - Low temperature          Sous vide</p>
	<p><b>Combi steam</b>          Hot air + steam density 1          Hot air + steam density 2          Hot air + steam density 3</p>

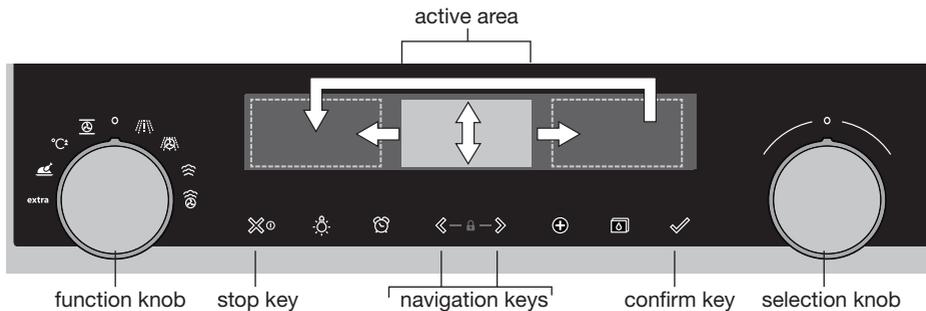
# YOUR OVEN

## Keys


In the table below you can find the discription of the different keys.

Keys	Description of the keys
	<b>On/off key and stop key</b> <ul style="list-style-type: none"><li>- Touch: cancel operation or go one step back in the menu.</li><li>- Touch and hold: turn the appliance off or on.</li></ul>
	<b>Lighting key</b> <ul style="list-style-type: none"><li>- Lighting comes on/goes off.</li></ul>
	<b>Kitchen timer</b> <ul style="list-style-type: none"><li>- The kitchen timer can be used independent of the oven function.</li><li>- The longest possible timer setting is 23:59.</li></ul>
	<b>Navigation key left</b> <ul style="list-style-type: none"><li>- To move the active area to the left.</li></ul>
	<b>Navigation key right</b> <ul style="list-style-type: none"><li>- To move the active area to the right.</li></ul>
	<b>Plus key</b> <ul style="list-style-type: none"><li>- To open or exit the settings menu (in standby-mode).</li><li>- To open or exit the plus menu with the extra options possible at that moment (in on-mode).</li></ul>
	<b>Child lock</b> <ul style="list-style-type: none"><li>- Touch and hold the left navigation key and right navigation key simultaneously to lock the appliance.</li></ul>
	<b>Water reservoir key</b> <ul style="list-style-type: none"><li>- To open the water reservoir hatch.</li></ul>
	<b>Confirm key</b> <ul style="list-style-type: none"><li>- To confirm all the white settings/elements in the screen.</li></ul>

## Navigation



By turning the function knob away from the 0-position, the icon of the chosen main function is lit. The display will show the icon and name of the activated function for about 1,5 seconds. Next you will see the chosen main function and sub-function at the top of the display in the feedback bar. Also the function settings mode will become active (grey background). In this activated area you can select your settings using the selection knob.

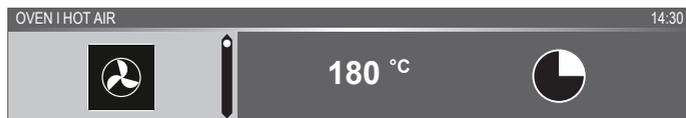

### Within every menu the navigation is as follows:

- Use the navigation keys or press the selection knob to move the active area (grey background).
- The setting in the active area can be changed by turning the selection knob (left = decrease, right = increase). The setting will be saved automatically.
- When all elements in the screen are set, then confirm these settings by touching the confirm key (this key will start blinking when it is possible to start the program).
- Touch the stop key to go one step back in the menu.

## YOUR OVEN



At the top of the display is a feedback bar. This bar shows where you are in the menu and what setting you are changing. Functions / settings are separated with a vertical line.

SETTINGS | GENERAL | SOUND | KEY SOUND

## What to do first

- Clean the oven interior and accessories with hot water and washing-up liquid. Do not use aggressive cleaning agents, abrasive sponges and similar.
- The oven will emit a particular odor when it is used for the first time; this is normal. Make sure that there is good ventilation during initial use.



When the appliance is plugged in for the first time or after the appliance was disconnected from the mains for a longer period of time, you have to set 'Language', 'Date', 'Time' and 'Water hardness'.

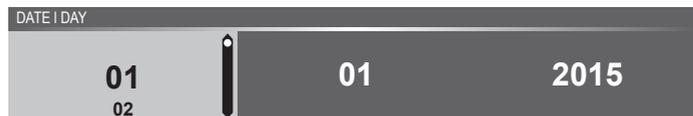
### Setting the language



In case you are not comfortable with the language on the display, you can select another language. The default setting is 'English'.

1. Turn the selection knob and select your preferred language from the displayed list.
2. Confirm the setting by touching the confirm key.  
*The next screen will be displayed.*

### Setting the date




1. Turn the selection knob and change the first setting (Day).
2. Confirm this setting by touching the right navigation key or by pressing the selection knob.
3. Turn the selection knob and change the next setting (Month).
4. Confirm this setting by touching the right navigation key or by pressing the selection knob.
5. Turn the selection knob and change the last setting (Year).
6. Confirm this setting by touching the confirm key.  
*The next screen will be displayed.*

## Setting the time



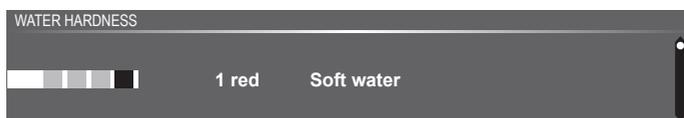1. Turn the selection knob and change the hours.
2. Confirm this setting by touching the right navigation key or by pressing the selection knob.
3. Turn the selection knob and change the minutes.
4. Confirm this setting by touching the confirm key.

## Setting the water hardness



The water hardness must be set prior to initial use.

If the water is softer or harder than the default setting, you can alter the set hardness level.

## Checking the water hardness

You can measure water hardness using the 'paper test strip' supplied with your appliance. For information about water hardness in your region please contact your local water board.

## Using the 'paper test strip'

Dip the test strip in water for 1 second. Wait 1 minute and read the number of bars on the paper strip. Check the table for the correct water hardness setting.

## Setting the water hardness

1. Compare the test strip with the image on the display.
2. Turn the selection knob until the bars on the screen correspond with those on the test strip.
3. Touch the confirm key to save the set water hardness.

*The equipment has now been programmed so that the descaling notification will appear in accordance with the actual water hardness.*

## INITIAL USE

Display	Test strip number/colour of the bars	Type	PPM	French hardness (°df)	German hardness (°dH)
1	4 green bars	Very soft water	0 - 90	0 - 9	0 - 5
2	1 red bar	Soft water	90 - 178	9 - 18	5 - 10
3	2 red bars	Rather hard water	178 - 267	18 - 26	10 - 15
4	3 red bars	Hard water	267 - 356	26 - 35	15 - 20
5	4 red bars	Very hard water	> 356	> 35	> 20

*All the start-up settings are now set and the display will show the standby screen. The appliance is now ready for use.*



The language, time, date and water hardness can be adjusted in the settings menu (see 'Settings menu' chapter). The settings menu can be opened from the start display via the 'Plus' menu.

### Standby display

The standby display will show the time, date, cavity temperature (if this is higher than 80 °C) and the timer (if set). The appliance goes to standby mode after:

- Turning the function knob to 0 ('off' position).
- Touching the stop key multiple times (deeper in the menu).

03 • 05 • 2015

12 : 00

### Off mode

- Default the appliance will shut down after no action for a set time of 30 minutes.
- Touch and hold the stop key to shut down the appliance manually.

### Switching on the appliance

- Touch and hold the stop key to switch on the appliance.
- The appliance can also be switched on by turning the function knob to a function.

## Selecting your function

Select a function appropriate for the meal you are cooking. Consult the table in chapter 'Functions table' to see which functions are available.

- Go directly to the progress mode by touching the confirm key (this key is blinking if it is possible to start the program).

After you have chosen a main function, the function settings mode is active (grey background). In this activated area, it is now possible to change the settings in this function.

## Function settings mode

**Example** (Oven/Hot air + bottom heat/40 minutes)

1. Choose a main function by turning the function knob.

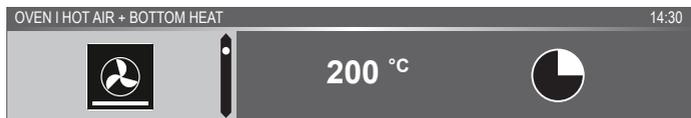
*The first sub-function setting becomes active.*



Now the settings can be changed as desired. There is the possibility to set:

- The function (consult the table in chapter 'Functions table').
- The temperature.
- The time.

2. Turn the selection knob and change the setting.




3. Confirm the setting by touching the right navigation key or by pressing the selection knob.

*The next sub-function setting becomes active.*




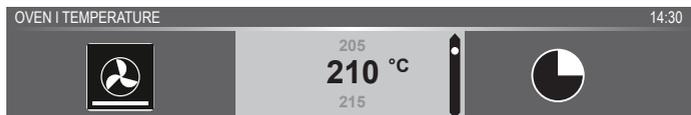4. Turn the selection knob and change the setting.



5. Confirm the setting by touching the right navigation key or by pressing the selection knob.

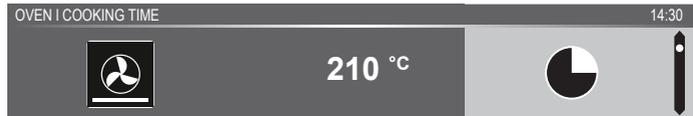*The next sub-function setting becomes active.*



- ▶ The timer icon shows that there is no timer necessary for this function. Touch the confirm key to start the program directly with the chosen settings (see step 7).
  - ▶ To set the timer, go to step 6.
  - ▶ If there is a timer necessary for a current function, the default timer setting is displayed instead of the timer icon.
6. Turn the selection knob and change the setting.



- ▶ H:M notation.
7. If preferred, select any additional setting using the plus menu (for example fast preheat). See for more information chapter 'Plus menu'.
  8. If the chosen function involves steam, then the tank must be filled with clean water before starting the program.
  9. Start the program: touch the confirm key to go to the progress mode.

*The program will start with the chosen settings; the oven will go to the progress mode and the progress screen is shown.*



## Progress mode

- Left side on the screen, the temperature is displayed (if the set temperature is not reached, the temperature will switch between cavity temp (grey) and set temp (white)). If the set temperature is reached a pop-up will appear 'set temperature is reached'.
- Right side on the screen, the time (counting down) or the progress time (counting up if no time was set) is displayed. Next to the cooking time you can see the finishing time.



- If preheating is chosen, the progress mode will first show the preheating display (preheating in the feedback bar and the preheating icon). All settings are displayed only the colours are switched. The cavity temperature is white and the chosen settings are grey. If the set temperature is reached, a pop-up will appear: 'Set temperature is reached. Insert dish'.



## Finish display

When the timer is finished, the 'finish display' will appear. Now it is possible to:

- Stop the progress.
- Add extra time.
- Gratin (if applicable).
- Save as favourite.



### **Stop the progress**

1. Touch the confirm key.

*The finish display will be closed and the standby screen will be shown.*

- If there is no action within 10 minutes, the display will switch to standby mode.

### **Add extra time**

1. Touch the right navigation key to select 'Add extra time'.
2. The time setting becomes active and can be changed directly by rotating the selection knob.
3. Confirm by means of the confirm key.  
*The previous process is activated again.*

### **Gratin**

1. Touch the right navigation key to select 'Gratin'.  
*Grill settings will be shown.*
2. The temperature (default 200 °C) and time can be set or the program can be started directly by touching the confirm key (time will start counting up).  
*After confirmation with the confirm key the progress screen will be shown.*

### **Save as favourite**

1. Touch the right navigation key to select 'Save as favourite'.  
*The next screen will show 10 positions where the program can be positioned.*
2. Select a position for your recipe by rotating the selection knob and touch the confirm key to save it.
3. Give the recipe a name. Rotate the selection knob to select the appropriate character and press the selection knob to confirm and go to the next character.
  - You can delete a character by means of the backspace function in the character list (arrow).
4. Touch the confirm key to save the recipe.

### **Changing settings during the progress**

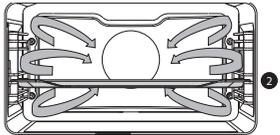
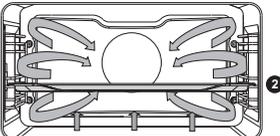
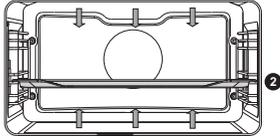
- During progress, touching the navigation keys will show the active area. The selected setting can now be changed, see chapter 'Function settings mode'.
- After confirmation with the confirm key the progress screen will be shown with the changed settings.
- After 5 seconds without actions the progress settings are cancelled and the display will return to the progress screen.




## Functions table





Consult the table to select the preferred function. Also consult the instructions for preparation on the dish packaging.










- In 'Microwave function': do not use metal cookware or utensils and do not preheat the oven.


Function	Description	
<b>Oven functions</b>		
	<p><b>Hot Air</b></p> <ul style="list-style-type: none"> <li>• Heating by means of hot air from the back of the oven.</li> <li>• This mode provides uniform heating and is ideal for baking.</li> <li>• Place the baking tray or oven rack in the middle of the oven.</li> <li>• Suggested temperature: 180 °C</li> <li>• Preheating is recommended.</li> </ul>	
	<p><b>Hot Air + Bottom Heat</b></p> <ul style="list-style-type: none"> <li>• Heating by means of hot air from the back of the oven and the bottom heating element.</li> <li>• This mode can be used to bake pizza, moist pastry, fruitcakes, leavened dough and short crust.</li> <li>• Place the baking tray or oven rack in the middle of the oven.</li> <li>• Suggested temperature: 200 °C</li> <li>• Preheating is recommended.</li> </ul>	
	<p><b>Top + Bottom Heat</b></p> <ul style="list-style-type: none"> <li>• Heating by means of the upper and lower heating elements.</li> <li>• This mode can be used for traditional baking and roasting.</li> <li>• Place the baking tray or oven rack in the middle of the oven.</li> <li>• Suggested temperature: 200 °C</li> <li>• Preheating is recommended.</li> </ul>	

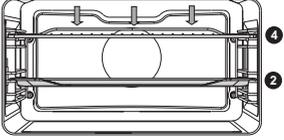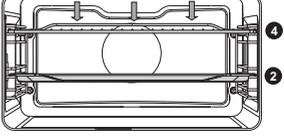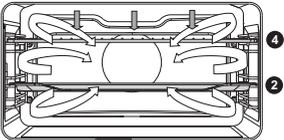Function	Description	
	<p><b>Large Grill</b></p> <ul style="list-style-type: none"> <li>• Heating by means of the upper element and grill element.</li> <li>• This mode can be used with dishes and baked goods that require a distinctive bottom crust or browning. Use just before the end of the baking or roasting time.</li> <li>• Place the oven rack in the upper part of the oven and the baking tray in the middle of the oven.</li> <li>• <b>Maximum allowed temperature: 230 °C</b></li> <li>• Monitor the cooking process at all times. The dish may burn quickly due to the high temperature.</li> <li>• Preheating is recommended.</li> </ul>	
	<p><b>Grill</b></p> <ul style="list-style-type: none"> <li>• Heating by means of the grill element.</li> <li>• This mode can be used for grilling a smaller amount of open sandwiches, beer sausages, and for toasting bread.</li> <li>• Place the oven rack in the upper part of the oven and the baking tray in the middle of the oven.</li> <li>• <b>Maximum allowed temperature: 230 °C</b></li> <li>• Monitor the cooking process at all times. The dish may burn quickly due to the high temperature.</li> <li>• Preheating is recommended.</li> </ul>	
	<p><b>Large grill + Fan</b></p> <ul style="list-style-type: none"> <li>• Heating by means of the top heating elements. The heat is distributed by the fan.</li> <li>• This mode can be used for grilling meat, fish and vegetables.</li> <li>• Place the oven rack in the upper part of the oven and the baking tray in the middle of the oven.</li> <li>• Suggested temperature: 170 °C</li> <li>• Monitor the cooking process at all times. The dish may burn quickly due to the high temperature.</li> <li>• Preheating is recommended.</li> </ul>	

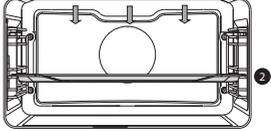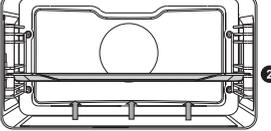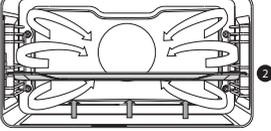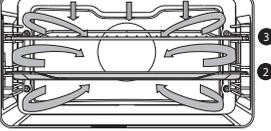Function	Description	
	<p><b>Top Heat</b></p> <ul style="list-style-type: none"> <li>• Heating only by means of the upper heating element.</li> <li>• This mode can be used when you wish to bake/roast the top part of your dish.</li> <li>• Place the baking tray or oven rack in the middle of the oven.</li> <li>• Suggested temperature: 150 °C</li> </ul>	
	<p><b>Bottom Heat</b></p> <ul style="list-style-type: none"> <li>• Heating only by means of the lower heating element.</li> <li>• This mode can be used with dishes and baked goods that require a distinctive bottom crust or browning.</li> <li>• Place the baking tray or oven rack in the lower part of the oven.</li> <li>• Use just before the end of the baking or roasting time.</li> <li>• Suggested temperature: 160 °C</li> </ul>	
	<p><b>Bottom Heat + Fan</b></p> <ul style="list-style-type: none"> <li>• Heating by means of the lower heating element. The heat is distributed by the fan.</li> <li>• This mode can be used for baking low leavened cakes, as well as for preservation of fruit and vegetables.</li> <li>• Place a not too high baking tray in the lower part of the oven, so that hot air can also circulate over the upper surface of the food.</li> <li>• Suggested temperature: 180 °C</li> </ul>	
	<p><b>Pro Roasting</b></p> <ul style="list-style-type: none"> <li>• Heating by means of the upper heating element in combination with the grill heating element and hot air.</li> <li>• This mode can be used for roasting all types of meat.</li> <li>• Suggested temperature: 180 °C</li> </ul>	

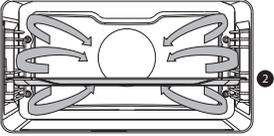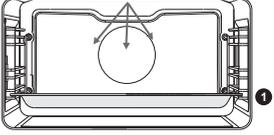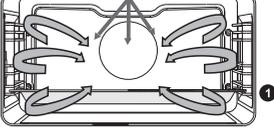
Function	Description	
	<p><b>ECO Hot air</b></p> <ul style="list-style-type: none"> <li>• Heating by means of hot air. ECO hot air uses less energy but gives the same result as the hot air setting. Cooking takes a few minutes longer.</li> <li>• This mode can be used for roasting meat and baking pastry.</li> <li>• Place the baking tray or oven rack in the middle of the oven.</li> <li>• Suggested temperature: 180 °C</li> <li>• This setting makes use of the residual heat (heating is not on the whole time) to achieve low energy consumption (in accordance with energy class EN 60350-1). In this mode the actual temperature in the oven is not displayed.</li> </ul>	
<b>Microwave function</b>		
	<p><b>Microwave</b></p> <ul style="list-style-type: none"> <li>• Microwave energy is used to cook and defrost foods. It provides fast efficient cooking without changing the colour or form of food.</li> <li>• Place the glass dish on level 1.</li> <li>• Suggested power: 750 W</li> </ul>	
<b>Combi microwave functions</b>		
	<p><b>Microwave + Hot Air</b></p> <ul style="list-style-type: none"> <li>• This system employs a combination of microwaves and hot air; therefore, the cooking time is shorter.</li> <li>• Use this for all types of meat, stews, vegetables, pies, cakes, bread and dishes au gratin (i.e. food that require longer cooking time).</li> <li>• Place the glass dish on level 1.</li> <li>• Suggested temperature: 160 °C</li> <li>• Suggested power: 600 W</li> </ul>	

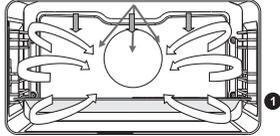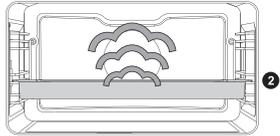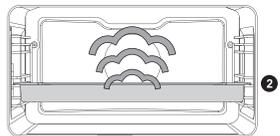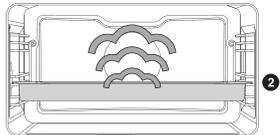Function	Description	
	<p><b>Microwave + Grill with Fan</b></p> <ul style="list-style-type: none"> <li>• The food is cooked with a combination of microwaves and grill with fan.</li> <li>• Use this combination for smaller chunks of meat, fish and vegetables.</li> <li>• It allows fast cooking and the food will have a nicely browned crispy crust.</li> <li>• Place the glass dish on level 1.</li> <li>• Suggested temperature: 200 °C</li> <li>• Suggested power: 600 W</li> </ul>	
<b>Steam functions</b>		
	<p><b>Steam</b></p> <ul style="list-style-type: none"> <li>• Heating by means of steam.</li> <li>• See chapter 'Steam function' for more information.</li> <li>• Steam of 100 °C is sprayed into the oven cavity at regular intervals.</li> <li>• This mode can be used to steam vegetables, eggs, fruit and rice, for example.</li> </ul>	
	<p><b>Steam - Low temperature</b></p> <ul style="list-style-type: none"> <li>• Heating by means of steam.</li> <li>• See chapter 'Steam function' for more information.</li> <li>• Steam is sprayed into the oven cavity at regular intervals.</li> <li>• This menu can be used to steam vegetables and fish, to keep food warm and defrost food.</li> </ul>	
	<p><b>Sous vide</b></p> <ul style="list-style-type: none"> <li>• Heating by means of steam.</li> <li>• See chapter 'Steam function' for more information.</li> <li>• The vacuum-sealed food is slow-cooked at a low temperature.</li> <li>• With this method the food's flavour, vitamins and minerals are preserved. Vacuum sealing gives the dish a longer shelf life.</li> <li>• Use this function to cook vegetables, fruit, meat, poultry and fish.</li> </ul>	

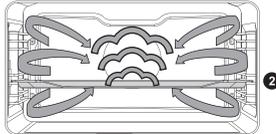Function	Description	
<b>Combi steam functions</b>		
 <p>High 3</p>  <p>Medium 2</p>  <p>Low 1</p>	<p><b>Hot air + Steam density 1 / 2 / 3</b></p> <ul style="list-style-type: none"> <li>• Heating by means of hot air in combination with steam.</li> <li>• The steam is sprayed into the oven cavity at regular intervals.</li> <li>• This mode can be used for baking types of pastry such as puff pastry, brioche pastry, yeast dough buns, French bread, gratins and roasting meat. The hot steam ensures a nice crispy brown top and an airy texture. Meat and fish remain nice and juicy inside. For this mode always make sure that the water reservoir is filled with fresh water.</li> <li>• HIGH: cooking escalopes, steaks and smaller chunks of meat</li> <li>• MEDIUM: reheating cool/frozen meals, cooking fish fillets and vegetables au gratin</li> <li>• LOW: cooking large chunks of meat (roast, whole chicken), baking risen dough (bread and rolls), cooking lasagna etc.</li> </ul>	
<b>Extra functions</b>		
	<p><b>Defrost</b> This function uses microwaves. Dishes are defrosted quickly and efficiently.</p>	
	<p><b>Regenerate</b> This mode is used to warm already cooked dishes. The use of steam means there is no loss of quality. Taste and texture are preserved as though the dish is freshly-cooked. Various dishes can be regenerated simultaneously.</p>	
	<p><b>Plate warming</b> This function is used for warming tableware, so that the served food stays hotter for longer.</p>	
	<p><b>Keep warm</b> This mode is used to keep already cooked dishes warm.</p>	
	<p><b>Steam clean</b></p> <ul style="list-style-type: none"> <li>• With this function and a damp cloth, you can easily remove grease and dirt from the oven walls.</li> <li>• Use this function only when the oven has cooled down fully. Steam is sprayed into the oven cavity at regular intervals.</li> <li>• After soaking, food residues can be removed using a damp cloth.</li> </ul>	

## Using the microwave

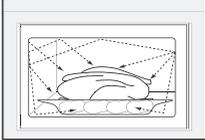Microwaves are high-frequency electromagnetic waves. The energy makes it possible to cook or warm up dishes without affecting the form or colour.



### Cooking principle

1. The microwaves generated by the microwave are spread evenly by a distribution system. This cooks the dish evenly.
2. The food absorbs the microwaves to a depth of approximately 2.5 cm. Cooking then continues, because the heat is spread in the dish.
3. The cooking times vary and depend on the dish you use and the properties of the food:
  - Quantity and density
  - Moisture content
  - Starting temperature (whether or not it is cooled)

### Important

The dish is cooked from the inside out by means of heat distribution. The cooking continues even when you take the dish from the oven. Standing times in recipes and in this book should therefore be adhered to, in order to ensure:

- Even heating into the middle of the dish;
- Equal temperatures in all parts of the dish.

Power	Use
1000 W	<ul style="list-style-type: none"> <li>• For quick heating of drinks, water and dishes containing a lot of moisture.</li> <li>• For cooking fresh or frozen vegetables.</li> </ul>
750 W	<ul style="list-style-type: none"> <li>• For preparing and heating of drinks and dishes.</li> </ul>
600 W	<ul style="list-style-type: none"> <li>• For melting chocolate.</li> <li>• For cooking fish and seafood.</li> <li>• For heating on two levels.</li> <li>• For cooking dried beans at low temperatures.</li> <li>• For heating or cooking delicate dishes with eggs.</li> </ul>
360 W	<ul style="list-style-type: none"> <li>• For cooking dairy products or jam at low temperatures.</li> </ul>
180 W	<ul style="list-style-type: none"> <li>• For fast defrosting of dishes.</li> <li>• For softening butter or ice cream.</li> </ul>
90 W	<ul style="list-style-type: none"> <li>• For defrosting cakes containing cream.</li> </ul>

## Guidelines for microwave cookware

Cookware that you use for the microwave function should not block the microwaves. Metals such as stainless steel, aluminium and copper reflect microwaves. For that reason, do not use metal cookware. Cookware which is designated as microwave-safe can be used safely. For more information about suitable cookware, consult the following guidelines and always use the glass baking tray on level 1 if you use the microwave function.

Cookware	Microwave safe	Remarks
Aluminium foil	✓X	Can be used in small quantities to prevent certain parts of the dish from overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Porcelain and earthenware	✓	Porcelain, earthenware, glazed earthenware and ivory porcelain are usually suitable, unless they have a metal edge.
Disposable crockery made from polyester or cardboard	✓	Frozen meals are sometimes packaged in disposable tableware.
Fast food packaging		
• Polystyrene cups	✓	Can be used to warm up dishes. Polystyrene can melt if it overheats.
• Paper bags or newspaper	X	Can catch fire.
• Recycled paper or metal edges	X	Can cause arcing.
Glassware	✓	
• Oven dishes		Can be used, unless it has a metal edge.
• Fine glassware		Can be used to warm up dishes or liquids. Thin glass can break or shatter with sudden heating.
• Glass jars		The lid must be removed. Only suitable for warming.
Metal	X	Can cause arcing or fire.
Paper		
• Plates, cups, kitchen paper	✓	For short cooking times and warming. For absorbing excess moisture.
• Recycled paper	X	Can cause arcing.
Plastic	✓	Especially heat-resistant thermoplastic material. Other types of plastic can warp or discolour at high temperatures. Do not use melamine plastic. Can be used to hold moisture. May not touch the food. Be careful when you remove the film; hot steam can escape. Only if boil-proof or ovenproof. Must not be airtight. If necessary, prick it with a fork.

✓: Recommended

✓X: Careful

X: Unsafe

### Steam function



**Warning** – Risk of scalding! Leave the door closed during steam functions, hot steam can escape in case of opening. Condensation in the oven will increase when opening the door.



**Note:** Let the oven cool down after every steam function and dry the inside of the oven with a soft cloth.



**Note:** The water system empties each time the steam function is finished. This action is audible and is part of the steam oven's normal operation.

### Advantages of steam cooking

- Healthy and natural, steam cooking retains the colour and taste of the dish. No odors are released using this cooking method.
- Steam cooking (stewing, cooking, roasting) starts before the oven cavity temperature reaches 100 °C.
- Slow cooking (stewing, cooking, roasting) is also possible at lower temperatures. It is healthy: vitamins and minerals are preserved as only a small proportion of these dissolve in the hot moisture of the dish.
- It is not necessary to add any form of fat or oil during steam cooking.
- Steam does not distribute smell or taste, enabling meat or fish to be cooked together with vegetables.
- Steam is also suitable for blanching, defrosting and warming or keeping a dish warm.

### Sous vide

Using the sous vide steam function:

- Vacuuming
  - First vacuum the food in plastic using a vacuuming machine. This process removes most of the air from the plastic bag. The bag preserves nutrients and taste during cooking, resulting in food that is juicier, softer and tastier.
- Vacuum cooking
  - Cook the dish at the correct temperature and the correct time using the oven's Sous Vide steam setting (see 'Recipes and cooking times').
  - Most dishes can be kept at serving temperature (around 60 °C) for a few hours, which makes mise en place very easy: you simply remove the dish from the oven when you need it.

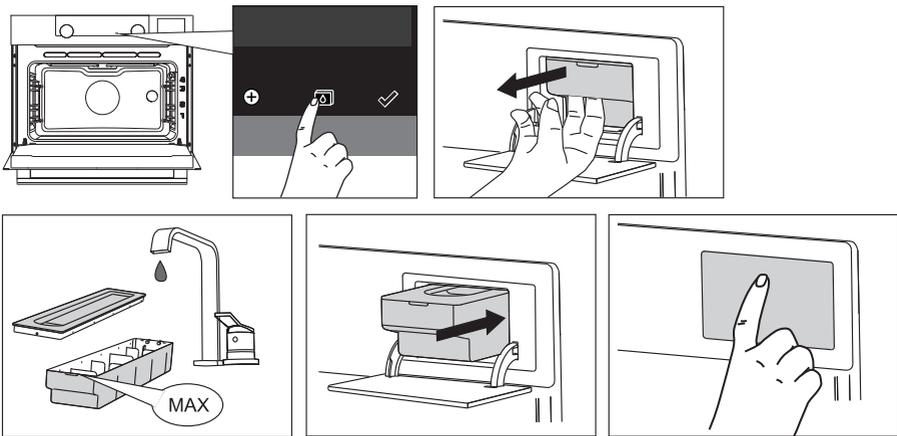
### Filling the water reservoir

Always fill the reservoir prior to using a steam function.

# USE

Use clean and cold tap water, bottled water without added minerals or distilled water suitable for consumption.

1. Touch the 'water reservoir' key to open the water reservoir cover.
2. Use the handle to remove the reservoir from the oven.
3. Remove the water reservoir lid and clean the water reservoir with clean water.
4. Fill the reservoir with water up to the 'MAX' mark on the reservoir (around 1.2 litres).
5. Push the water reservoir back in the oven until a click is heard (position switch is activated).
6. Close the water reservoir cover.



*Any water remaining in the steam system after cooking will be pumped back into the water reservoir. Empty, clean and dry the water reservoir after using the steam function. Only fill the reservoir just prior to using it!*

## Programs and Favourites

### Automatic programs

- You can use 'automatic programs' for baking and roasting by selecting a dish from a list of pre-programmed dishes. First select the type of dish and then the dish itself from the available list.
- All the program categories have a picture. When a dish is selected, the program settings will appear. The name of the dish and the name of the active selection are shown in the text bar.
- In the settings, first a picture of the dish is visible (not editable), the weight (depending on the dish) (if it is editable), the intensity (not always editable) and the cooking time. If necessary, adjust the intensity and/or the weight.

### **Favourites** (see chapter 'Finish display')

- You can select your own stored recipes in 'favourites'.
- If there are no saved recipes, a pop-up will appear: 'No saved dishes'.
- The name of the recipe appears in the text bar and the saved oven settings are shown.

### ***Defrost***

---

- This function uses microwaves. Dishes are defrosted quickly and efficiently. Use this function for slow defrosting of frozen dishes (cakes, biscuits, cookies, bread, bread rolls and frozen fruit).
- By choosing this function you can determine the defrost power level and duration.
- Turn the food over after half the defrost time has elapsed; stir the food or break up large pieces if these are frozen together.

### ***Settings menu***

---

The settings menu is only available by touching the 'plus key' when the

appliance is in standby mode.

Setting	Description
	<b>General</b> Language Time Date Sounds
	<b>Display</b> Brightness Oven light Night mode Appliance to stand-by mode
	<b>Cooking</b> Microwave Default program intensity Steam Preheat settings
	<b>System</b> Appliance information Factory settings

### General

You can set the following from this menu:

- Language (language of the display)
- Time (always in 24H format)
- Time display (24H or 12H format)
- Clock size (small / large)
- Date (always day-month-year format)
- Date display (ddmmyyyy or mmddyyyy)
- Sounds (volume of the general sounds and alarms)
- Key sounds (on/off)
- Welcome sound (startup/shutdown sound on/off)

### Display

You can set the following from this menu:

- Brightness (low, mid, high)
- Oven lighting (auto switch off after 1 min. / manual)
- Night mode (start and end time for lower display brightness: first display set start timer, second display set end time)
- Stand-by (auto switch off / manually switch off)

**Changing to manually switch off will increase energy consumption. If the oven is switched off manually (or when an interruption of the power supply occurs) this function will be reset (the display will automatically switch off).**



### Cooking

You can set the following from this menu:

- Microwave (default 750 W for 1 minute)
- Default program intensity (low / medium / high)
- Steam (Descaling / Water hardness)
- Preheat settings (set preheat default on or off)

### System

You can set the following from this menu:

- Appliance information (request appliance information)
- Factory settings (back to factory settings)

### *Plus menu*

---

Depending on the function, there is a possibility to choose extra functionality (after you have chosen a main function and settings in the 'Function settings mode') by touching the 'plus key'.

- A small icon next to the current time will give an indication about the activated plus menu functions. The colour of the icon will indicate if it is active (white) or inactive (grey).
- To exit the plus menu, touch the 'stop key' or 'plus key'; the display will show the previous screen again.
- To cancel an extra functionality, select 'cancel' (icon with a red stripe).

+ Menu	Description	Icon
	<p><b>Cooking info</b> Request more information about the selected function.</p>	
	<p><b>Fast preheat</b> Preheat the oven to the desired temperature quickly (not available in combination with delayed start).</p>	
	<p><b>Delayed start</b> The cooking process will start automatically and will be finished at the preferred time. Only available if a cooking time is set, not available in combination with preheat, Gril, Large grill and large grill + fan.</p>	
	<p><b>Gratin</b> To add the grill function at the end of the progress; gratin time will be added at the end of the progress.</p>	
	<p><b>Add to favourites</b> To add the settings for the cooked dish to your favourites (see chapter 'Finish display').</p>	
	<p><b>Stage cooking</b> Combine up to three functions in one cooking process.</p>	
	<p><b>Go to manual cooking</b> To edit a standard program as stage cooking program.</p>	
	<p><b>Add steam 1-3x</b> Divide up to three steam cycles evenly over the cooking process. Choose at least 10 minutes cooking time.</p>	
	<p><b>Add steam</b> Add a steam cycle to the cooking process.</p>	

## **Cooking information**

The cooking info screen will give more information about the chosen function, like the needed equipment and for what kind of purposes the function is used.

## **Activate the fast preheat in the settings menu (to be default on or off)**

1. Touch the plus key when the appliance is in standby mode. Go to 'Cooking settings' and select if the fast preheat should be default on or off.
2. Touch the confirm key.
  - If the fast preheat is set to 'default on' the small preheat icon will be shown to indicate the active preheat function.
  - This option is only available for the oven functions.

## **Activate the fast preheat in the plus menu**

1. Touch the plus key (in the 'Function settings mode').
2. Select 'Fast preheat' by touching the right navigation key.
3. Touch the confirm key to activate fast preheat.

*The small preheat icon will be shown next to the current time.*

  - When preheat is activated, the delayed start will be greyed out, because these functions do not work together.
  - When delayed start is activated preheat will be greyed out.
  - To cancel the preheat: touch the confirm key again.

## **Starting with fast preheat**

- If a program is started and it will start with the fast preheat, a pop-up will appear. After 15 sec. the pop-up will automatically disappear. The progress screen will show the fast preheat icon, the time will be greyed out.
- If the set temperature is reached a pop-up will show 'The set temperature is reached. Please insert the dish'. Insert the dish and the program will start automatically on door closing.
  - Touching the confirm key (without opening the door) keeps the appliance at the set temperature. This situation will remain until the door is opened.

## Delayed start

Use the 'delayed start' function to start cooking at a later time, by setting the desired finishing time.

1. Touch the plus key (in the 'Function settings mode').
2. Select 'Delayed start' with the right navigation key.
3. Touch the confirm key.

*The display will show the delay start symbol, the cooking time and the end time.*

4. Change the finishing time by turning the selection knob and confirm with the confirm key.

*A small icon will appear to indicate that the function is active.*

- To cancel the delayed start: go to 'Delayed start' and select 'cancel delayed start' (a pop-up will appear to confirm the cancellation of the delayed start).
5. Start the program: touch the confirm key to go to the progress mode.

*The function will start automatically at the calculated starting time.*

## Gratin

To add the grill function at the end of the progress (gratin time will be added at the end of the cooking process).

1. Touch the plus key (in the 'Function settings mode').
2. Select 'Gratin' with the right navigation key.
3. Touch the confirm key.

*A small grill icon will appear next to the current time.*

- To cancel gratin: select 'cancel gratin' in the plus menu.

## Go to manual cooking

- In the manual cooking mode, a standard program from the 'Programs and favorites' function can be chosen and edited as in 'Stage cooking' mode.
- By selecting the manual function in the plus menu, a popup will appear: 'Switch to oven mode?'. After confirmation the display will switch to the stage cooking mode if the selected program has more stages.

## Stage cooking

This function allows you to combine up to three functions in one cooking process. Select different functions and settings to compose the cooking process of your preference.

1. Touch the plus key (in the 'Function settings mode').
2. Select 'Stage cooking' by touching the right navigation key.
3. Touch the confirm key.

*The first stage is already filled with the current settings of the function. If there is no time set, then the default time will be set for the first stage.*

- For example: the oven mode and hot air 180 °C is selected; the default time of 30 min. will be added to the first stage.
4. To add a stage, choose the second function by touching the navigation keys or pressing the selection knob.
  5. Touch the confirm key.  
*The display will switch to the settings screen.*
  6. Select the desired function by rotating the selection knob.
  7. Touch the confirm key and set the temperature and time.
  8. Save the stage and return to the stage cooking overview by touching the confirm key.
    - If the stop key is touched the setting will be cancelled and the display will turn to the previous display.
  9. If desired, add a third stage. Repeat steps 4, 5, 6, 7 and 8.
  10. After confirmation, the display will show the set stages, with an edit and delete icon.
  11. If all stages are set according to your wishes, then return to the oven setting screen. Touch the 'plus key' to close the plus menu.  
*The display will show the normal oven setting screen with the settings of the first stage.*
  12. Start the process by touching the confirm key.

*Stage 1 icon is white.*

- If the stop key is touched, the stage cooking menu will be closed and the oven will return to the normal mode.

## *Kitchen timer*

---

The kitchen timer can be used independent of the oven function.

1. Touch the timer key.
2. Change the time by rotating the selection knob.
  - The longest possible timer setting is 23:59.
3. Confirm the setting by touching the confirm key.

*The kitchen timer is started.*

- To cancel the timer, set the time back to 0:00 and confirm by touching the confirm key
  - To close the kitchen timer menu, touch the timer key or the stop key.
4. When the kitchen timer goes off, a pop-up will appear with the text 'Kitchen timer expires' and an audio signal will sound. Touch the stop key to switch off the signal and close the pop-up menu.
    - The sound will stop automatically after approximately 2 minutes.

## *Child lock*

---

The oven's control panel can be locked by means of the Child Safety Lock, to protect the oven against unintended use.

1. Touch and hold the left navigation key and the right navigation key simultaneously.

*The appliance will go into key lock mode. A pop-up will be shown.*

*After 3 seconds the 'Key lock is active' pop-up will close.*

*The current state of the appliance will be visible.*

- If the key lock has been activated during a cooking process, the process will keep running.
  - If a key is touched during key lock, the 'Key lock is active' pop-up will show again.
  - The stop key is still active during lock mode. If the appliance is switched off, the process will stop. To turn the appliance on again, deactivate the key lock mode.
2. To deactivate the key lock mode, touch and hold the left navigation key and the right navigation key simultaneously again.

### Cleaning the appliance

Clean the appliance regularly to prevent fat and food particles from accumulating, especially on the surfaces of the interior and the exterior, the door and the seal.

- Activate the child lock (to prevent that the appliance is switched on accidentally).
- Clean the exterior surfaces with a soft cloth and warm soapy water.
- Next wipe with a clean, damp cloth and dry the surfaces.
- Remove splashes and stains on the interior surfaces with a cloth and soapy water.
- Next wipe with a clean, damp cloth and dry the surfaces.



- **Attention: Make sure that no water enters the vents.**
- **Never use abrasive cleaning materials or chemical solvents.**
- **Always make sure that the seal of the door is clean. This prevents accumulation of dirt and allows you to close the door properly.**

### Steam clean

With the steam clean function and a damp cloth, you can easily remove grease and dirt from the oven walls.

#### **Using steam clean**

Only use steam clean when the oven has cooled down fully. It is more difficult to remove dirt and grease if the oven is hot.



The steam clean program takes 30 minutes.

Food particles on the enamel walls will be sufficiently soaked after 30 minutes so that they can be removed with a damp cloth.

1. Remove all accessories from the oven.
2. Select the 'Steam clean' function
3. Touch the confirm key to start steam clean.

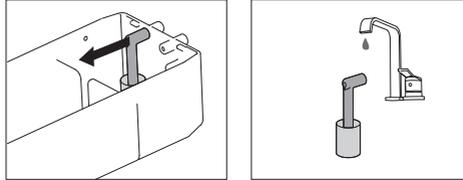


**Please note:** Do not open the door during the cleaning process.

### Cleaning the water tank filter

If the water tank filter is dirty, you can clean it under the tap.

1. Remove the suction tube with the filter.
2. Clean it out under the tap and put it back into position. Ensure that the filter touches the base of the water tank



### Descaling

During the steam process, there can be an accumulation of mineral deposit in the steam system. This needs to be removed from time to time. You need to carry out this task when the 'Appliance needs descaling' notification is shown.

If the appliance is not descaled after three notifications, the steam functions will no longer be available. Use this function only when the oven has cooled down fully. The descaling process comprises descaling and rinsing. Notifications with information and requests for actions will be shown on the display during the process.

1. Pour water mixed with descaling agent into the water reservoir.  
Consult the descaling agent instructions for the correct mixing ratio.
2. Open the 'Settings' menu
3. Select 'Cooking settings'
4. Select 'Steamer settings'
5. Select 'Descaling' to select the function.
6. Touch the confirm key to start descaling.

#### **Note**

We advise using NOKALK for descaling. NOKALK is an extremely efficient descaling agent based purely on natural, entirely biodegradable ingredients. The solution is non-corrosive, not aggressive and is environmentally-friendly.

As well as an effective descaling action, it also has a cleansing and anti-bacterial effect, ensuring that the appliance's internal components are preserved in an optimum hygienic state. Therefore food's good taste is preserved and the appliance's service life is extended.

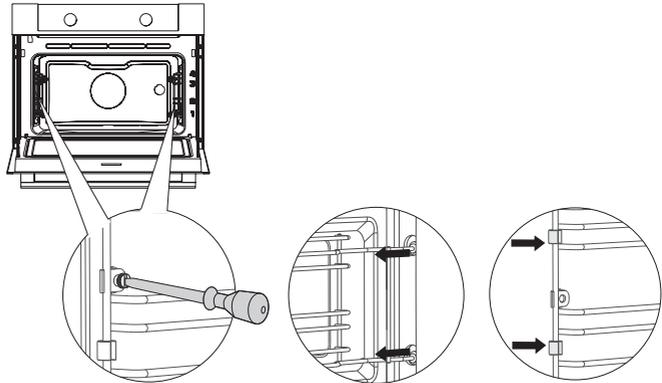
- Water is used for the steaming process. Water contains calcium and magnesium. Heat causes the water to condense, leaving a mineral deposit (not harmful to humans).
- If the descaling cycle is interrupted prior to the end of the cycle, the program must be restarted from the beginning.

## Removing and cleaning the guide rails



Use conventional cleaning products to clean the guide rails.

- Remove the screw using a screwdriver.
- Remove the guide rails from the holes in the back wall.  
*Save the guide rail spacers carefully. Return the spacers after cleaning. This prevents sparks being created during use.*



### Replacing the oven light bulb



**The lamp in this household appliance is only suitable for illumination of this appliance. The lamp is not suitable for household room illumination.**

The oven is fitted with a halogen lamp.

This product contains a light source of energy efficiency class (G).

The lamp is a consumer item and therefore not covered by warranty. Replace the defective lamp with a lamp of the same type.



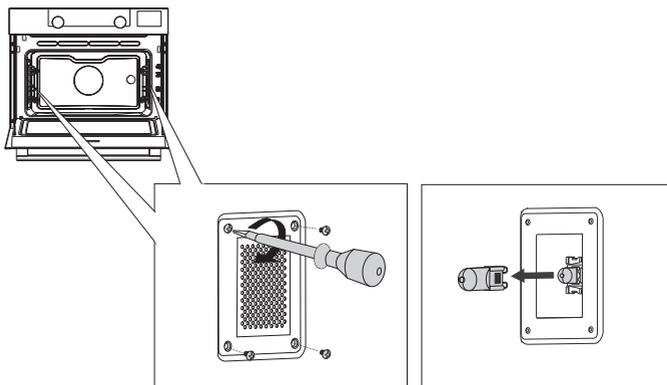
**Disconnect the appliance from the power supply by removing the plug from the socket or by switching off the circuit breaker in the fuse box.**



**Please note: the light bulb can be very hot! Use protection to remove the bulb.**

1. Unscrew the cover panel's four screws. Remove the cover panel and glass.
2. Remove the faulty halogen lamp and replace it with a new one.
3. Replace the cover panel and the glass.

**Attention:** Do not allow the sealing ring to be detached from the cover panel.



## General

---

If you have problems with your oven, then consult the error overview below. Should the problems persist, then please contact the Customer Services Department.

### **The food stays raw.**

- Check whether the timer has been set and you have touched the 'confirm key'.
- Is the door closed properly?
- Check whether a fuse has blown or a circuit breaker has been activated.

### **The food is overcooked or undercooked.**

- Check whether the correct cooking time has been set.
- Check whether the correct power has been set.

### **The keys do not respond; the display is locked.**

- Disconnect the appliance from the power supply for a few minutes (remove the mains plug from the socket or switch the circuit breaker to off); then reconnect the appliance and switch it on.

### **Sparking in the oven space.**

- Ensure that all cover panels from the lamps are secure and that all spacers are placed on the guide rails.

### **Power failure can cause the display to reset.**

- Disconnect the appliance from the power supply for a few minutes (remove the mains plug from the socket or switch the circuit breaker to off); then reconnect the appliance and switch it on.
- Set the time again.

### **There is condensation in the oven.**

- This is normal. Wipe the oven clean after use.

### **The fan keeps working after the oven is switched off.**

- This is normal. The fan will keep working for a while after the oven is switched off.

### **Air flow can be felt at the door and the exterior of the appliance.**

- This is normal.

**Light reflects on the door and the exterior of the appliance.**

- This is normal.

**Steam escapes via the door or the vents.**

- This is normal.

**Clicking sounds can be heard when the oven is working, particularly in the defrost setting.**

- This is normal.

**The circuit breaker switches off regularly.**

- Consult a service technician.

**The display gives an error code, ERROR XX ...**

*(XX indicates the number of the error).*

- There is a fault in the electronic module. Disconnect the appliance from the power supply for a few minutes. Then reconnect it and set the current time.
- Consult a service technician if the error persists.

**Storing and repairing the oven**

Repairs should only be performed by a qualified service technician.

If maintenance is required, then remove the mains plug from the socket and contact the Asko customer service.

**Have the following information to hand when you call:**

- The model number and serial number (stated on the inside of the oven door)
- Warranty details
- A clear description of the problem



**Choose a clean, dry place if you have to store the oven temporarily, as dust and moisture can damage the appliance.**

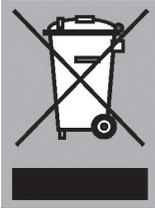
### Disposal of the appliance and packaging

This product is made from sustainable materials. However, the appliance must be disposed of responsibly at the end of its useful life. The government can provide you with information about this.

The packaging of the appliance can be recycled. The following materials have been used:

- cardboard
- polyethylene wrap (PE)
- CFC-free polystyrene (hard PS foam)

Dispose of these materials responsibly in accordance with legal provisions.



The product has a pictogram of a rubbish bin with a cross through it. This indicates that household appliances must be disposed of separately. This means that the appliance may not be processed via the regular waste flow at the end of its useful life. You should take it to a special municipal waste depot or a sales outlet that offers to do this for you.

Collecting household equipment separately prevents harm to the environment and public health. The materials used in manufacturing this appliance can be recycled, which provides considerable savings in energy and raw materials.

### **Declaration of conformity**



We hereby declare that our products comply with the relevant European directives, standards and regulations as well as all requirements referred to in the standards.









The appliance identification card is located on the inside of the appliance.

When contacting the service department,  
have the complete type number to hand.

You will find the addresses and phone numbers of the service organisation  
on the guarantee card.

The instructions for use can also be found on our website:  
[www.asko.com](http://www.asko.com)

 **ASKO**



794094

en (07-22)