

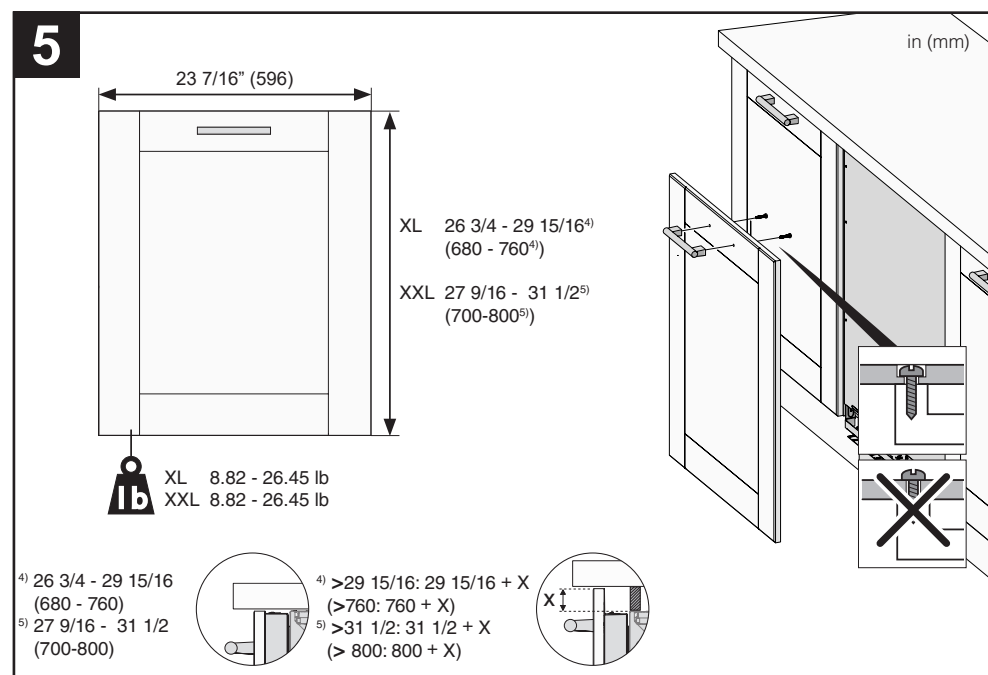
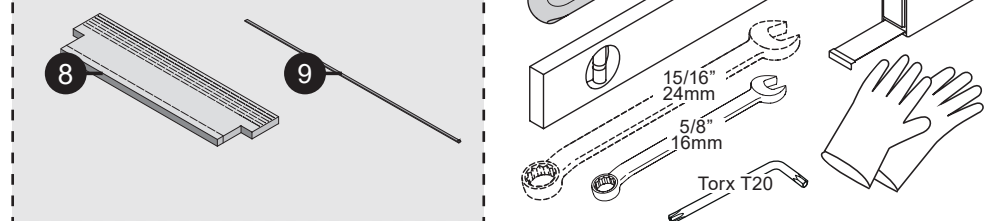
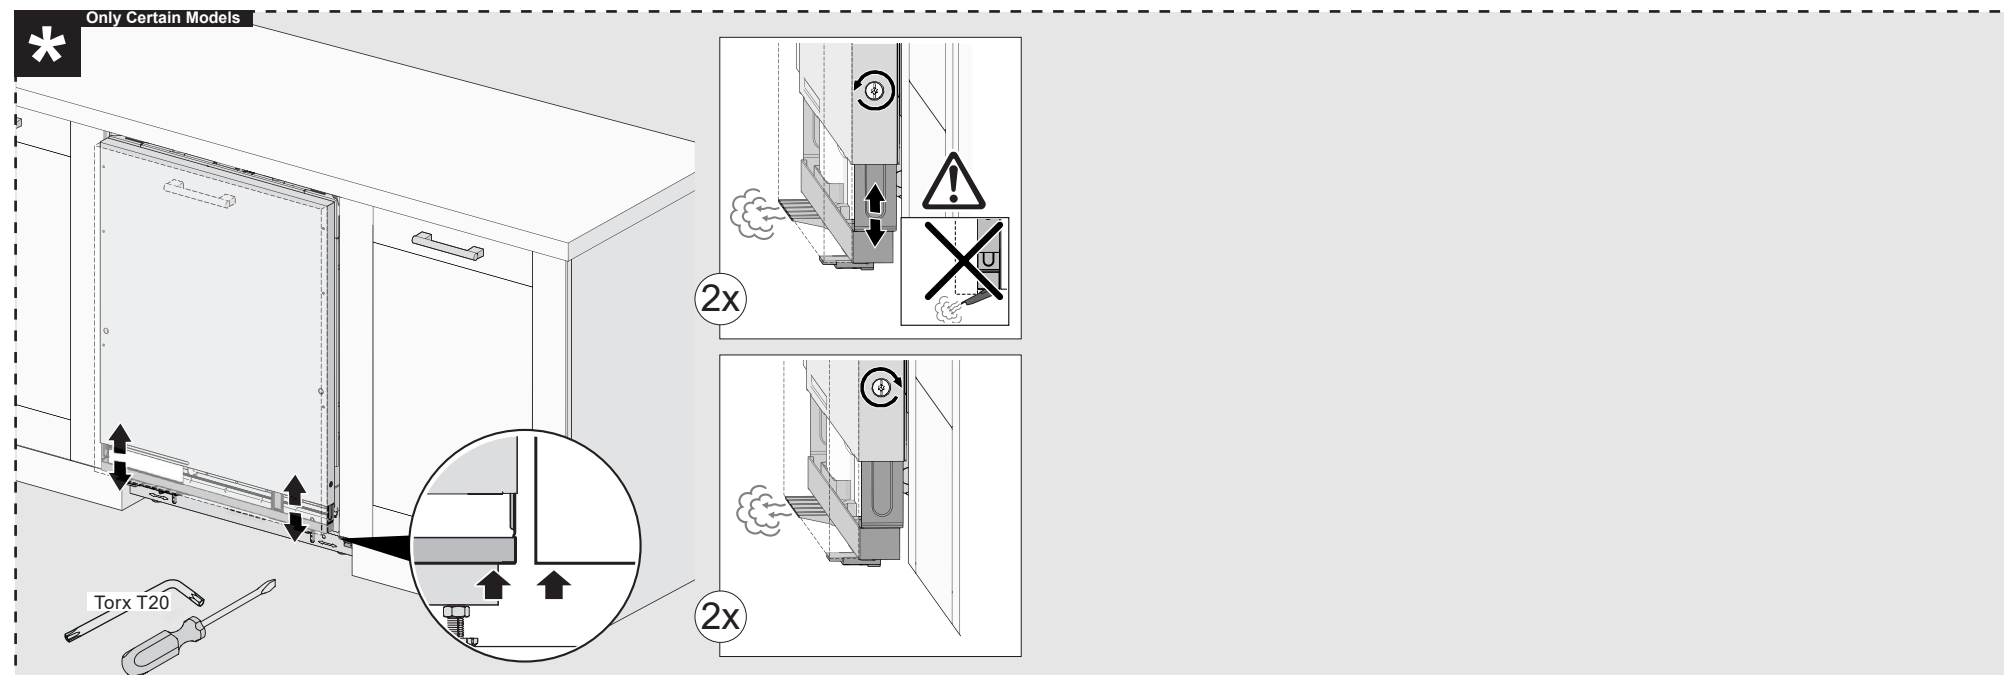


***** EN Only certain models.
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

ES Sólo se aplica a determinados modelos.
FR Uniquement pour certains modèles.

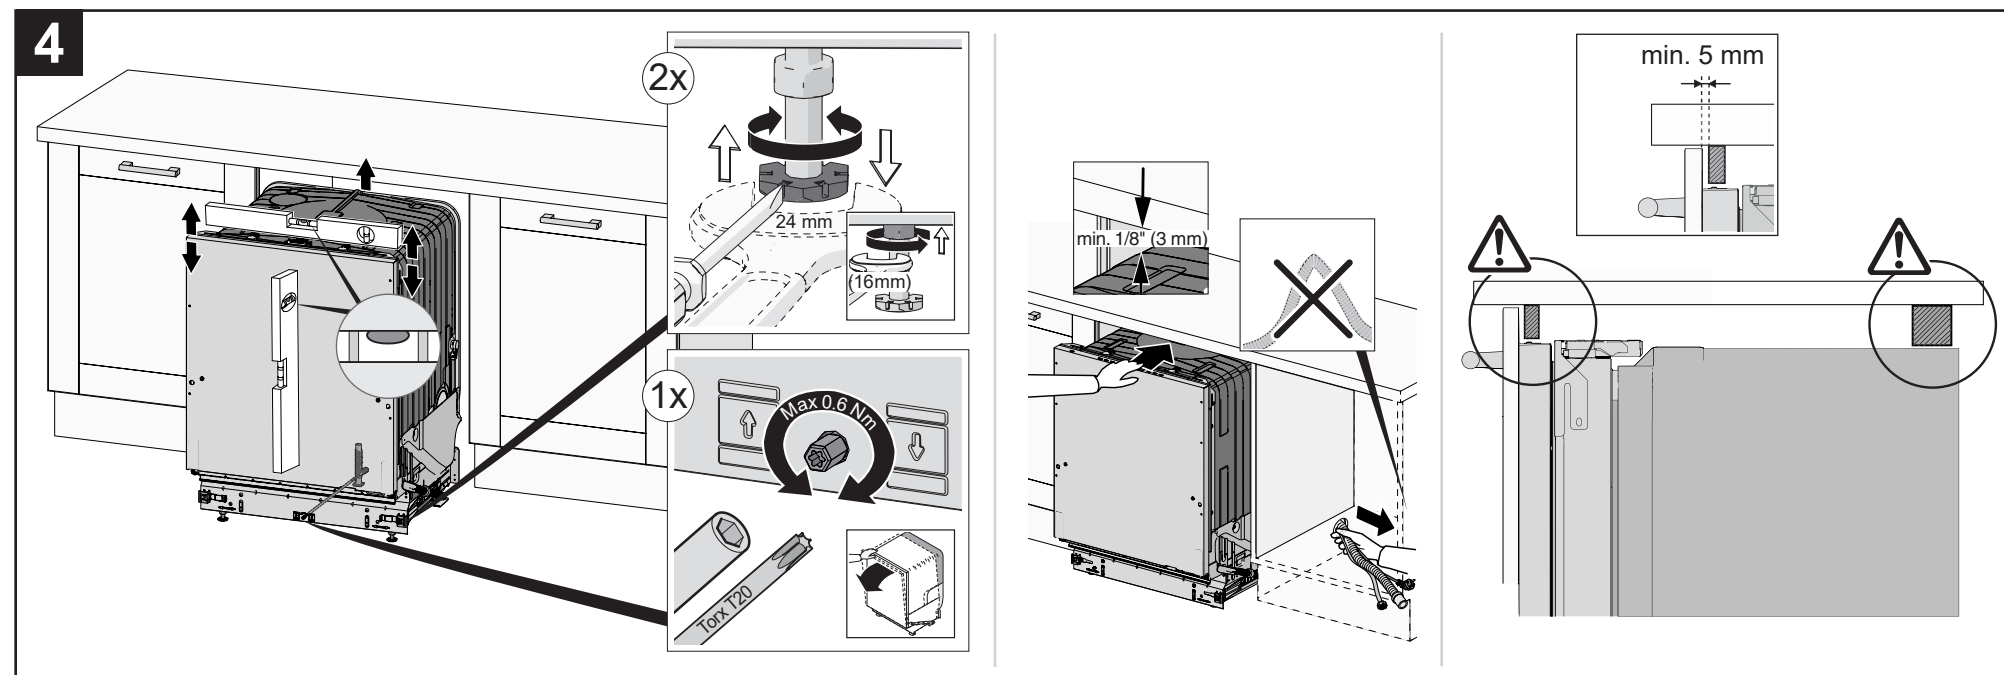

⁴⁾ 26 3/4 - 29 15/16 (680 - 760)
⁵⁾ 27 9/16 - 31 1/2 (700-800)

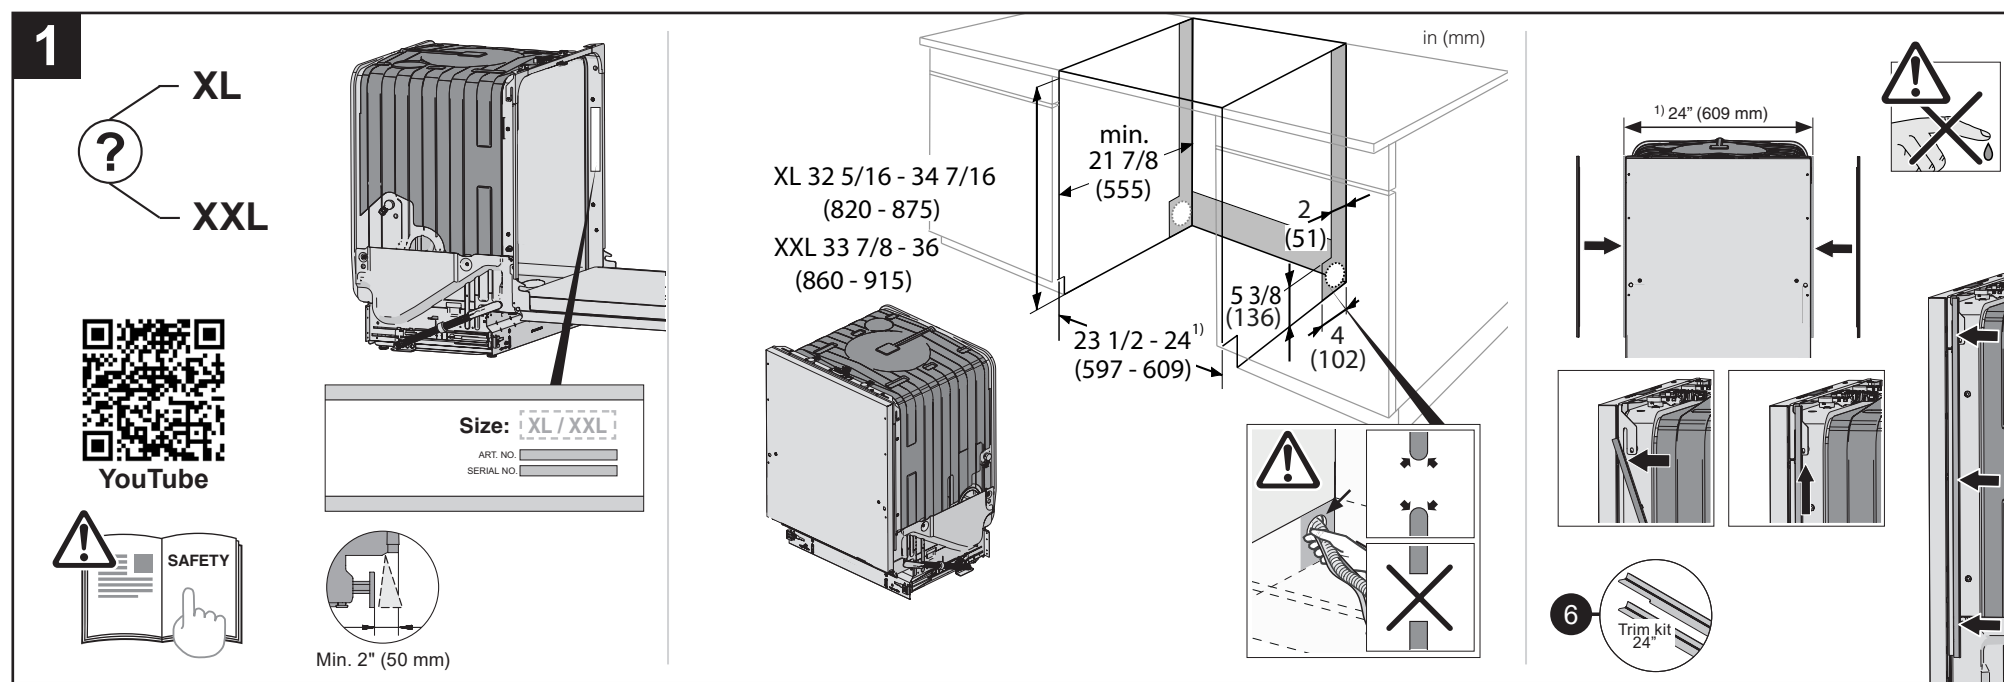

875557-07

We reserve the right to make changes.

