 
 
 
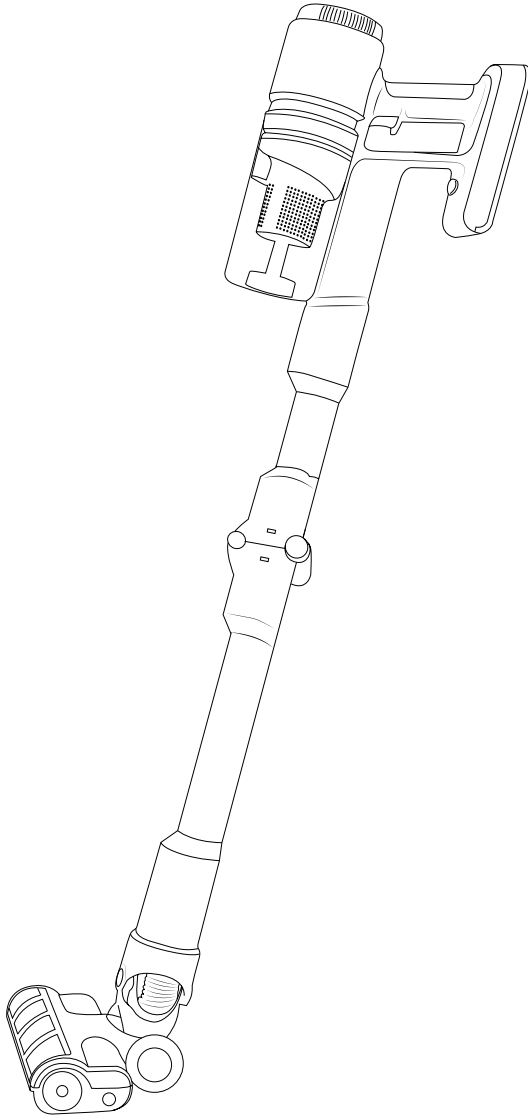 



# Hisense

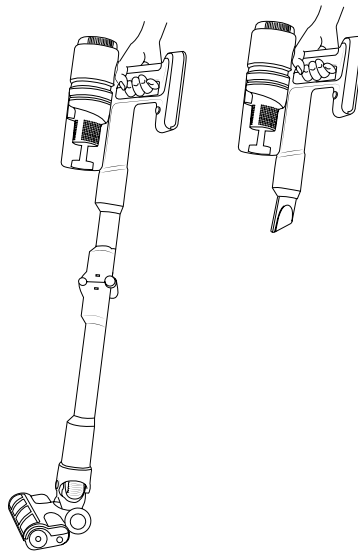

 
HI-MOVE IV  
HVC6264W



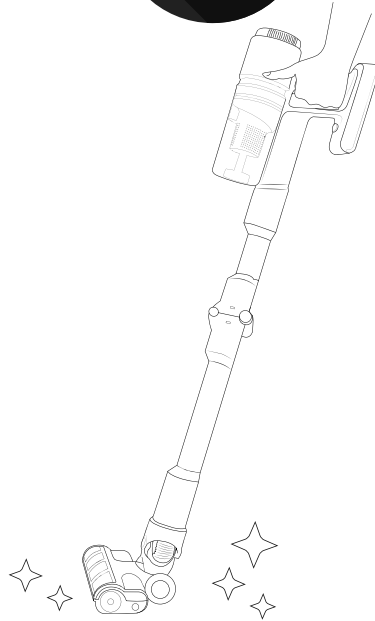


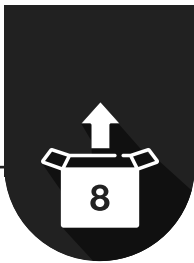

 1.

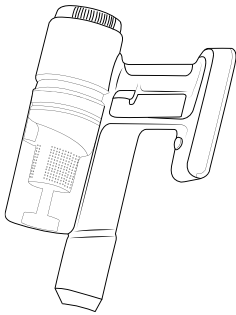

 2.

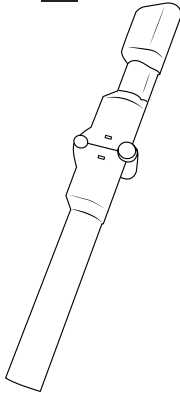

3.



 
4.




5.




6.

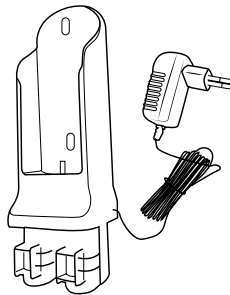


  7.




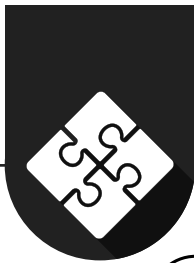

 1.

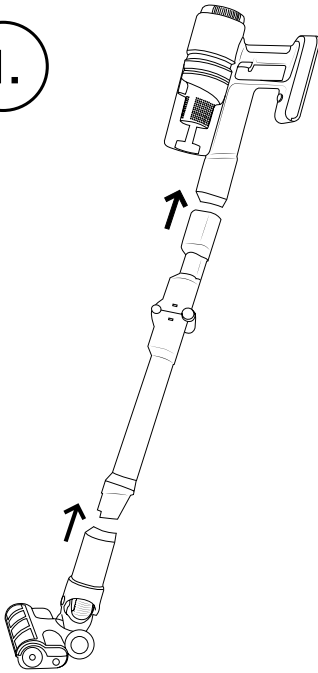

 2.

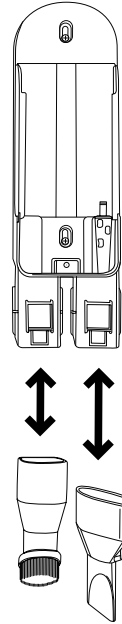

3.

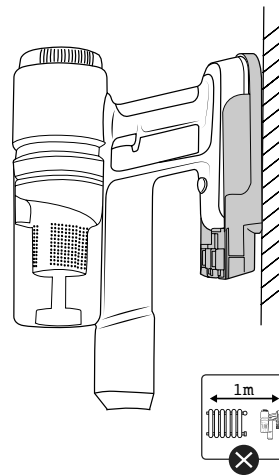 
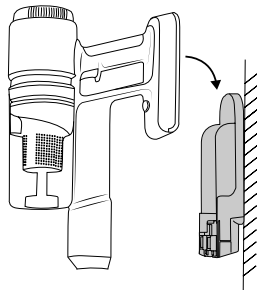 
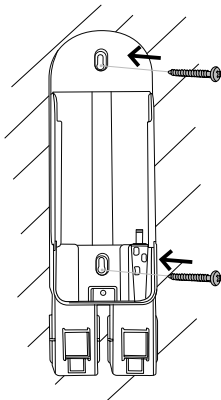 




Diagram illustrating the correct and incorrect use of a cordless stick vacuum cleaner. The top section shows two upright stick vacuums, and the bottom section shows a motorized floor head.

**Top Left Icons (Incorrect uses):**

- Carpet (checkmark)
- Hardwood floor (checkmark)
- Hammer and nail (cross)
- Water drop (cross)

 
 
 
 
 
 
 
 
 
 
 
**Top Right Icons (Correct uses):**

- Grass (checkmark)
- Spiderweb (checkmark)
- Carpet edge (checkmark)
- Plant and book (checkmark)
- Hammer and nail (cross)
- Water drop (cross)

**Bottom Left Icons (Correct uses):**


- Staircase (checkmark)
- Sofa (checkmark)
- Hammer and nail (cross)

**Bottom Right:** Motorized floor head.

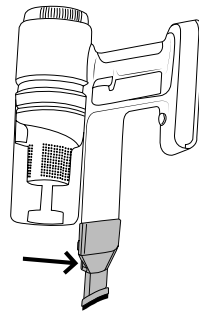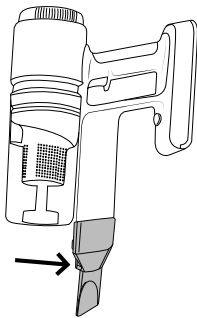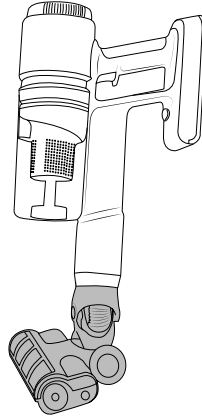
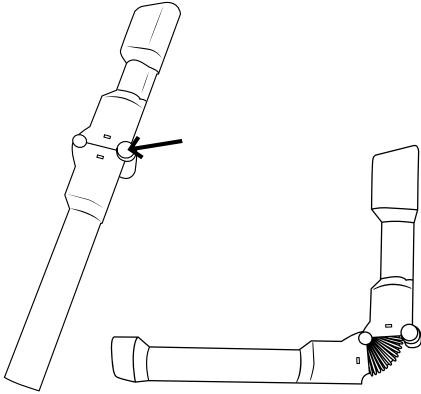
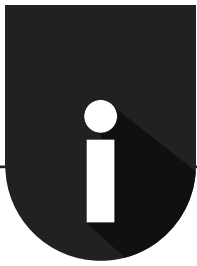







a



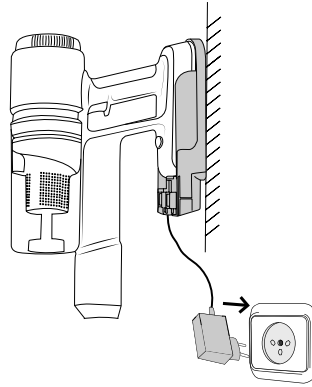 


b

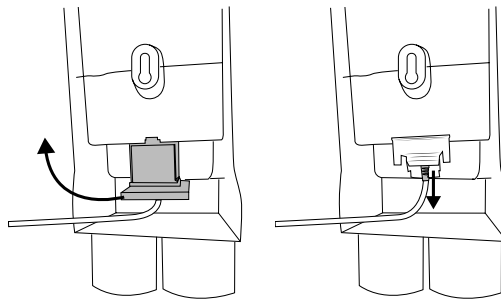  
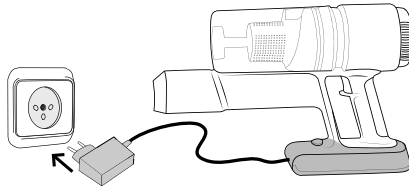 


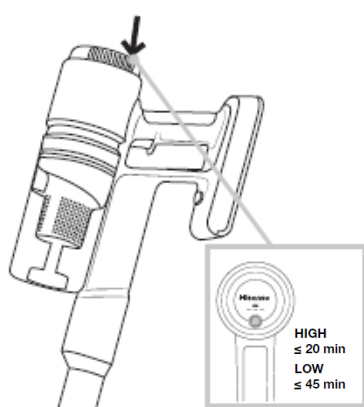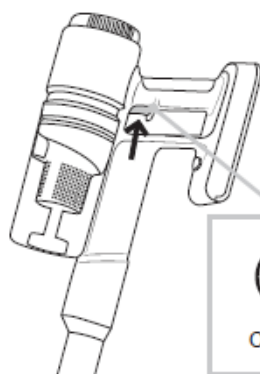  
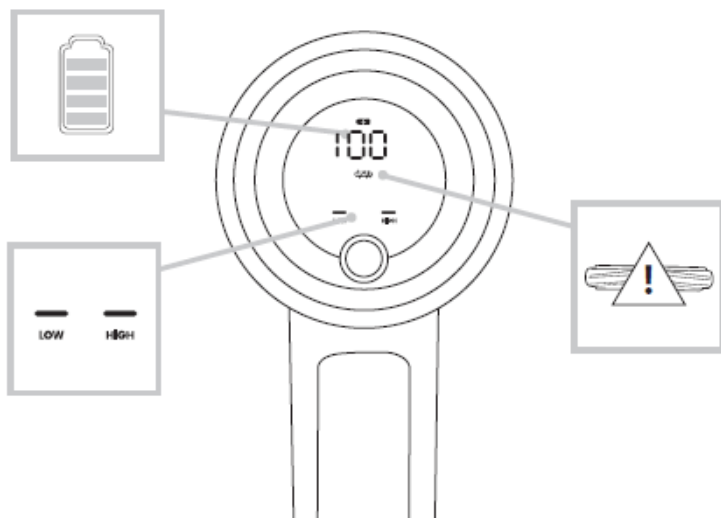 




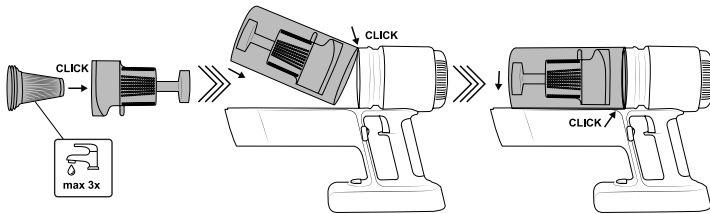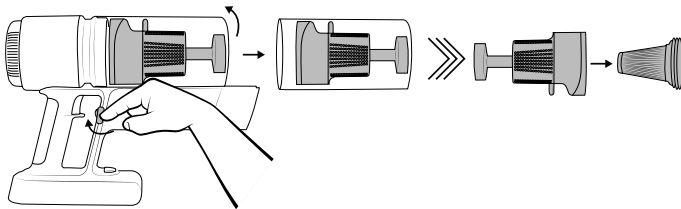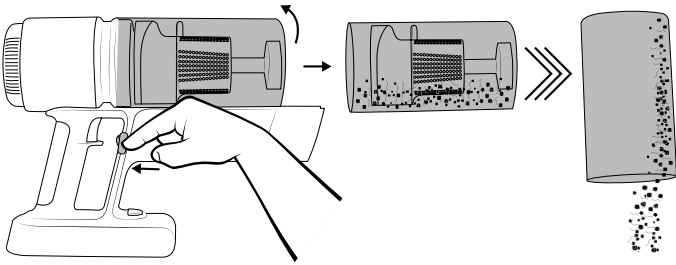   

## Filter quick clean

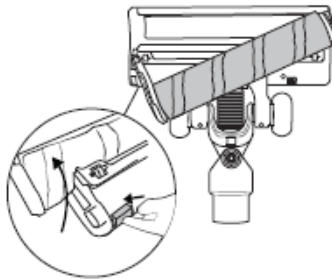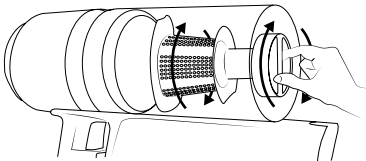  

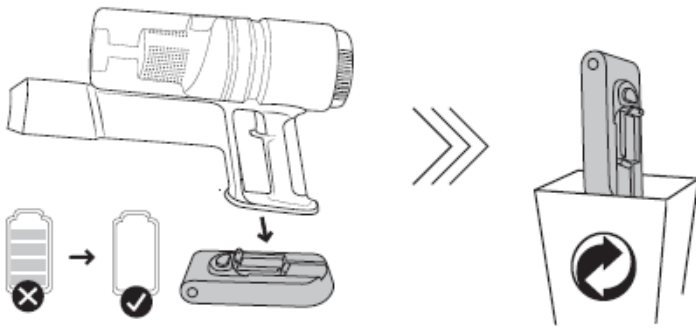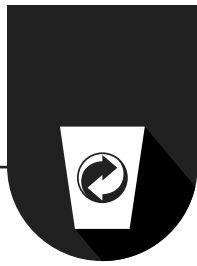  



**Hisense**