 
 
 
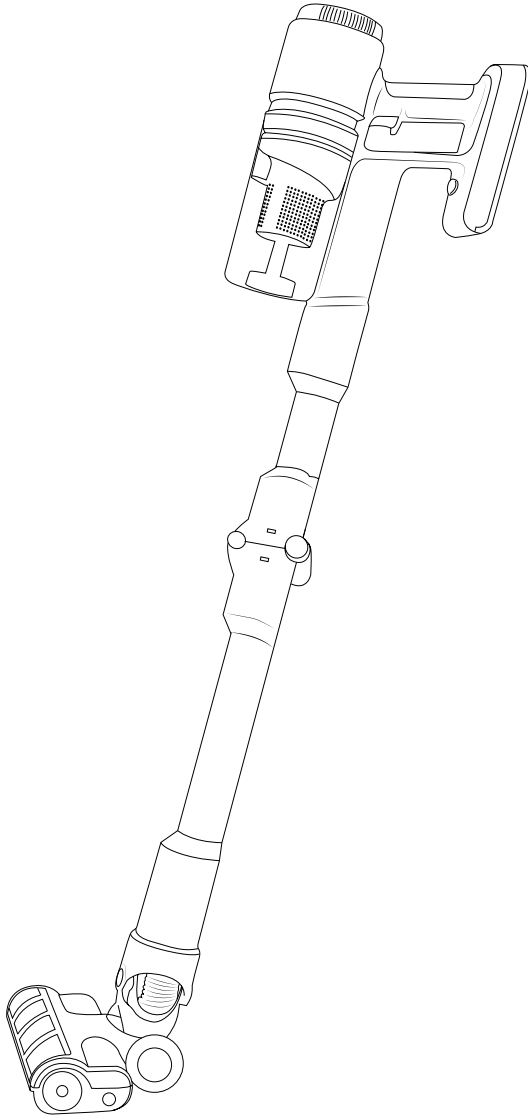 
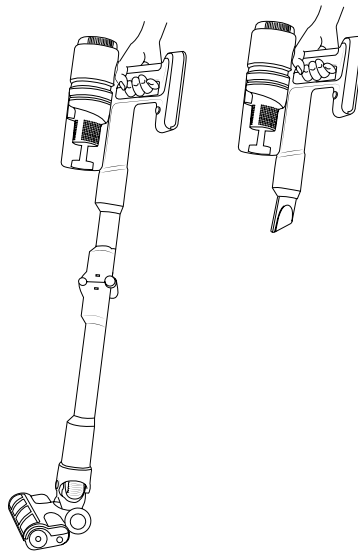 



Hisense



 
HI-MOVE IV
VCC4BK
CARE HERO

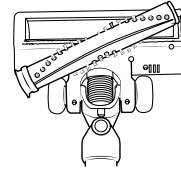

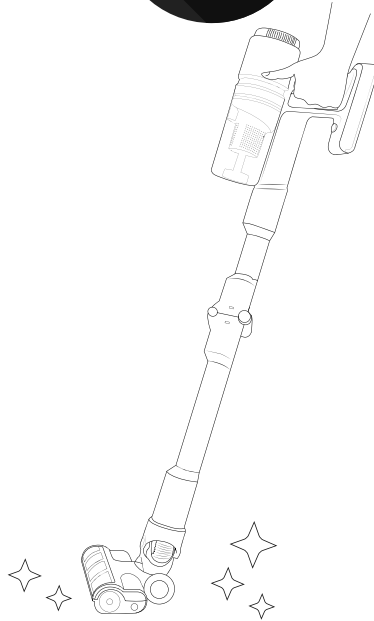


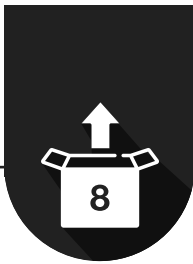

 
1.

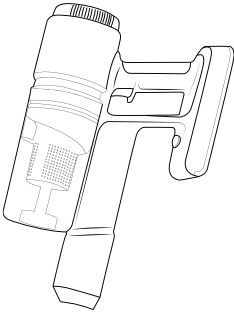

 
2.

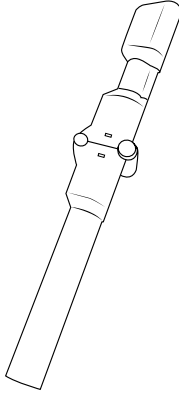

 3.

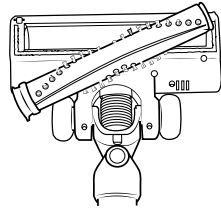

 
4.




5.




 6.

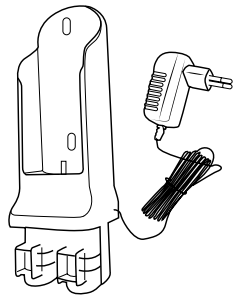


  7.




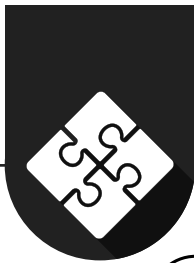

 1.

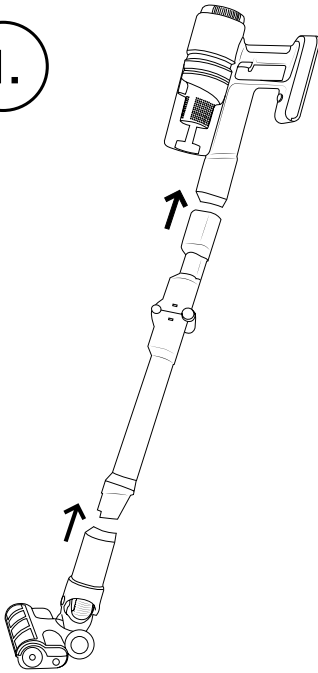

 2.

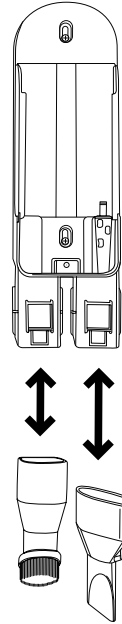

3.

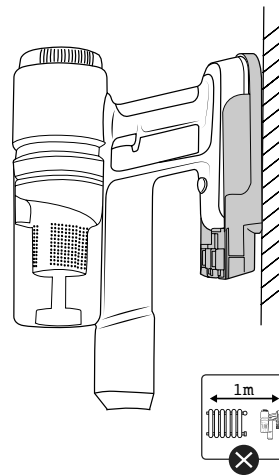 
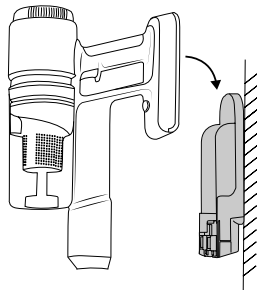 
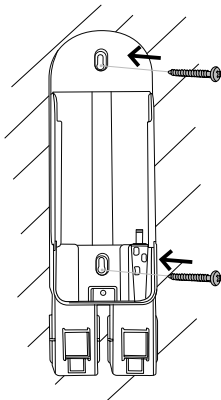 




Diagram illustrating the correct and incorrect use of a cordless stick vacuum cleaner. The top section shows two upright configurations with their respective usage icons. The bottom section shows a motorized floor head configuration with its usage icons.

Upright Configuration 1 (Left):

 
 
 
 
 
- Carpet (checkmark)
- Hardwood floor (checkmark)
- Tile floor (cross)
- Water (cross)

Upright Configuration 2 (Right):

- Grass (checkmark)
- Spider webs (checkmark)
- Stairs (checkmark)
- Flowers (checkmark)
- Tile floor (cross)
- Water (cross)


Motorized Floor Head Configuration (Bottom):

- Stairs (checkmark)
- Sofa (checkmark)
- Tile floor (cross)

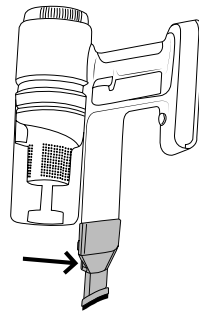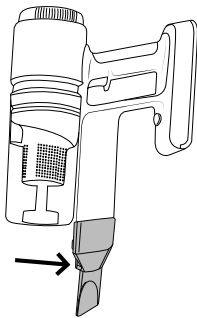
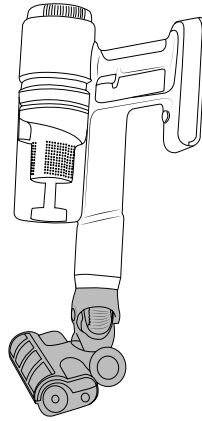
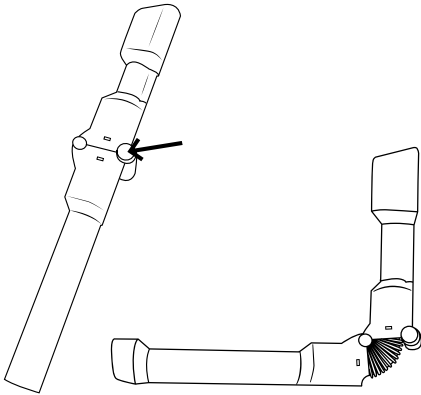






a


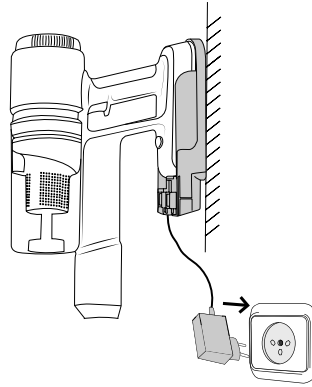 





b

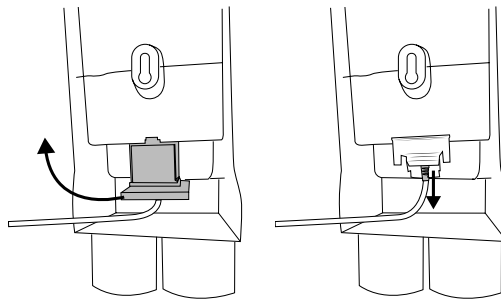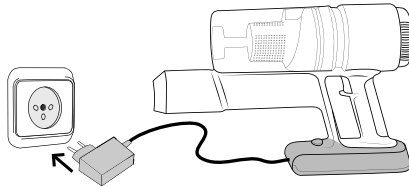   

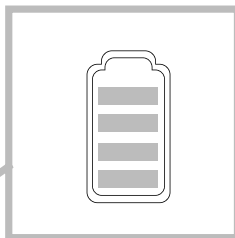 
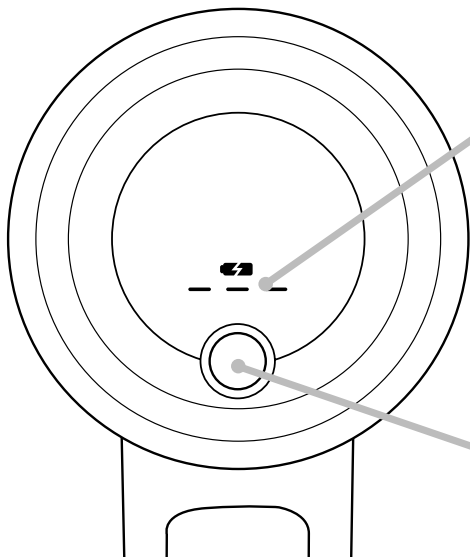 



HIGH
≤ 20 min
LOW
≤ 45 min

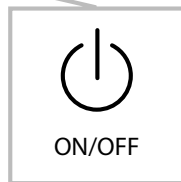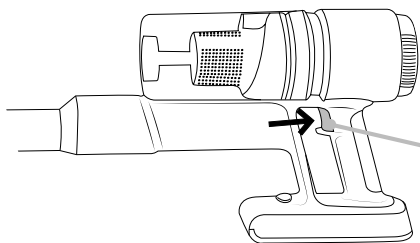  

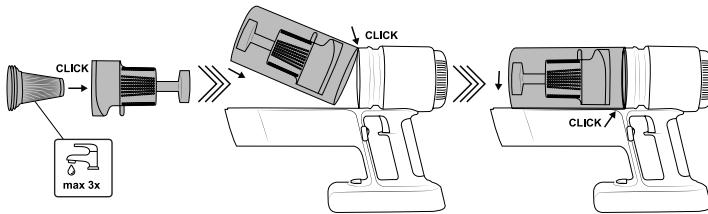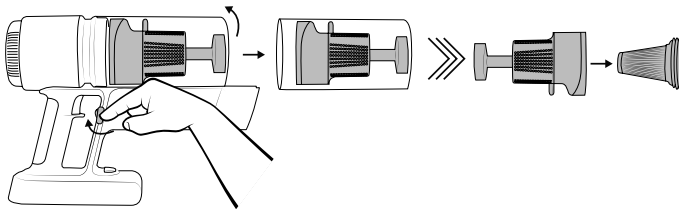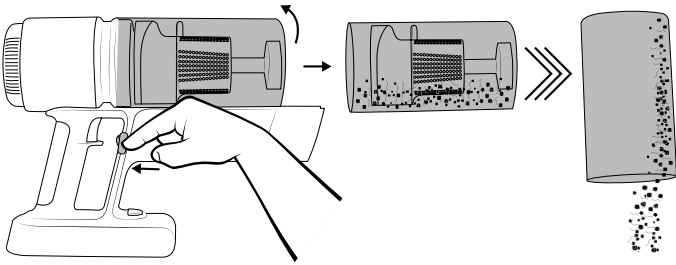   


Filter quick clean

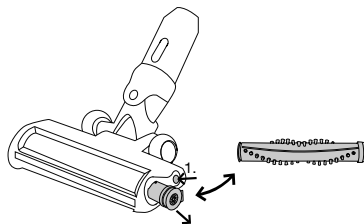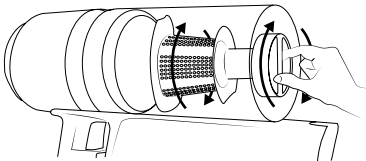  


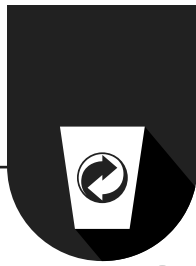 

 
1.

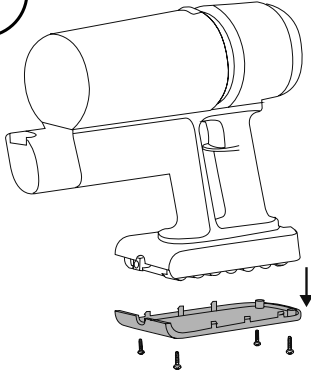

 
2.

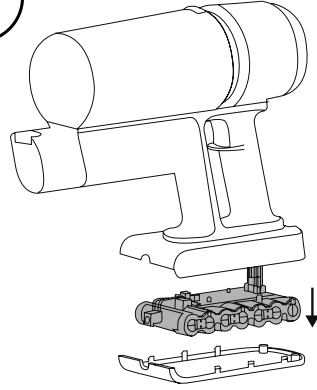

 
3.

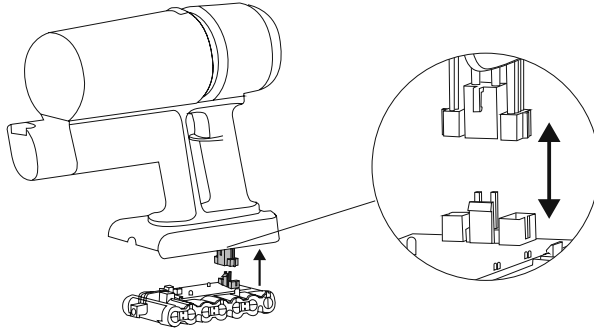

 4.

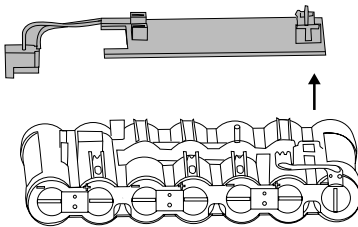

 5.

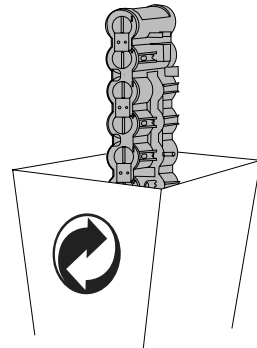

Hisense